


Platfoam™ Installation Guidelines

For superior acoustics, **Auralex®** suggests floating a drum riser with **Platfoam™ Isolation Planks**. Each plank is designed to be used like a 2" x 4" "sleeper" sometimes recommended by acoustical consultants in professional studios. To fully benefit from your new **Platfoam™**, please use the following guidelines:




A.

A. Choose a decking material (*MDF board, particle board, plywood, etc. - 1/2" to 3/4" suggested*). One box of **Platfoam** is designed to "float" an 8'x8' drum riser.

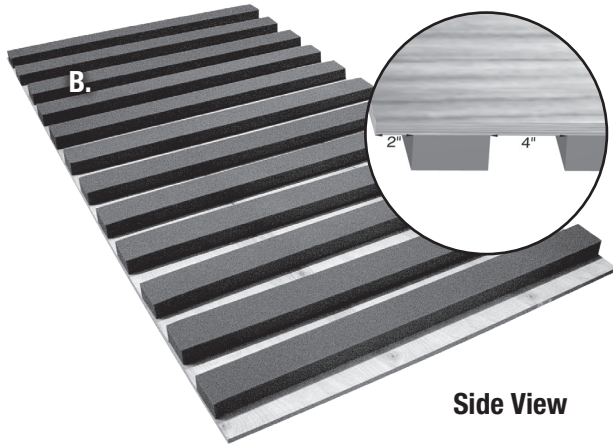


B.


Bottom View

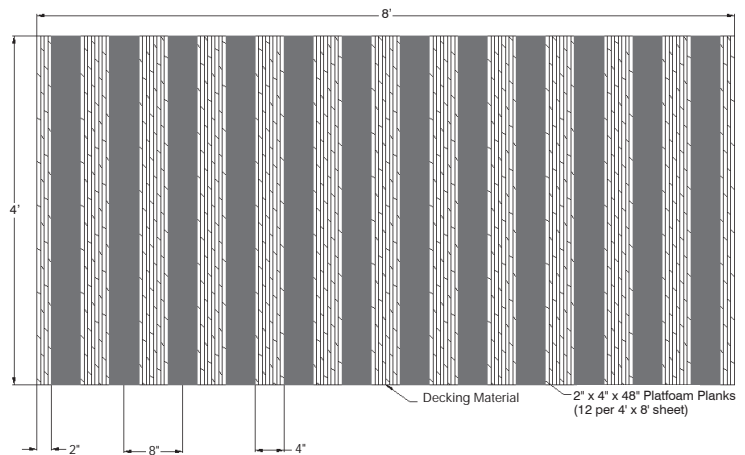

Side View

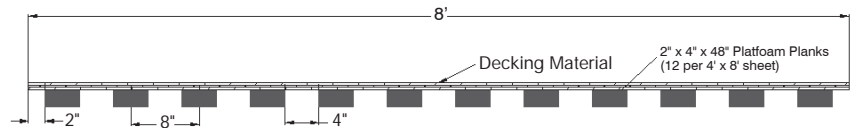


B. Space the **Platfoam** planks every 4" as shown in the picture and the diagram above. If you are using 4'x8' decking, you should inset the two outer planks two inches for equal spacing.

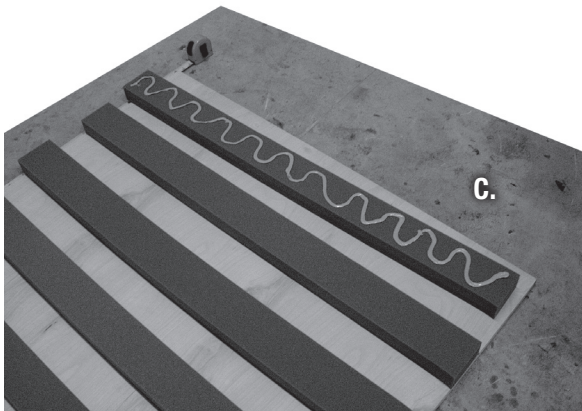

C.

C. Affix the **Platfoam™** to your decking with our **Tubetak™** adhesive in an "S"- shaped pattern (*see picture above*). Suggested amount is 3 tubes per box of **Platfoam**.

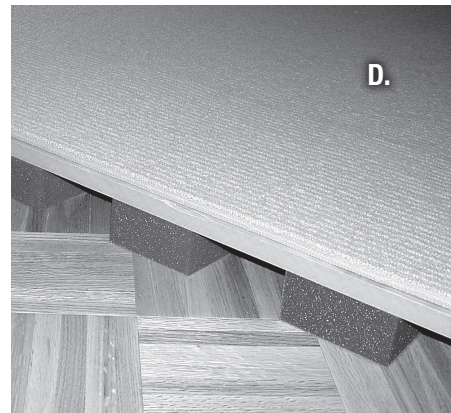

D.

D. Place a carpet (*or other flooring*) on the decking and your drum kit is now well isolated from your floor.