HuddleCamHD HCM-2

Setup Guide

Large Base Camera Wall Mount



What's Included

QTY 1—Large Wall Mount BK/WH

QTY 4—10-12 x 1" Conical Plastic Anchor 1/4" Drill Size (Fig 1, #1)

QTY 4—#10-16x 1 1/4" PPH Sheet Metal Screw with Flat Washer (Fig 1, #2)

QTY 4—#6-32x 1" PPH Machine Screw (Fig 1, #3)

QTY 4—1/4"-20x 3/8" PPH and QTY 2—1/4" Machine Screw Flat Washer (Fig 1, #4)

Mounting Instructions

Step 1

For masonry or drywall wall:

Position Large wall mount (Fig 2) on wall and mark wall for anchor placement (Fig 2, #1). Predrill 1/4" holes, minimum 1" deep.

For double gang electrical box:

Position over box with slots overlaying device mounting holes (Fig 2, #1) on box.


Step 2

For masonry or drywall wall:

Place included anchors (Fig 1, #1) in wall and mount to anchors using included #10 sheet metal screws. (Fig 1, #2)

For double gang electrical box:

Mount to box using #6 machine screws and washers. (Fig 1, #3)

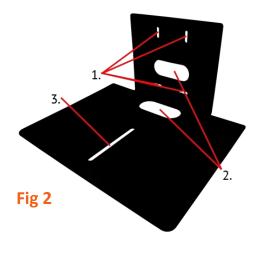

Mounting Instructions Continued...

Step 3

Drill hole in wall through rear exit opening for cable access, or use base exit opening. (Fig 2, #2)



Step 4

Mount Camera to mount (Fig 2, #3) with included 1/4-20 machine screw. (Fig 1, #4)

Utilize (0,1,2) 1/4" machine screw flat washers as required. (Fig 1, #4) **Note:** 1/4" machine screw flat washers are to be used depending upon depth of thread insert in base of camera, in order to achieve a snug fit. Pass all cables through opening in mount (Fig 2, #2) and connect.

Mount Compatibility

HuddleCamHD

HC12X-HUDDLEVIEW

HC20X-SIMPLETRACK2

Generation 1 USB 3.0 HuddleCamHD cameras

Other Cameras...

This mount has been

designed for use with most

large based cameras utilizing

a 1/4-20" mounting hole as

can be found on SONY,

Panasonic, Cisco, Polycom

and Vaddio cameras.

For more information on HuddleCamHD mounts and other products please visit:

https://huddlecamhd.com

