
Making Hardware Connections



Fast First-Time Setup

- Connect your line-level audio inputs and outputs to the AUDIO IN and AUDIO OUT Euroblock connectors.
- 2 Connect your remote controls to the CONTROL Euroblock connectors.
- 3 Connect the external power supply to the 308 unit, then plug the power supply into an AC outlet.
- **4** Apply line-level audio signal to the inputs.
- 5 Adjust the remote controls to maximum level. Then set your system power amp levels to the desired maximum level. As you adjust the remote controls, the 308 passes audio signals. At full volume setting, the 308 is at unity gain.
- 6 Turn down the remote controls to the lowest listening level you expect the system to be operated at.
- 7 The EQ DEPTH trimpots are set for maximum loudness contour from the factory. At the lowest VCA setting, the EQ DEPTH is –15 dB @ 1k. Adjust the trimpots counterclockwise if you want less EQ response. To turn off this feature, turn the trimpots completely counterclockwise.
- ▶ Fast Setup is complete.

Basic Remote Setup Showing One Channel

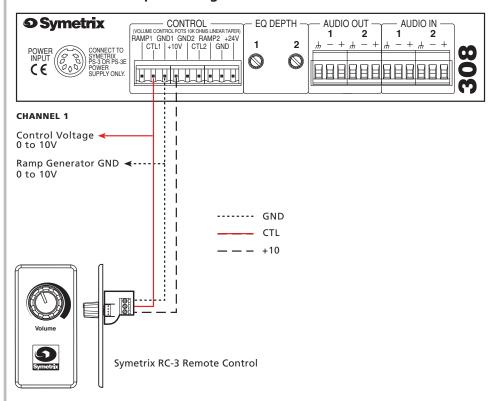

SYMETRIX RC-3 REMOTE CONTROL PIN CONNECTION TO THE 308 PINS

RC-3 Pins	308 Channel 1 Pins	308 Channel 2 Pins
+10V	+10V	+10V
CTL	CTL1	CTL2
GND	GND1	GND2

RAMP/CONTROL VOLTAGE PIN CONNECTION TO THE 308 PINS

Device Pins	308 Channel 1 Pins	308 Channel 2 Pins
Ramp generator GND	GND1	GND2
Control voltage	CTL1	CTL2