

Contents

1 Introduction and System Requirements

Introduction Mac Compatibility System Requirements

2 xMac Studio Description

Front Panel Back Panel – xMac Studio / Echo III Back Panel – xMac Studio / Echo I Back Panel – xMac Studio / Echo II DV Echo III Module Interior Echo II DV Module Interior Echo I Module Interior Additional Package Contents

3	Computer Installation and Module Removal Steps	9
4	Echo III Module PCIe Card Installation Steps	11
5	Echo II DV Module PCIe Card Installation Steps	13
6	Echo I Module PCIe Card Installation Steps	14
7	Echo Module Installation Steps	15
8	Accessory Installation Steps (Optional)	16
9	Final Assembly and Enclosure Installation Steps	18
10	Complete Setup and Configuration	20
11	Tips, General Information, and Known Issues Tips, General Information Known Issues	21
12	Precautions, FCC Compliance, and Support Information Safety Precautions FCC Compliance	22

Contacting Customer Service

1

2

Section 1 – Introduction and System Requirements



Introduction

Congratulations on your purchase! xMac Studio is a rackmount enclosure for Mac Studio[®] computers and Sonnet Echo Thunderbolt expansion modules for PCIe cards. Through a module's PCIe slot(s), you may connect one, two, or three non-GPU adapter cards to your Mac Studio to expand its capabilities and add connectivity beyond what's offered through its native ports.


Mac[®] Compatibility

• Mac Studio computers with PCIe cards that have M series processor-compatible drivers

• macOS^{*} 12.3+

System Requirements

While Echo modules require no drivers beyond those preinstalled in macOS, many expansion cards you install do; Thunderbolt-compatible drivers to enable them to work properly through the Thunderbolt interface are required. More information on which cards are compatible with Echo I, Echo II DV, and Echo III Modules is available at: https://sonnettech.com/support/

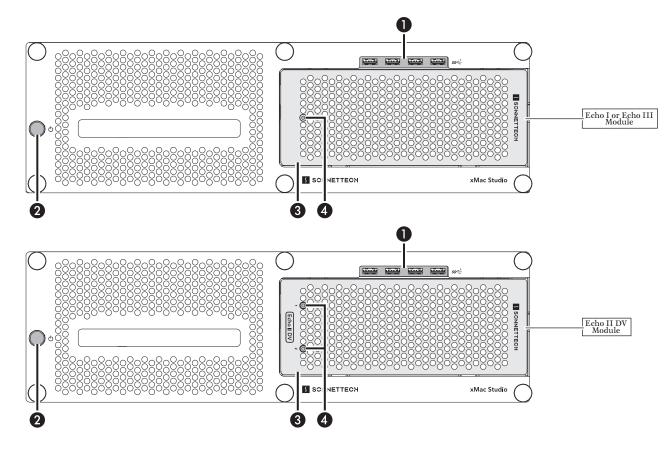

Front Panel

1 - USB Hub

This connects via a passthrough cable to one of the computer's back-panel USB ports, supporting connection of keyboards, mice, thumb drives, and other USB devices. Note that the total number of USB devices you can connect to the hub may be limited by the width of the devices' USB connectors.

2 - Power Switch

This button activates the Mac Studio computer's power switch; an installed Echo module's power supply turns on and off along with the computer.


3 - Echo Module

Depending on the xMac Studio model you purchased, there is either an 3-slot (Echo III Module), 2-slot (Echo II DV Module), or 1-slot (Echo I Module) Thunderbolt to PCIe card expansion system, or an empty space, for installing one of the modules. Note that *you may remove and install the Echo module without removing the rackmount enclosure's front panel*; instructions follow.


4 - Power Indicator LED(s)

In systems including an Echo module, this lights when the Echo module is powered, the Thunderbolt cable between the module and your computer is plugged in securely, and the computer powered on. Echo II DV Module includes two Power Indicator LEDs (one for each slot, which has its own Thunderbolt interface), and requires the connection of two Thunderbolt cables between the module and your computer.

Back Panel – xMac Studio / Echo III

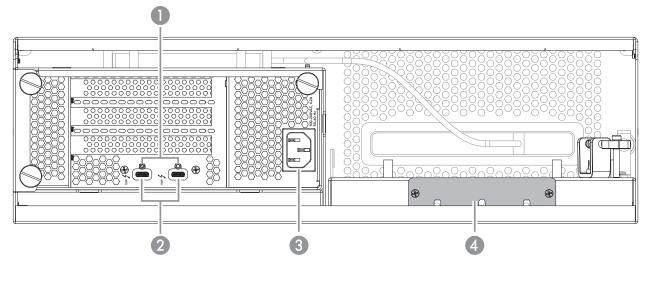

Back Panel - xMac Studio / Echo I

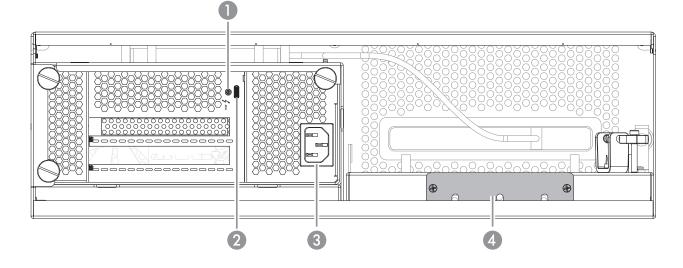

8

Support Notes: The xMac Studio / No Module system is not shown here. Skip to the next page for xMac Studio / Echo II DV

The Echo III Module includes two Thunderbolt ports and two threaded nuts for the included Thunderbolt connector retainer clip; the Echo I Module only has one each.

1 - Threaded Nut(s) for ThunderLok 3

Attach the included Thunderbolt connector retainer clip here.

2 - Thunderbolt Port(s)

Connect the included (or comparable) Thunderbolt 3 (40Gbps) cable, or any Thunderbolt 4 cable, between one of these ports and one of your computer's Thunderbolt ports.

The Echo III Module's second Thunderbolt port may be used to connect to another Thunderbolt peripheral device. We recommend that you connect displays and USB devices directly to your Mac Studio instead of the second Thunderbolt port.


3 – Power Input Socket

Connect the included AC power cord here.

4 – Accessory Space/Airflow Integrity Cover Plate Remove this plate to insert your Thunderbolt or USB SSD (or other compact device) up to 3.2-inches (81 mm) wide by 0.7-inch (17.7 mm) tall, and then reinstall the plate to secure the device. Depending on its size, you may install more than one device. This plate must be reinstalled after removal to ensure the installed Mac Studio computer cools properly.

Support Note: You may install SSDs up to 0.9-inches (23 mm) tall when inserted through the front of the rackmount enclosure (with the front panel removed).

Back Panel – xMac Studio / Echo II DV

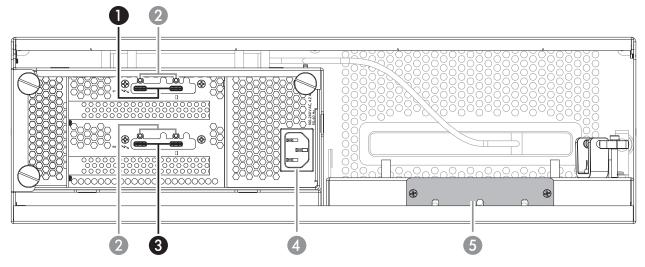

1 – Thunderbolt Ports (Slot 1)

Connect the included (or comparable) Thunderbolt 3 (40Gbps) cable, or any Thunderbolt 4 cable, between the port marked with the computer icon and one of your computer's Thunderbolt ports. This port pair only supports slot 1.

The second Thunderbolt port of this slot's pair may be used to connect to another Thunderbolt peripheral device. *However*, if you install a PCIe card with high bandwidth requirements, such as a DV I/O card, we recommend you do not connect a downstream device. Also, you should connect displays and USB devices directly to your Mac Studio instead of the second Thunderbolt port.

2 - Threaded Nuts for ThunderLok 3

Attach the included Thunderbolt connector retainer clips here.

Support Note: Depending on when you purchased your xMac Studio, there may be clearance/interference issues when attempting to use ThunderLok clips with the top Thunderbolt ports (slot 1).

3 – Thunderbolt Ports (Slot 2)

Same as Thunderbolt Ports (Slot 1), but for slot 2.

4 – Power Input Socket

Connect the included AC power cord here.

5 - Accessory Space/Airflow Integrity Cover Plate Remove this plate to insert your Thunderbolt or USB SSD (or other compact device) up to 3.2-inches (81 mm) wide by 0.7-inch (17.7 mm) tall, and then reinstall the plate to secure the device. Depending on its size, you may install more than one device. This plate must be reinstalled after removal to ensure the installed Mac Studio computer cools properly.

Support Note: You may install SSDs up to 0.9-inches (23 mm) tall when inserted through the front of the rackmount enclosure (with the front panel removed).

Echo III Module Interior

1 - Slot 1

This is an x8 mechanical (x8 electrical) PCIe 3.0 slot.* It also supports PCIe 4.0, 2.0, and 1.1 cards.

2 – Slot 2

This is an x16 mechanical (x8 electrical) PCIe 3.0 slot.* It also supports PCIe 4.0, 2.0, and 1.1 cards.

3 – Slot 3

This is an x8 mechanical (x4 electrical) PCIe 3.0 slot.* It also supports PCIe 4.0, 2.0, and 1.1 cards.

4 - PCIe Gen 3/Gen 2 (HDX) Mode Switch

This switch enables the use of Avid Pro Tools | HDX PCIe cards in the Echo module; instructions follow.

5 - Thunderbolt Interface Card

This card is installed in its own slot and may not be moved to another.

6 - PCIe Slot Access Covers

These cover openings when PCIe slots are unoccupied.

7 - 6-Pin Auxilliary Power Connector and Cable

Plug in the included auxiliary power cable into this connector when you're installing cards requiring extra power. When installing Avid Pro Tools | HDX PCIe cards, connect an HDX card's custom power cable instead.


8 - Temperature-Controlled Fans

These provide cooling for the installed PCIe cards and the module's supporting Thunderbolt and power circuitry. The fans operate at a whisper when the cards are running cool, and automatically speed up in steps as the temperature rises. To prevent overheating, do not block the fans or the vent holes on the module.

9 - PCIe Card Guides

When installing full-length cards, use these to support and secure the cards in place.

* PCIe 2.0 slot when PCIe Gen 3/Gen 2 (HDX) Mode Switch set to Gen 2 (HDX) position.

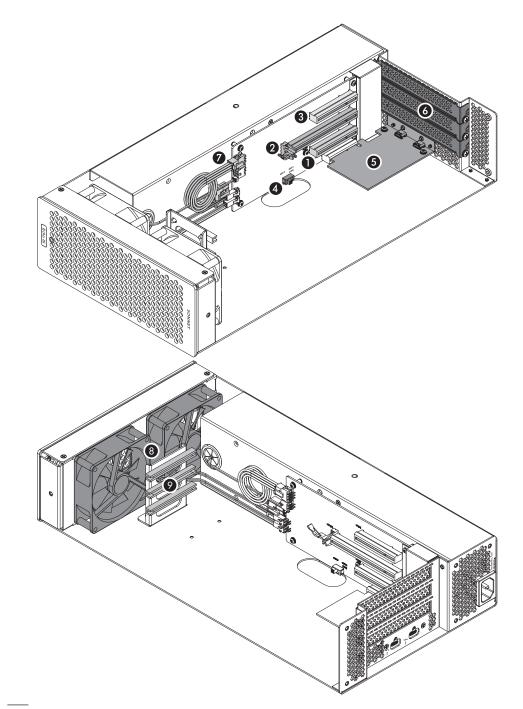

Echo II DV Module Interior

1 - 6-Pin Auxilliary Power Connector for Slot 1

Plug in one of the included auxiliary power cables into this connector when you're installing a card requiring extra power. When installing an Avid Pro Tools | HDX PCIe card, connect an HDX card's custom power cable instead.

2 - 6-Pin Auxilliary Power Connector for Slot 2

Same as for 6-Pin Auxiliary Power Connector for Slot 1, except for slot 2.

3 - Slot 1

This is an x16 mechanical (x4 electrical) PCIe 3.0 slot. It supports PCIe 4.0, 3.0, 2.0, and 1.1 cards.

4 – Slot 2

This is an x16 mechanical (x4 electrical) PCIe 3.0 slot. It supports PCIe 4.0, 3.0, 2.0, and 1.1 cards.

5 - Thunderbolt Interface Card for Slot 1

This card is installed in its own slot and may not be moved to another. This interface card only supports slot 1.

6 - Thunderbolt Interface Card for Slot 2

This card is installed in its own slot and may not be moved to another. This interface card only supports slot 2.

7 - PCIe Slot Access Covers


These cover openings when PCIe slots are unoccupied.

8 - Temperature-Controlled Fans

These provide cooling for the installed PCIe cards and the module's supporting Thunderbolt and power circuitry. The fans operate at a whisper when the cards are running cool, and automatically speed up in steps as the temperature rises. To prevent overheating, do not block the fans or the vent holes on the module.

9 - PCIe Card Guides

When installing full-length cards, use these to support and secure the cards in place.

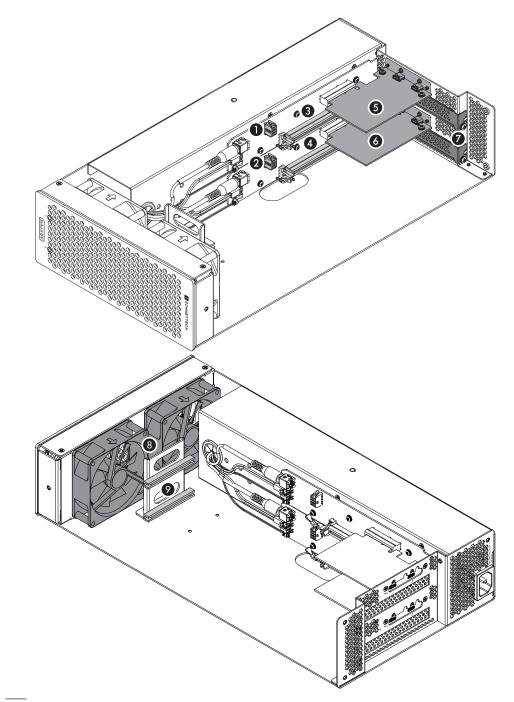

Echo I Module Interior

1 - Auxilliary Power Connectors and Cable

When auxiliary power is required, these connectors provide power to the installed card. Depending on when you purchased your system, this cable may be packaged separately.

2 - PCIe Card Slot


This is an x16 mechanical (x4 electrical) PCIe 3.0 slot. It is also compatible with PCIe 4.0, 2.0, and 1.1 cards.

3 - PCIe Slot Access Cover

Remove this cover when installing a double-width card. If a single-width card is installed, leave this in place.

4 - Temperature-Controlled Fans

These provide cooling for the installed card and the module's supporting Thunderbolt and power circuitry. The fans operate at a whisper when the cards are running cool, and automatically speed up in steps as the temperature rises. To prevent overheating, do not block the fans or the vent holes on the module.

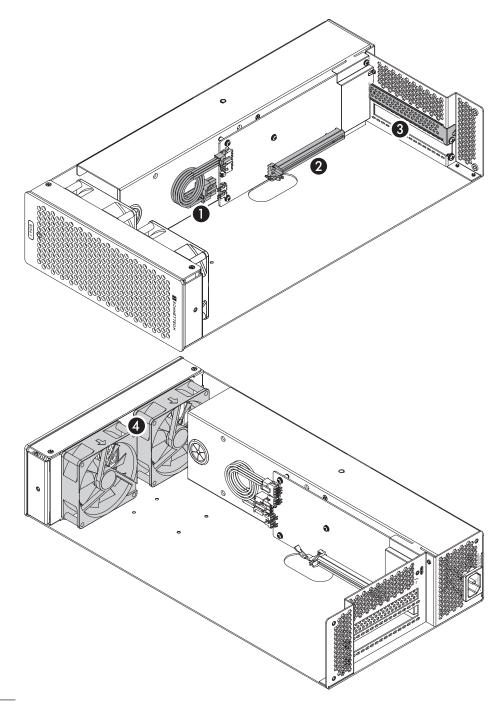

Additional Package Contents

Rackmount Rails

When installed on the enclosure's upper mounting pins, the rails support system installation in racks with mounting depths ranging from 16–20.25 inches. When installed on lower mounting pins, the rails support system installation in racks with mounting depths ranging from 19.75–24 inches.

Rack Ears and Mounting Screws

Attach the ears to the rackmount enclosure with the eight included screws (four screws each).

Power Cord

Included only with xMac Studio with an Echo module, connect this between a power outlet and the power input socket on the Echo module. Note that the power cord included with your product may appear different than the one pictured here, depending on where the product was purchased.

Thunderbolt 3 (40Gbps) Cable(s)

Included only with xMac Studio with an Echo module, connect this cable between a Thunderbolt port on the module and a Thunderbolt/USB4 port on your computer. Two cables are included with xMac Studio/Echo II DV.

Thunderbolt 3 Connector Retainer Clip(s)

Included only with xMac Studio with an Echo module, this clip secures the Thunderbolt 3 connector plugged into one of the module's Thunderbolt ports to prevent accidental cable disconnection. Two clips are included with xMac Studio/Echo II DV.


Self-adhesive Magnets

These may be cut to size and affixed to Thunderbolt or USB SSDs or other devices (except for spinning drives) installed in the enclosure's accessory space to secure them in place; instructions follow.

Auxiliary Power Cable (Not Shown)

Included only with xMac Studio with an Echo module, this cable provides extra power to cards with high power requirements. Two cables are included with Echo II DV Module.








Section 3 – Computer Installation and Module Removal Steps

Support Note: If you only need to remove the Echo module, you do not have to remove the front panel from the rackmount enclosure. Simply remove the three thumbscrews securing the module to the back of the enclosure, and then push the module out through the front.

- 1. Remove the xMac Studio from its packaging, and then set it on a flat, level surface.
- **2**. Remove the six thumbscrews securing the front panel to the rackmount enclosure, and then set aside the screws and front panel (Figure 1).


3. Remove your Mac Studio computer from its packaging, and then carefully insert it into the rackmount enclosure as shown. Push the computer in until it stops (Figure 2).

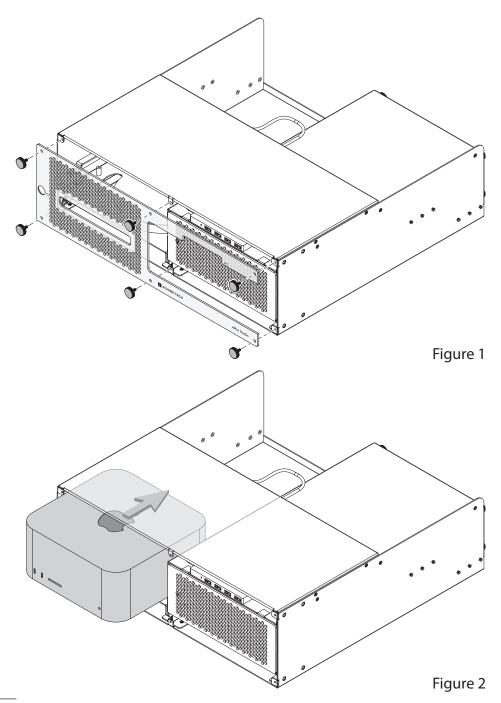

Section 3 – Computer Installation and Module Removal Steps

4. Connect the USB hub's cable to a USB-A port on the Mac Studio (Figure 3).

- **5.** If you purchased an xMac Studio *without* an Echo module, skip to the next page. Otherwise, remove and set aside the three thumbscrews securing the Echo module to the rackmount enclosure (Figure 4).
- 6. Push the Echo module out through the front of the enclosure (Figure 4).

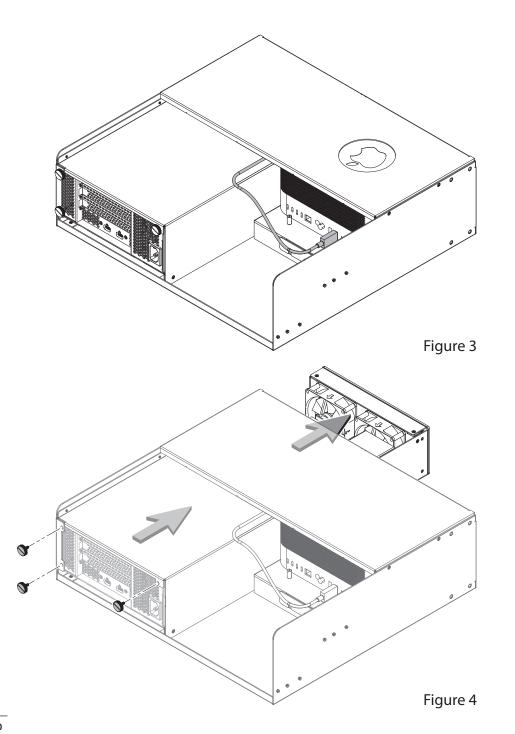

Section 4 – Echo III Module PCIe Card Installation Steps

This section covers the installation of PCIe cards into an Echo III Module. If you purchased an xMac Studio with an Echo II DV Module, skip to page 13. If you purchased an xMac Studio with an Echo I Module, skip to page 14.




Support Note: To avoid damaging components due to static electricity discharge, wear an antistatic wrist strap while working inside the Echo module.

- 1. Remove and set aside the screw securing a PCIe slot access cover (Figure 5).
- 2. Remove and set aside the loose PCIe slot access cover (Figure 5).
- **3.** If you are installing more than one card, repeat steps 1 and 2 as necessary with the remaining PCIe slot access covers.

WARNING: When handling computer products, take care to prevent components from being damaged by static electricity; avoid working in carpeted areas. Handle expansion cards only by their edges and avoid touching connector traces and component pins. Also, avoid touching the Echo III Module's circuit boards and any of its components.

- **4. OPTIONAL STEP 1**: If you are *not* installing a PCIe card which requires auxiliary power, skip to step 6. Otherwise, locate the auxiliary power cable connector (Figure 6).
 - When installing one or more Pro Tools | HDX PCIe cards, connect the custom power cable included with an Avid card, and then move the loose connectors aside for later connection.
 - When installing cards other than the Pro Tools | HDX, connect the included auxiliary power cable, and then move the loose connector aside for later connection.
- 5. OPTIONAL STEP 2: If you are installing one or more Avid Pro Tools | HDX cards, move the Gen 3/Gen 2 (HDX) switch (Figure 6) to the Gen 2 (HDX) position to enable compatibility. Otherwise, the card(s) will not work in the Echo III Module.

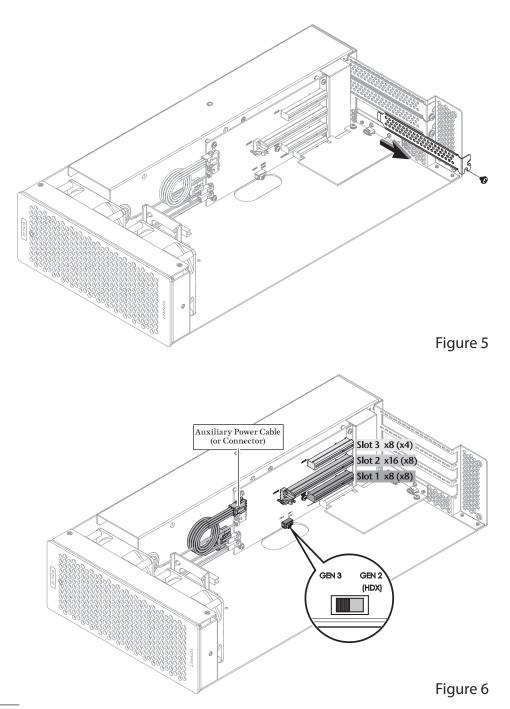


Section 4 – Echo III Module PCIe Card Installation Steps

6. Remove a PCIe card from its packaging, handling the card by its edges and without touching any components or gold connector pins.

Support Note: If you are installing an x8 PCle 1.1 card, installing it into slot 3 may result in reduced performance. We recommend you install it into either slot 1 or 2 for best performance.

- 7. Line up the card's connector with the slot, and then gently but firmly press the card straight into the slot; **do not rock the card or force the card into the slot**. If you encounter excessive resistance, check the card's connector and the slot for damage, and then try inserting the card again (Figure 7).
- 8. Repeat steps 6 and 7 as necessary with any remaining cards.
- 9. If you installed a card which requires auxiliary power, connect the auxiliary power connector to it now.
- **10.** If there are any unoccupied slots, install the PCIe slot access covers you removed previously, and then secure the cards and slot covers using the previously-removed screws (Figure 7).
- 11. Skip to page 15.

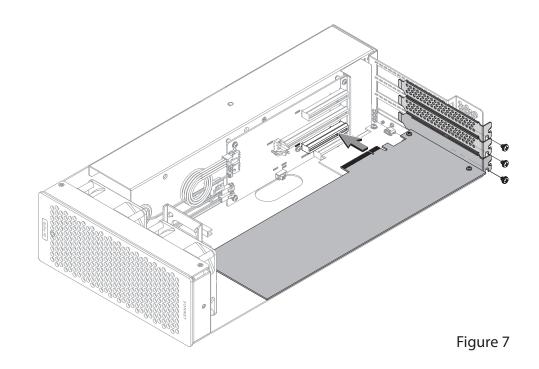

Section 5 – Echo II DV Module PCIe Card Installation Steps

This section covers the installation of PCIe cards into an Echo II DV Module. If you purchased an xMac Studio with an Echo I Module, skip to page 14.




Support Note: To avoid damaging components due to static electricity discharge, wear an antistatic wrist strap while working inside the Echo module.

- 1. Remove and set aside the screw securing a PCIe slot access cover (Figure 8). Repeat with the other slot access cover if you are installing two cards.
- **2.** Remove and set aside the loose PCIe slot access cover (Figure 8). Repeat with the other slot access cover if you are installing two cards.

WARNING: When handling computer products, take care to prevent components from being damaged by static electricity; avoid working in carpeted areas. Handle expansion cards only by their edges and avoid touching connector traces and component pins. Also, avoid touching the Echo III Module's circuit boards and any of its components.

- **3. OPTIONAL STEP:** If you are *not* installing a PCIe card which requires auxiliary power, skip to the next step. Otherwise, locate the auxiliary power cable connector (**Figure 9**).
 - When installing a Pro Tools | HDX PCIe cards, connect the custom power cable included with the Avid card, and then move the loose connectors aside for later connection.
 - When installing a card other than the Pro Tools | HDX, connect the included auxiliary power cable, and then move the loose connector aside for later connection.
- 4. Remove the PCIe card you're installing from its packaging, handling the card by its edges and without touching any components or gold connector pins.
- 5. Line up the card's connector with the slot, and then gently but firmly press the card straight into the slot; do not rock the card or force it into the slot. If you encounter excessive resistance, check the card's connector and the slot for damage, and then try inserting the card again (Figure 9).
- 6. Secure the card using the screw you removed previously; do not overtighten the screw (Figure 9).
- 7. If required, connect the auxiliary power connector to the installed card; make sure the connector is plugged in securely.
- 8. Repeat steps 3–7 as necessary with a second card. Skip to page 15.

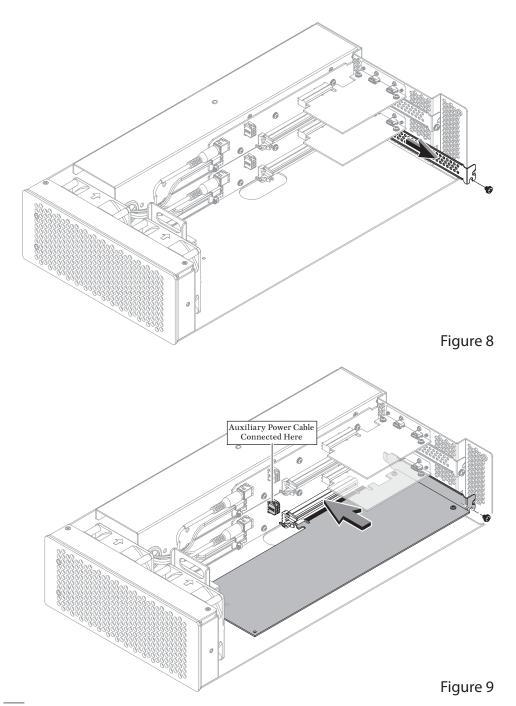

Section 6 – Echo I Module PCIe Card Installation Steps



Support Note: To avoid damaging components due to static electricity discharge, wear an antistatic wrist strap while working inside the Echo I Module.


- 1. Remove and set aside the screw next to the PCIe slot access cover (Figure 10).
- **2.** If you are installing a double-width card, or an additional daughter card, remove and set aside the screw securing the PCIe slot access cover, and then remove and set aside the cover (Figure 10).
- **3. OPTIONAL STEP:** If you are *not* installing a PCIe card which requires auxiliary power, go to step 4. Otherwise, locate the auxiliary power cable connector (**Figure 11**).
 - When installing an Avid Pro Tools | HDX PCIe card, connect the custom power cable included with the Avid card, and then move the loose connectors aside for later connection.
 - When installing a card other than the Pro Tools | HDX, connect the included auxiliary power cable, and then move the loose connector aside for later connection.

WARNING: When handling computer products, take care to prevent components from being damaged by static electricity; avoid working in carpeted areas. Handle expansion cards only by their edges and avoid touching connector traces and component pins. Also, avoid touching the Echo I Module's circuit boards and any of its components.

- 4. Remove the PCIe card you're installing from its packaging, handling the card by its edges and without touching any components or gold connector pins.
- 5. Line up the card's connector with the slot, and then gently but firmly press the card straight into the slot; do not rock the card or force the card into the slot. If you encounter excessive resistance, check the card's connector and the slot for damage, and then try inserting the card again (Figure 11).
- 6. Secure the card using the screw(s) you removed previously; do not overtighten the screw(s) (Figure 11).

Support Note: The Echo I Module includes an "8-pin" auxiliary power connector comprised of a 6-pin plus 2-pin connector pair. To create an 8-pin connector, slide the 6-pin and 2-pin connectors together as shown (**Figure 11**).

7. If required, connect the auxiliary power connector(s) to the installed card; make sure the connectors are plugged in securely. Proceed to the next page.

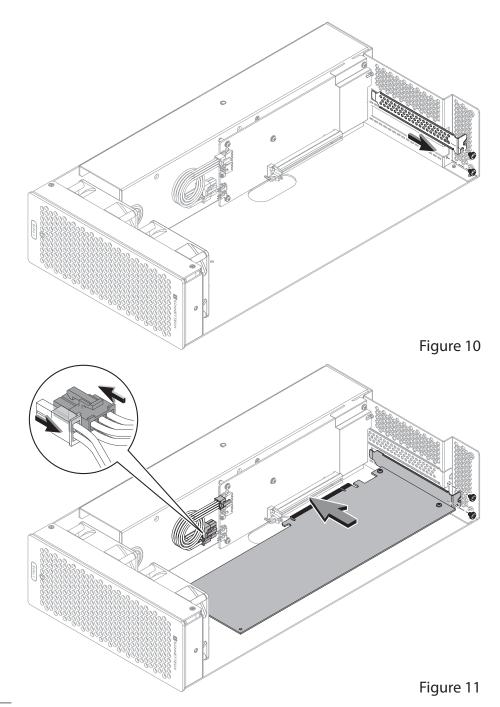

Section 7 – Echo Module Installation Steps

- 1. Insert the Echo module into the rackmount enclosure (Figure 12).
- 2 Using the three thumbscrews you removed previously, secure the Echo module to the enclosure; do not overighten the screws (Figure 12).

Support Note: Sonnet's ThunderLok™ 3 Thunderbolt connector retainer clip secures the included Thunderbolt 3 cable to the module to prevent accidental disconnects. This clip is compatible with Sonnet 0.5- and 0.7-meter Thunderbolt 3 cables.

To attach the clip to the cable, remove both items from their packaging, and then insert the connector into the connector clip as shown (Figure 13). Note that the connector will pass all the way through the clip; when you connect the cable to the module, the clip will secure the connector.


3. For Echo III and Echo I Module Users:

Connect the included (or comparable) Thunderbolt 3 (40Gbps) cable, or any Thunderbolt 4 cable, between the Thunderbolt port on the Echo module and a Thunderbolt port on the back of your computer (Figure 13). Secure the retainer clip to the module if you attached it.

For Echo II DV Module Users (not shown)

Connect the included (or comparable) Thunderbolt 3 (40Gbps) cables, or any Thunderbolt 4 cables, between the two Thunderbolt ports on the Echo II DV Module marked with a computer icon and two Thunderbolt ports on the back of your computer (Figure 13). Secure the retainer clip(s) to the module if you attached it (them).


Support Note: Depending on when you purchased your xMac Studio, there may be clearance/interference issues when attempting to use ThunderLok clips with the top Thunderbolt ports (slot 1) on an Echo II DV module.

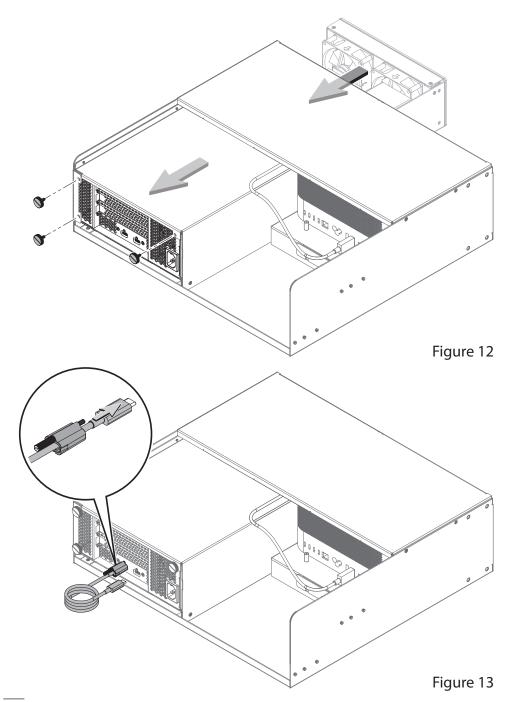

Section 8 – Accessory Installation Steps (Optional)

The following two pages explain how to utilize the space inside the enclosure beneath the computer to install Thunderbolt or USB SSDs or other accessories. If you are not going to install an accessory, skip to page 18.


1. Using a Phillips screwdriver, remove the screws securing the accessory space/airflow integrity cover plate to the enclosure, and then set aside the screws and plate (Figure 14).

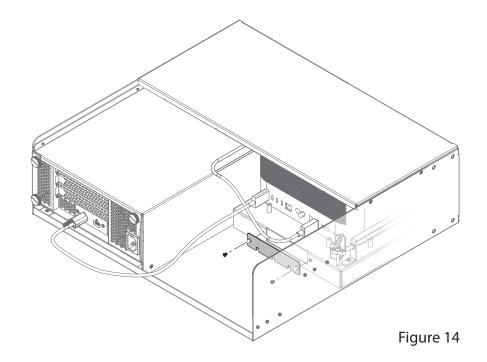

Support Notes: If the rack or case the xMac Studio is installed in will be moved around, you should secure any drives or other devices you install inside the enclosure. If you are installing SSDs or some other device, use the included self-adhesive magnets to secure them. *Do not use the supplied magnets to secure spinning drives*.


If necessary, you may cut the magnets to fit the devices they will be attached to.

2. OPTIONAL STEP: If you are installing something other a spinning drive (and you need to secure it), remove the protective backing from one of the supplied magnets and then apply it to the bottom of the device (Figure 15).

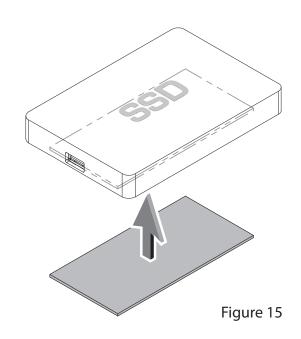


Section 8 – Accessory Installation Steps (Optional)

- **3.** Insert the device into the space beneath the computer, placing it far enough back so that the device's cables may be routed through the accessory space cover plate (Figure 16).
- 4. Connect the device to the computer (Figure 16). If you are installing additional devices in the space, do so now.



Support Note: It is very important to reinstall the accessory space/ airflow integrity cover plate in order to prevent the Mac Studio from drawing in warm air through the accessory space opening.

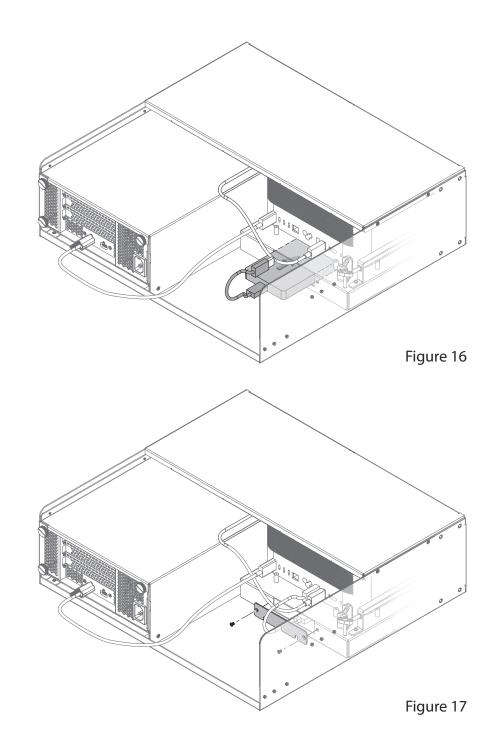

Section 9 – Final Assembly and Enclosure Installation Steps

1. Using the six thumbscrews you removed previously, secure the front panel to the enclosure; do not overtighten the screws (Figure 18).

3 0 Y Figure 18 Figure 19

2. Using the eight supplied screws, secure the rack ears to the rackmount enclosure (Figure 19).


Section 9 - Final Assembly and Enclosure Installation Steps

- **3.** Attach the rackmount extension rails on the rackmount enclosure and adjust them as necessary (Figure 20).
- 4. Install the assembled xMac Studio into its rack or case.
- **5.** Connect interface and power cables between devices, PCIe cards, and the computer as necessary.
- 6. Connect the power cord included with the Echo module between a wall outlet or power strip and the module's power socket. Note that the Echo module's power indicator(s) will not light until the computer is powered on.

Support Note: If you haven't set up your Mac Studio, you will need to connect a monitor, keyboard, and mouse to complete those steps.

7. Proceed to the next page.

A

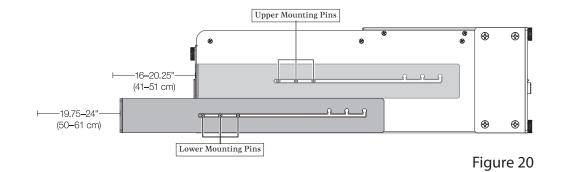

Section 10 – Complete Setup and Configuration

ECHO MODULE SETUP AND CONFIGURATION STEPS

This page instructs you how to verify the Echo module and installed cards are recognized by the computer.

A - Confirm the Echo Module is Recognized

- **1.** With the Echo module powered and connected to the computer, turn on the computer.
- **2**. Press and hold down the Option key, and then from the Apple menu, select System Information; a *System Information* window will open.
- **3.** In the *System Information* window, click Thunderbolt/USB4 under the Hardware header in the left column (Figure 21). In the top right column under the Thunderbolt/USB4 Device Tree header, you will see Thunderbolt/USB4 Bus, and then "DuoModo Echo III Module", "Echo Express SE I TB3" (for the Echo II DV Module), or "DuoModo eGPU Module (for the Echo I Module).

Support Note: If "DuoModo Echo III Module", "Echo Express SE I TB3" or "DuoModo eGPU Module" is not listed, disconnect and reconnect the Thunderbolt cable(s) between the computer and module. Note that it is not necessary to shut down the computer before disconnecting and reconnecting the cable(s).

B – Confirm the Installed Cards are Recognized

- 1. In the *System Information* window click PCI under the Hardware header in the left column (Figure 22).
- 2. At the top of the right column, installed cards (and/or card controllers) are listed (if not, you may need to install drivers before the cards are recognized). Click one of the cards; you should see "Yes" next to Driver Installed and Tunnel Compatible, otherwise the card or driver may not be Thunderbolt- or M series processor-compatible (Figure 22).



Support Note: While Echo modules don't require drivers beyond those pre-installed in macOS, installed cards require Thunderbolt-compatible drivers to enable their use.

C – Install Card Drivers (If Necessary)

- 1. Launch a web browser, and then go to your card manufacturer's website. Download and install the latest drivers according to the manufacturer's directions.
- 2. Restart your computer; your Echo module is ready to use!

	Mac Studio				
✓ Hardware	Thunderbolt/USB4 Device Tree				
ATA					
Apple Pay	V Thunderbolt/USB4 Bus 0				
Audio	DuoModo eGPU Module				
Bluetooth	Thunderbolt/USB4 Bus 1				
Camera	Thunderbolt/USB4 Bus 2				
Card Reader	Thunderbolt/USB4 Bus 3				
Controller					
Diagnostics Disc Burning					
Ethernet					
Fibre Channel					
FireWire	Thunderbolt/USB4 Bus 0:				
Graphics/Displays					
Memory	Vendor Name: Apple Inc. Device Name: Mac Studio				
NVMExpress	UID: 0x05AC3433AB6D3810				
PCI	Route String: 0				
Parallel SCSI	Domain UUID: 79D93BD6-24E2-4615-9BA8-9120CFB38BD9				
Power	Port:				
Printers	Status: Device connected Link Status: 0x2				
SAS	Link Status: 0x2 Speed: Up to 20 Gb/s x1				
SATA	Current Link Width: 0x2				
SPI	Receptacle: 1				
Storage					
Thunderbolt/USB4	DuoModo eGPU Module:				
USB	Vendor Name: Sonnet Technologies Inc.				
✓ Network	Vendor Name: Sonnet Technologies, Inc. Device Name: DuoModo eGPU Module				
Firewall	Mode: Thunderbolt 3				
Locations	Device ID: 0x5C				
Volumes	Vendor ID: 0x8				
WWAN	Device Revision: 0x1				
Wi-Fi	UID: 0x000826BDFC386900 Route String: 1				
✓ Software	Firmware Version: 62.1				
Accessibility	Port (Upstream):				
Applications	Status: Device connected				
Developer	Link Status: 0x2				
Disabled Software	Speed: Up to 20 Gb/s x1 Current Link Width: 0x2				
Extensions	Current Link Width: 0x2 Link Controller Firmware Version: 1.43.0				
Fonts	Port:				
Frameworks					
Installations	sonnet's Mac Studio > Hardware > Thunderbolt/USB4 > Thunderbolt/USB4 Bus 0				

Figure 21

•••	Mac Studio						
✓ Hardware ATA	Card		^ Туре	Driver Installed	Slot		
Apple Pay Audio Bluetooth Camera Card Reader Controller	pci1b21,2142 pci1b21,2142 pci1b21,2142 pci1b21,2142 pci8086,15f0		USB eXtensible Host Controller USB eXtensible Host Controller USB eXtensible Host Controller USB eXtensible Host Controller USB eXtensible Host Controller	Yes Yes Yes Yes Yes	Thunderbolt@9,0,0 Thunderbolt@6,0,0 Thunderbolt@12,0,0 Thunderbolt@11,0,0 Thunderbolt@3,0,0		
Diagnostics Disc Burning							
Ethernet Fibre Channel Fibre Channel FirkWire Graphics/Displays Memory NVMExpress Pci Parallel SCSI Power Printers SAS SAS SAS SAS SAS SAS SAS SA	pcib21,2142: Type: Driver Installed: Tunnel Compatible: Pause Compatible: MSI: Slot: Vence ID: Subsystem Vencer ID: Subsystem Vencer ID: Link Width: Link Speed:	USB eXtensible Host Controller Yes Yes PCI Trunderbolt@6,0,0 0x1521 0x1521 0x7548 0x7438 0x0000 x2 8.0 GT/s					
Frameworks Installations	🚐 sonnet's Mac Studi	o > Hardware > PCI > pci1b21,2142					

Section 11 – Tips, General Information, and Known Issues

TIPS, GENERAL INFORMATION

Keeping the Cards Cool

With its optimized airflow design and temperaturecontrolled fan providing cooling at all times, an Echo module provides adequate cooling for the installed cards. *Do not operate the Echo module outside of its enclosure, and do not block any of the vents*! Otherwise, the installed cards and Echo module's components may overheat.

Replacing a PCIe Card After Initial Installation

Shut down the computer, and then disconnect the power cord and Thunderbolt cable from the Echo module before opening the chassis and replacing the card; **PCIe cards are not hot-pluggable**!

Hot Plugging the Echo Module

When certified Thunderbolt-compatible cards (used with Thunderbolt-compatible drivers) are installed, you may connect and disconnect the module while the computer is on. Of course, if you have anything connected to the cards, such as storage devices, cameras, etc., follow proper procedures for disconnecting those devices before unplugging the Echo module.

There's No Need to Unplug the Power Cable

Because an Echo module automatically powers on and off with the computer to which it's connected, there's no power switch, nor is there any need to disconnect the power cable under normal use.

Power Indicator LED Operation

An Echo module automatically powers on and off with the computer to which it's connected, and its power indicator(s) only lights when the computer is on and turns off when the computer is sleeping or powered off.

Connecting Additional Thunderbolt Peripherals

Because the Mac Studio includes a separate Thunderbolt controller for each Thunderbolt port and provides full PCIe bandwidth to each, we recommend you use the computer's Thunderbolt ports first to connect additional peripherals.

- Echo II DV Modules include four Thunderbolt ports; two are reserved for connection to your computer, while the other two support daisy-chaining of up to five additional Thunderbolt peripheral devices each; due to an operational issue with the Mac Studio, connecting displays to the Echo II DV Module is not recommended.
- Echo III Modules include two Thunderbolt ports; one is reserved for connection to your computer, while the second supports daisy-chaining of up to five additional Thunderbolt peripheral devices.

Using Expansion Cards Without Installing Drivers

Some Thunderbolt-compatible expansion cards, like Sonnet's AllegroTM Pro USB 3.2 PCIe cards, use inbox (built into the operating system) drivers, and are ready to use out of the box.

Echo II DV / Echo III Modules Provide Downstream Power Echo II DV and Echo III Modules provide up to 15 watts to bus-powered Thunderbolt peripheral devices, enabling them to operate without connecting an additional power adapter.

How to Identify Thunderbolt 3 (40Gbps) Cables Look for the Thunderbolt icon (f) AND the number 3 on the connector housings to identify these cables. Aside from Thunderbolt cables from Apple, USB-C cables with connectors that only have the Thunderbolt icon without the number 3 may only support 20Gbps speeds, and are not recommended for use with the Echo module. Cables marked with a generic USB icon ($\bullet \frown \bullet \bullet$) are NOT compatible for connecting the Echo module to the computer.

Thunderbolt 4 Cable Compatibility

You may use Thunderbolt 4 cables with Thunderbolt 4 or Thunderbolt 3 computers and peripherals without any compromise in performance or functionality.

Not All Mac-Compatible Cards Work With Mac Studio

While this product is compatible with M series processors, not all PCIe cards that work with Intel-based Macs have M series processor-compatible drivers. We recommend that you contact your PCIe card's manufacturer to verify that the existing drivers support M series Macs.

KNOWN ISSUES

Not all PCIe Cards Will Perform at 100%

Thunderbolt 3 technology's PCIe bandwidth is limited to 2,800 MB/s. While most PCIe cards will operate at full performance, some may not because they require more bandwidth than Thunderbolt 3 can provide.

Not All Thunderbolt Cables Deliver Full Performance

Full performance from the Echo module requires the use of the included (or comparable) Thunderbolt 3 (40Gbps) cable, or any Thunderbolt 4 cable. When shopping for a Thunderbolt 3 cables, please be aware that some support only lower data transfer speeds (20Gbps).

Operating System (OS) Updates May Break Compatibility

Specific device drivers that work under one OS version may not work under a later version. Before updating your computer to the latest OS, we recommend that you contact your PCIe card's manufacturer to verify that the existing drivers work. Note that other computer software updates may also break compatibility.

Connecting Displays to Echo III Module with Mac Studio Due to an operational issue with the Mac Studio, connecting displays to the Echo III Module is not recommended.

Section 12 – Precautions, FCC Compliance, and Support Information

SAFETY PRECAUTIONS

Please read this section carefully before proceeding. These precautions explain the correct and safe use of this device, thereby helping to prevent injury to you or others, and also help you to minimize the risk of damaging the device.

- Do not attempt to modify the enclosure. If this device appears to be malfunctioning, contact your reseller or local distributor.
- · Do not drop the chassis; dropping or mishandling chassis may result in a malfunction leaving the product inoperable.
- Do not insert foreign objects inside the slots.
- Do not expose the device to rain, use it near water or containers that contain liquids which might spill into any openings, or in damp or wet conditions.
- If unusual smells, sounds, or smoke come from the device, or if liquids enter it, unplug it from the electrical outlet immediately.
- · Follow the instructions in this manual carefully; contact vour reseller or local distributor for additional advice not covered in this User's Guide.

FCC Compliance

xMac Studio complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: This device may not cause harmful interference, AND this device must accept any interference received, including interference that may cause undesired operation.

Contacting Customer Service

The Sonnet Web site located at www.sonnettech.com has the most current support information and technical updates. Before contacting Customer Service, please check our Web site for the latest updates and online support files, and check this Quick Start Guide for helpful information. Email support requests generally receive the fastest responses, and are usually processed within a 24-hour period during normal business hours, excluding holidays. When you contact Customer Service, have the following information available so the customer service staff can better assist you:

- Product name
- Computer model
- PCIe card model(s)
- Operating system version
- A macOS System Report, along with a description of the issue(s) you are encountering with your device

If further assistance is needed, please contact Sonnet **Customer Service** at: E-mail: support@sonnettech.com Tel: 1-949-472-2772 (Monday-Friday, 9 a.m.-5 p.m. Pacific Time, excluding holidays)

Japan Customers Contact Sonnet Customer Service Japan at: E-mail: jp.support@sonnettech.com



SCINNETTECH ©2023 Sonnet Technologies, Inc. All rights reserved. Sonnet, SONNETTECH, the Sonnettech logotype, Allegro, Echo, and xMac are trademarks of Sonnet Technologies, Inc. Mac, the Mac logo, Mac Studio, and macOS are trademarks of Apple Inc., registered in the United States and other countries. Thunderbolt and the Thunderbolt logo are trademarks of Intel Corporation in the U.S. and/or other countries. Other product names are trademarks of their respective owners. Product specifications subject to change without notice. UG-XMAC-STD-E-H-112723