

REBELSTACK 210 & 212 – QUICK INSTALLATION GUIDE & OVERVIEW

Congratulations on the purchase of your RebelStack speaker cabinet! Though connecting and setting up RebelStack speaker cabinets is easy and straightforward, we recommend reading this installation guide before usage. Enjoy!


Stacking Cabinets

Combine up to three RebelStack cabinets in any combination you like!



2x210 speakers stacked

Plenty of low-end and power with the precise, fast and defined tone usually associated with 10" speakers *

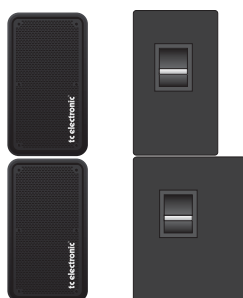

1x210 + 1x212

For a combination of precision and even more low-end from the 12" cabinet *



Three RebelStacks

A RebelHead 450 amp will drive any combination of up to three RebelStack cabinets

* For the safety of your fellow musicians and your own, please address the stability of stacked cabinets and take the proper precautions to prevent the stack from being unstable or tipping over. Also notice that only two cabinets should be stacked vertically.

Specifications

- Eminence custom US drivers (210 = 2x10", 212 = 2x12")
- Dual Concentric Tweeter (33 mm aluminum coil Eminence driver)
- 18 mm plywood
- Carved rounded hardwood corner pieces
- "Skid free" surface treatment
- Metal grill
- Rear ported

Dimensions & Weight

210: BxHxD - 356x664x356 mm
Weight - 21 kg

212: BxHxD - 356x664x500 mm
Weight - 25.3 kg

Subject to change without notice



Speaker Connections – 8 Ohm

All connectors, 1/4" jacks and Speakon, can be used for both input and link. Connect the amp output to one of the connectors and link to a second cabinet using any of the other connectors.

HFLEVEL control

RebelStack cabinets are equipped with dual concentric tweeters. Use the HFLEVEL control to adjust the amount of high-end frequencies.

IMPORTANT SAFETY INSTRUCTIONS

- Read these instructions.
- Keep these instructions.
- Heed all warnings.
- Follow all instructions.
- Do not use this apparatus near water.
- Clean only with dry cloth.
- Only use attachments/accessories specified by the manufacturer.



Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.

Caution

- You are cautioned that any change or modifications not expressly approved in this manual could void your authority to operate this equipment.

Service

- There are no user-serviceable parts inside.
- All service must be performed by qualified personnel.