


TX-37A

Single-Unit Rack Mount Kit

Installation Instruction Sheet

The TX-37A Rack Mount Kit is designed for mounting one TX-37A transmitter in a standard 19-inch rack (see figure below). It consists of the rack mount kit, rack screws, and washers. To install the kit, follow the instructions below.

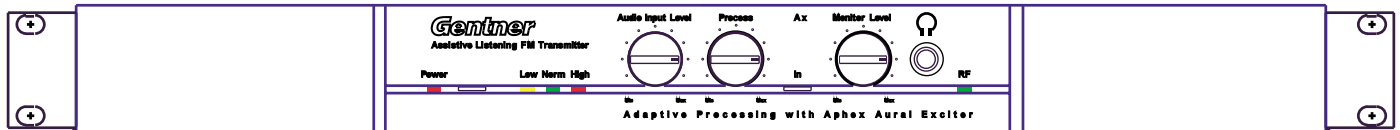

Completed rack mount installation

Installation

Step 1: Remove TX-37A Feet

Prepare the TX-37A for installation in the rack mount by removing the rubber feet from the bottom of the transmitter chassis.

Step 2: Remove TX-37A Chassis Screw(s)


Remove the side-panel chassis screws. These screws will be replaced by the screws supplied with the kit when you mount the transmitter to the rack mount kit (Step 3).

Gentner


ALS and Tour Guide Systems

Step 3: Secure TX-37A in Rack Mount Kit

Place the TX-37A between the rack mount ears. Use the supplied screws and washers to mount the TX-37A to the kit's rack mount ear brackets (refer to the figures below).

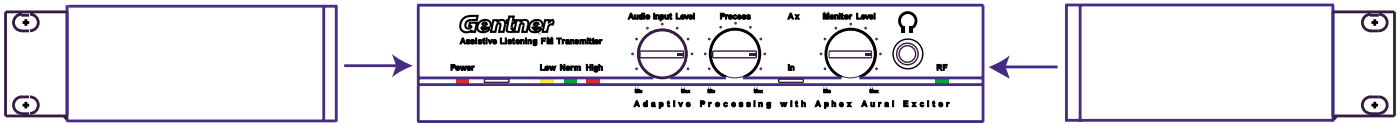

Rack mount ear positioning (front view)

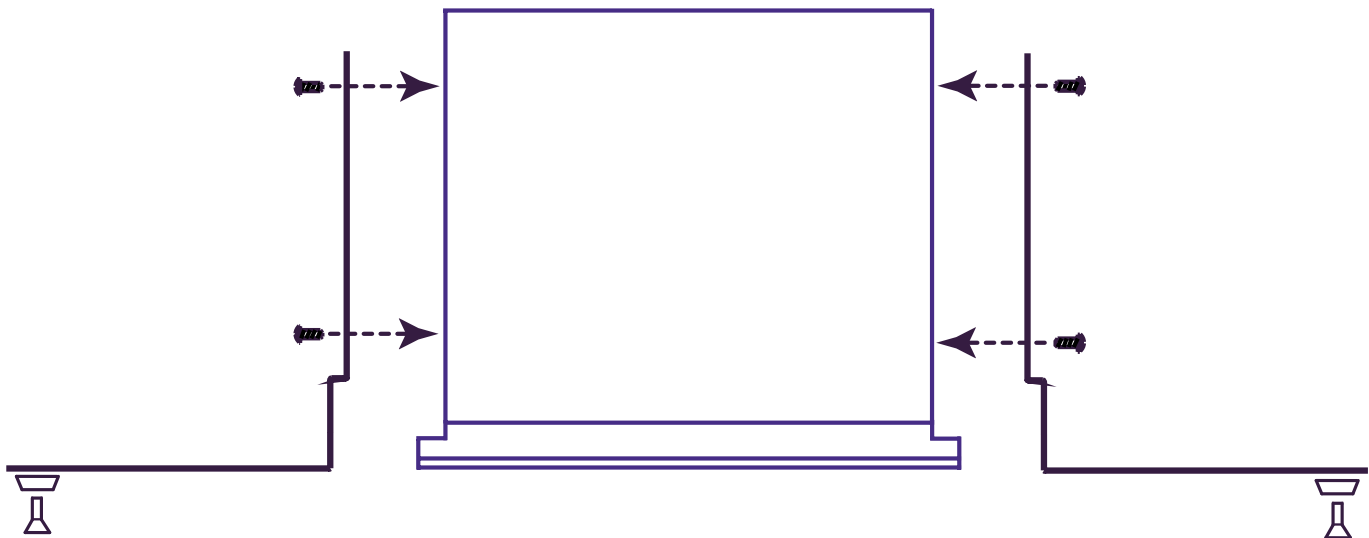

Rack mount ear positioning (top view)

Step 4: Rack Mount Installation

When the TX-37A is mounted in the kit, install the completed assembly in a standard 19-inch rack. This completes the installation.



Starin Distributing, Inc. 1531 South Calumet Road • Chesterton, IN 46304 USA • (219) 929-4127 • Fax: (219) 929-4377 • www.gentnerals.com
©2002 ClearOne, Inc. All rights reserved.

www.gentnerals.com

©2002 ClearOne, Inc. All rights reserved. Gentner and the Gentner logo are registered trademarks of ClearOne, Inc. in the US and other countries. Features, specifications, and descriptions are accurate as of this printing. ClearOne, Inc. reserves the right to modify this information without prior notice or obligation. 803-402-001 Rev. 2