

EXTENSION BELT


ER-1000PJ

Please carefully follow the instructions in this manual to ensure long, trouble-free use of your equipment.

1. GENERAL DESCRIPTION

The ER-1000PJ Extension Belt is designed for use with the ER-1000 WR Personal PA System. When used, the ER-1000 WR's belt length can be extended by 30 cm or 11.81" (max. extended length: 40 cm or 15.75").

2. HOW TO USE

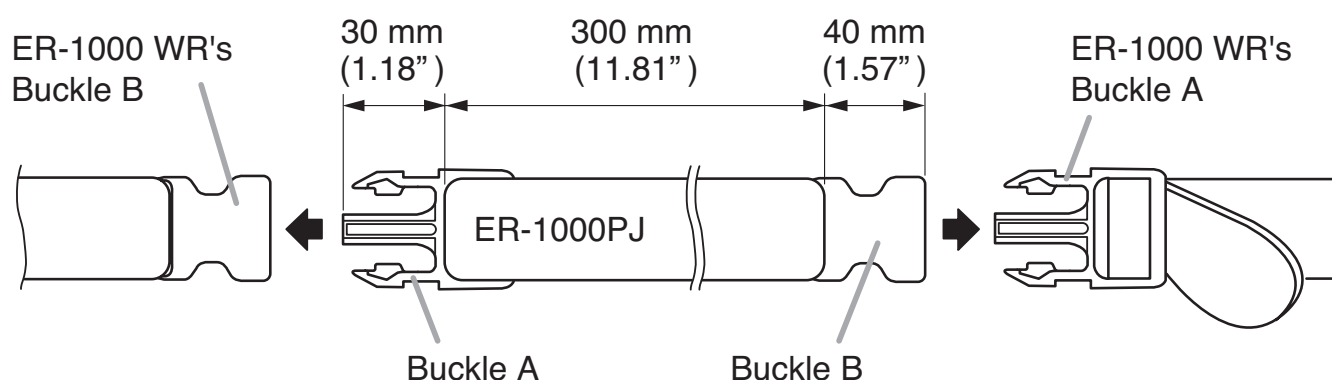

Step 1. Insert ER-1000PJ's Buckle A into ER-1000 WR's Buckle B until it clicks into place.

Note: Confirm that the Lock Lever on Buckle A is fully inserted into Buckle B.

Step 2. Adjust the belt length.

Adjust the length of the Belt on the ER-1000 WR's Buckle A.

For details, refer to the instruction manual enclosed with the ER-1000 WR Personal PA System.

3. SPECIFICATIONS

Belt Length	30 cm or 11.81" (Buckles excluded), max. extended length: 40 cm or 15.75" (Buckles excluded)
Finish	Belt: Elastic rubber, black Buckles A/B: Polyacetal resin, black
Weight	40 g (1.41 oz)

Note: The design and specifications are subject to change without notice for improvement.