


datavideo

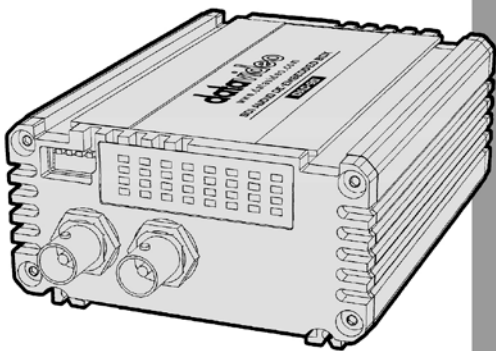

**SDI AUDIO
DE-EMBEDDER
DAC-90**

Quick Start Guide

www.datavideo.com

Table of Contents

Warnings and Precautions	3
Disposal.....	4
Warranty	5
Standard Warranty.....	5
Two Year Warranty.....	5
Packing List	6
Introduction.....	6
Features.....	6
Connections & Controls	7
Front Panel	7
Rear Panel.....	8
Firmware Update	9
Frequently-Asked Questions	11
Dimensions & Weight.....	12
Specifications	14
Service & Support	16

Disclaimer of Product and Services

The information offered in this instruction manual is intended as a guide only. At all times, Datavideo Technologies will try to give correct, complete and suitable information. However, Datavideo Technologies cannot exclude that some information in this manual, from time to time, may not be correct or may be incomplete. This manual may contain typing errors, omissions or incorrect information. Datavideo Technologies always recommend that you double check the information in this document for accuracy before making any purchase decision or using the product. Datavideo Technologies is not responsible for any omissions or errors, or for any subsequent loss or damage caused by using the information contained within this manual. Further advice on the content of this manual or on the product can be obtained by contacting your local Datavideo Office or dealer.



Warnings and Precautions

1. Read all of these warnings and save them for later reference.
2. Follow all warnings and instructions marked on this unit.
3. Unplug this unit from the wall outlet before cleaning. Do not use liquid or aerosol cleaners. Use a damp cloth for cleaning.
4. Do not use this unit in or near water.
5. Do not place this unit on an unstable cart, stand, or table. The unit may fall, causing serious damage.
6. Slots and openings on the cabinet top, back, and bottom are provided for ventilation. To ensure safe and reliable operation of this unit, and to protect it from overheating, do not block or cover these openings. Do not place this unit on a bed, sofa, rug, or similar surface, as the ventilation openings on the bottom of the cabinet will be blocked. This unit should never be placed near or over a heat register or radiator. This unit should not be placed in a built-in installation unless proper ventilation is provided.
7. This product should only be operated from the type of power source indicated on the marking label of the AC adapter. If you are not sure of the type of power available, consult your Datavideo dealer or your local power company.
8. Do not allow anything to rest on the power cord. Do not locate this unit where the power cord will be walked on, rolled over, or otherwise stressed.
9. If an extension cord must be used with this unit, make sure that the total of the ampere ratings on the products plugged into the extension cord do not exceed the extension cord's rating.
10. Make sure that the total amperes of all the units that are plugged into a single wall outlet do not exceed 15 amperes.
11. Never push objects of any kind into this unit through the cabinet ventilation slots, as they may touch dangerous voltage points or short out parts that could result in risk of fire or electric shock. Never spill liquid of any kind onto or into this unit.

12. Except as specifically explained elsewhere in this manual, do not attempt to service this product yourself. Opening or removing covers that are marked “Do Not Remove” may expose you to dangerous voltage points or other risks, and will void your warranty. Refer all service issues to qualified service personnel.
13. Unplug this product from the wall outlet and refer to qualified service personnel under the following conditions:
 - a. When the power cord is damaged or frayed;
 - b. When liquid has spilled into the unit;
 - c. When the product has been exposed to rain or water;
 - d. When the product does not operate normally under normal operating conditions. Adjust only those controls that are covered by the operating instructions in this manual; improper adjustment of other controls may result in damage to the unit and may often require extensive work by a qualified technician to restore the unit to normal operation;
 - e. When the product has been dropped or the cabinet has been damaged;
 - f. When the product exhibits a distinct change in performance, indicating a need for service.

Disposal



For EU Customers only - WEEE Marking

This symbol on the product indicates that it should not be treated as household waste. It must be handed over to the applicable take-back scheme for the recycling of Waste Electrical and Electronic Equipment. For more detailed information about the recycling of this product, please contact your local Datavideo office.

Warranty

Standard Warranty

- Datavideo equipment is guaranteed against any manufacturing defects for one year from the date of purchase.
- The original purchase invoice or other documentary evidence should be supplied at the time of any request for repair under warranty.
- Damage caused by accident, misuse, unauthorized repairs, sand, grit or water is not covered by this warranty.
- All mail or transportation costs including insurance are at the expense of the owner.
- All other claims of any nature are not covered.
- Cables & batteries are not covered under warranty.
- Warranty only valid within the country or region of purchase.
- Your statutory rights are not affected.

Two Year Warranty

All Datavideo products purchased after 01-Oct.-2008 qualify for a free one year extension to the standard Warranty, providing the product is registered with Datavideo within 30 days of purchase. For information on how to register please visit www.datavideo.com or contact your local Datavideo office or authorized Distributors

Certain parts with limited lifetime expectancy such as LCD Panels, DVD Drives and Hard Drives are only covered for the first 10,000 hours, or 1 year (whichever comes first).

Any second year warranty claims must be made to your local Datavideo office or one of its authorized Distributors before the extended warranty expires.

Packing List

Items	Description	Q'ty
1	DAC-90 Unit	1
2	Accessory List	1

Introduction

DAC-90 is an audio de-embedding box that allows the user to de-embed 16 analog audio signals (4 at a time) from the SDI video signal.

It features 3G/HD/SD-SDI to support up to 1080p/60 video format and automatically detects and switches between different formats. In addition, 4 mini XLR audio connectors are provided to output analog audio to audio devices such as monitors, recorders, switchers, and audio mixers.


SMPTE and EBU settings are available on the audio box and assignments of the de-embedded audio signal are set using the built-in DIP switches.

Features

- Audio de-embedding from SDI signal
- Automatic detection of 3G, HD, and SD signals
- 4 analog MINI XLR audio outputs
- Assignable de-embedded audio signals
- Audio level indicator display
- Switchable SMPTE and EBU audio levels
- Control via DIP Switches

Connections & Controls

Front Panel

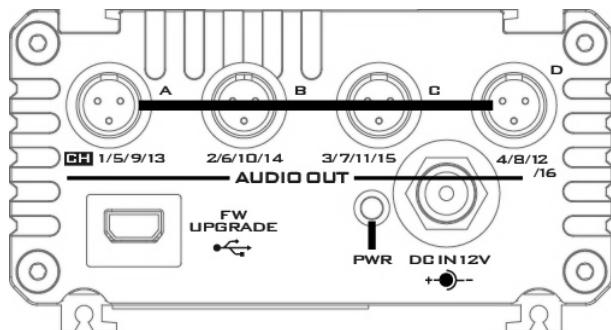

Mini-XLR

Balanced XLR Audio Output



FW
UPGRADE

USB

Firmware Upgrade Port



PWR

Power Indicator

Indicates the power status




DC IN 12V

DC In Socket

Connects the supplied 12V PSU to this socket. The connection can be secured by screwing the outer fastening ring of the DC In plug to the socket.

Rear Panel

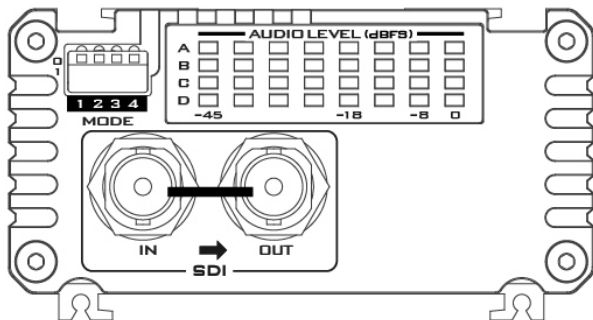

SDI IN

SDI input for video and audio



SDI OUT

Re-clocked Video and Audio output from SDI input




Audio level indicator display

Indications of current audio level

Green				Yellow		Red	
-45~-40	-39~-35	-34~-29	-28~-24	-23~-18	-17~-13	-12~-8	-7~0

(Unit : dBFS)



4 PIN DIP Switch


Audio level adjustment

4 PIN DIP Switch Configuration


DIP SWITCH SETTING			
1	2	3	4
AUDIO LEVEL	AUDIO DE-EMBED OUTPUT		FIRMWARE UPDATE
0 SMPTE	00 GROUP 1 CH 1 2 3 4	10 GROUP 3 CH 9 10 11 12	0 DISABLE
1 EBU	01 GROUP 2 CH 5 6 7 8	11 GROUP 4 CH 13 14 15 16	1 ENABLE

Firmware Update


1. Disconnect DC 12V Power Supply from DAC-90 and remove Mini-USB connection
2. Set DIP SW4 to 1 (1: down; 0: up)

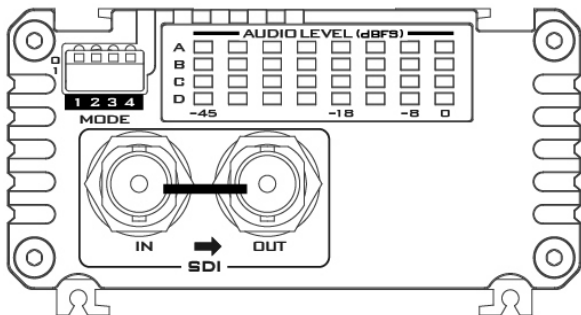


3. Connect the DAC-90 mini-USB port to the PC via a USB cable (you do not need to connect the DC 12V Power at this point and the PWR LED should be off)
4. The PC will detect the USB device. If this is your first time connecting the DAC-90 to the PC, you will see “DAC-90 Datavideo Tech USB Drive” appearing at the bottom right hand corner of the desktop. You should see an empty drive after it is opened.

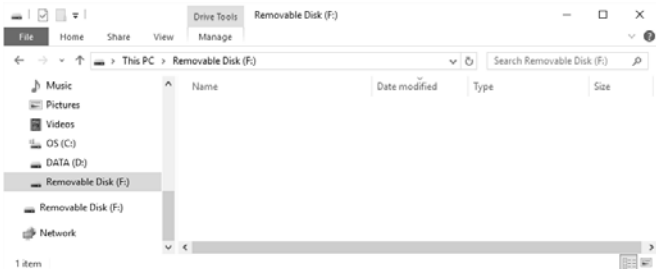

5. Copy and paste the latest firmware file (DAC-90-FW-v1.00.bin) to the device

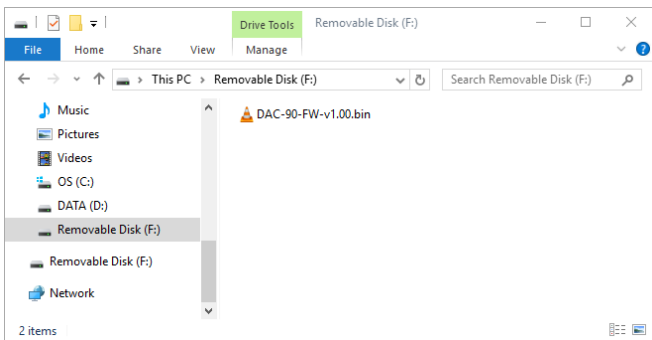

6. Safely remove the Datavideo USB device

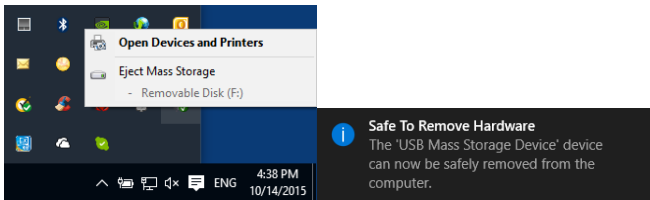





7. Set DIP SW 4 to 0 and then remove the Mini USB connection after the update is completed
8. After the DC 12V Power Supply is connected, you will then see the PWR LED turned on, Audio Level Indicators all ON and then fade towards the left, indicating that the device is operating properly.

Frequently-Asked Questions

This section describes problems that you may encounter while using DAC-90. If you have questions, please refer to related sections and follow all the suggested solutions. If problem still exists, please contact your distributor or the service center.

No.	Problems	Solutions
1.	What are the corresponding SMPTE and EBU audio output levels?	If the maximum SDI audio input level is 0 dBFS, then the Mini-XLR output level is 24dBu for SMPTE and 18dBu for EBU.

Dimensions & Weight

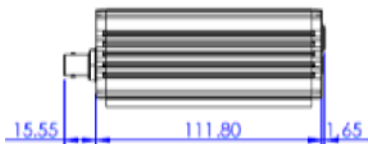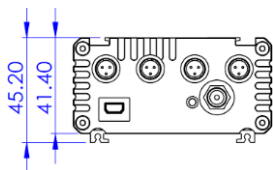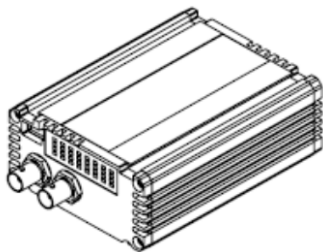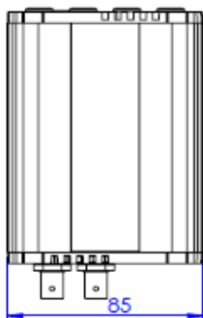

All measurements in mm

Unboxed Unit Weight: 0.37 Kg

Boxed Unit Weight: 0.6 Kg

Notes

Specifications

Interface	
SDI Video Input	3G/HD/SD SDI x 1
SDI Video Output	3G/HD/SD SDI x 1 (Re-clocked Loop through)
Analog Audio Output	Mini XLR (Balanced) x 4
Audio Level Indicator	Power LED x 1 Audio Level LED : 4 rows
Updates and Configuration	Mini USB x 1
Standards	
SDI Format Support	SD: NTSC 525/29.97 and PAL 625/25 HD: 1080p 23.98/24/25/29.97/30/50/59.94/60 1080i 50/59.94/60 720p 23.98/24/25/29.97/30/50/59.94/60
SDI Compliance	SMPTE 259M, SMPTE 292M, SMPTE 296M, SMPTE 424M, SMPTE 425M-AB ITU-R BT.656, ITU-R BT.1120-6
SDI Video Rates	SDI video connections are switchable between standard definition and high definition.
SDI Video Sampling	4:2:2 / 4:4:4
SDI Audio Sampling	24-bit (SD 20-bit), 48KHz
SDI Color Precision	4:2:2 / 4:4:4 (8/10/12-bit)
SDI Color Space	YUV, RGB

SDI Auto Switching	Automatically detects SD, HD, 3G
Audio Level	SMPTE and EBU switchable
General	
Settings Control	DIP Switch
Power Supply	DC 12V
Operating Temperature	0°C to 50°C (32°F to 122°F)
Operating Humidity	10% to 90% (non condensing)
Certification	CE, FCC
Accessory	Power Adapter, QSG

Service & Support

It is our goal to make your products ownership a satisfying experience. Our supporting staff is available to assist you in setting up and operating your system. Please refer to our web site www.datavideo.com for answers to common questions, support requests or contact your local office below.

Datavideo Taiwan

Datavideo Technologies Co. Ltd
10F, No. 176, Jian 1st Rd., Chung Ho
District, New Taipei City 235, Taiwan,
R.O.C.

Tel: +886-2-6227-2888

Fax: +886-2-6227-2777

E-mail: service@datavideo.com.tw

Datavideo Europe

Datavideo Technologies Europe BV
Floridadreef 106
3565 AM Utrecht,
The Netherlands

Tel: +31-30-261-96-58

Fax: +31-30-261-96-57

E-mail: info@datavideo.nl

Datavideo United Kingdom

Datavideo UK Limited
Units 1 & 2 Waterside Business Park
Hadfield, Glossop, Derbyshire
SK13 1BE, UK

Tel: +44-1457 851 000

Fax: +44-1457 850 964

E-mail: sales@datavideo.co.uk

Datavideo USA

Datavideo Corporation
7048 Elmer Avenue,
Whittier, CA 90602,
U.S.A.

Tel: +1-562-696 2324

Fax: +1-562-698 6930

E-mail: sales@datavideo.us

Datavideo China

Datavideo Technologies China Co
101, NO. 616, LiuYing Rd, Zhabei District,
Shanghai, China

Tel: +86 21-5603 6599

Fax: +86 21-5603 6770

E-mail: service@datavideo.cn

Datavideo Singapore

Datavideo Technologies (S) PTE Ltd
No. 176 Paya Lebar Road #06-03
Singapore 409030

Tel: +65-6749 6866

Fax: +65-6749 3266

E-mail: sales@datavideo.sg

Datavideo Hong Kong

Datavideo Hong Kong Ltd
G/F., 26 Cross Lane
Wanchai, Hong Kong

Tel: +852-2833-1981

Fax: +852-2833-9916

E-mail: info@datavideo.com.hk

Datavideo France

Datavideo France s.a.r.l
Cit  Descartes 1, rue Albert Einstein
Champs sur Marne
774477-Marne la Vall e cedex 2
Tel: +33-1-60370246

E-mail: info@datavideo.fr

Datavideo India

Datavideo Technologies India Pvt L
A-132, Sec-63, Noida-201307,
Uttar Pradesh (UP), India.

Tel: +91-0120-2427337

Fax: +91-0120-2427338

E-mail: sales@datavideo.in



Please refer to our website for update the latest version manual.

www.datavideo.com/Audio+Mixing+and+Management/DAC-90

datavideo
www.datavideo.com

All the trademarks are the properties of their respective owners.
Datavideo Technologies Co., Ltd. All rights reserved 2018

Oct-20, 2015 P/N: G082060655B2