

FUZE PAR Z175™

user manual

www.elationlighting.com

©2017 ELATION PROFESSIONAL all rights reserved. Information, specifications, diagrams, images, and instructions herein are subject to change without notice. ELATION PROFESSIONAL logo and identifying product names and numbers herein are trademarks of ELATION PROFESSIONAL. Copyright protection claimed includes all forms and matters of copyrightable materials and information now allowed by statutory or judicial law or hereinafter granted. Product names used in this document may be trademarks or registered trademarks of their respective companies and are hereby acknowledged. All non-ELATION brands and product names are trademarks or registered trademarks of their respective companies.

ELATION PROFESSIONAL and all affiliated companies hereby disclaim any and all liabilities for property, equipment, building, and electrical damages, injuries to any persons, and direct or indirect economic loss associated with the use or reliance of any information contained within this document, and/or as a result of the improper, unsafe, insufficient and negligent assembly, installation, rigging, and operation of this product.

Elation Professional USA | 6122 S. Eastern Ave. | Los Angeles, CA. 90040

323-582-3322 | 323-832-9142 fax | www.elationlighting.com | info@elationlighting.com

Elation Professional B.V. | Junostraat 2 | 6468 EW Kerkrade, The Netherlands +31 45 546 85 66 | +31 45 546 85 96 fax | www.elationlighting.eu | info@elationlighting.eu

DOCUMENT VERSION

Please check <u>www.elationlighting.com</u> for the latest revision/update of this manual.

Date	Document Version	Software Version≥	DMX Channel Modes	Notes
04/06/17	1	1.10	6/7/8/12	Initial release.

CONTENTS

General Information	4
Warranty	6
Safety Instructions and Guidelines	7
Overview	9
Installation	10
Fixture Menu	12
DMX Channel Functions And Values	16
Cleaning and Maintenance	20
Technical Specifications	21
Optional Accessories	23

GENERAL INFORMATION

INTRODUCTION

Congratulations, you have just purchased one of the most innovative and reliable IP65 rated lighting fixtures on the market today! This fixture has been designed to perform reliably for years when the guidelines in this booklet are followed. Please read and understand the instructions in this manual carefully and thoroughly before attempting to operate this unit. These instructions contain important information regarding safety during use and maintenance.

UNPACKING

Every fixture has been thoroughly tested and has been shipped in perfect operating condition. Carefully check the shipping carton for damage that may have occurred during shipping. If the carton appears to be damaged, carefully inspect your unit for damage and be sure all accessories necessary to operate the unit have arrived intact. In the event damage has been found or parts are missing, please contact our customer support team for further instructions. Please do not return this unit to your dealer without first contacting customer support at the number listed below. Please do not discard the shipping carton in the trash. Please recycle whenever possible.

BOX CONTENTS

- (1) Gel Frame (attached)
- (1) Gel Frame/Barn Door Holder (attached)
- (1) Barn Door (attached)
- (1) powerCON Cable

CUSTOMER SUPPORT

Elation Professional® provides a customer support line, to provide set up help and to answer any question should you encounter problems during your set up or initial operation. You may also visit us on the web at <u>www.elationlighting.com</u> for any comments or suggestions. For service related issue please contact Elation Professional®.

ELATION SERVICE USA - Monday - Friday 8:00am to 5:00pm PSTVoice: 323-582-3322Fax: 323-832-9142E-mail: support@elationlighting.com

 ELATION SERVICE EUROPE - Monday - Friday 08:30 to 17:00 CET

 Voice: +31 45 546 85 30
 Fax: +31 45 546 85 96

 E-mail: support@elationlighting.eu

WARRANTY RETURNS

All returned service items whether under warranty or not, must be freight pre-paid and accompany a return authorization (R.A.) number. The R.A. number must be clearly written on the outside of the return package. A brief description of the problem as well as the R.A. number must also be written down on a piece of paper and included in the shipping container. If the unit is under warranty, you must provide a copy of your proof of purchase invoice. Items returned without a R.A. number clearly marked on the outside of the package will be refused and returned at customer's expense. You may obtain a R.A. number by contacting customer support.

IMPORTANT NOTICE!



There are no user serviceable parts inside this unit. Do not attempt any repairs yourself; doing so will void your manufactures warranty. Damages resulting from modifications to this fixture and/or the disregard of safety and general user instructions found in this user manual void the manufactures warranty and are not subject to any warranty claims and/or repairs.

LIMITED WARRANTY

A. Elation Professional® hereby warrants, to the original purchaser, Elation Professional® products to be free of manufacturing defects in material and workmanship for a period of two years (730 days), and Elation Professional® product rechargeable batteries to be free of manufacturing defects in material and workmanship for a period of six months (180 days), from the original date of purchase. This warranty excludes discharge lamps and all product accessories. This warranty shall be valid only if the product is purchased within the United States of America, including possessions and territories. It is the owner's responsibility to establish the date and place of purchase by acceptable evidence, at the time service is sought.

B. For warranty service, send the product only to the Elation Professional® factory. All shipping charges must be pre-paid. If the requested repairs or service (including parts replacement) are within the terms of this warranty, Elation Professional® will pay return shipping charges only to a designated point within the United States. If any product is sent, it must be shipped in its original package and packaging material. No accessories should be shipped with the product. If any accessories are shipped with the product, Elation Professional® shall have no liability what so ever for loss and/or or damage to any such accessories, nor for the safe return thereof.

C. This warranty is void if the product serial number and/or labels are altered or removed; if the product is modified in any manner which Elation Professional® concludes, after inspection, affects the reliability of the product; if the product has been repaired or serviced by anyone other than the Elation Professional® factory unless prior written authorization was issued to purchaser by Elation Professional®; if the product is damaged because not properly maintained as set forth in the product instructions, guidelines and/or user manual.

D. This is not a service contract, and this warranty does not include any maintenance, cleaning or periodic check-up. During the periods as specified above, Elation Professional® will replace defective parts at its expense, and will absorb all expenses for warranty service and repair labor by reason of defects in material or workmanship. The sole responsibility of Elation Professional® under this warranty shall be limited to the repair of the product, or replacement thereof, including parts, at the sole discretion of Elation Professional®. All products covered by this warranty were manufactured after January 1, 1990, and bare identifying marks to that effect.

E. Elation Professional® reserves the right to make changes in design and/or performance improvements upon its products without any obligation to include these changes in any products theretofore manufactured.

F. No warranty, whether expressed or implied, is given or made with respect to any accessory supplied with the products described above. Except to the extent prohibited by applicable law, all implied warranties made by Elation Professional® in connection with this product, including warranties of merchantability or fitness, are limited in duration to the warranty periods set forth above. And no warranties, whether expressed or implied, including warranties of merchantability or fitness, shall apply to this product after said periods have expired. The consumer's and/or dealer's sole remedy shall be such repair or replacement as is expressly provided above; and under no circumstances shall Elation Professional® be liable for any loss and/or damage, direct and/or consequential, arising out of the use of, and/or the inability to use, this product.

G. This warranty is the only written warranty applicable to Elation Professional® products and supersedes all prior warranties and written descriptions of warranty terms and conditions heretofore published.

SAFETY INSTRUCTIONS AND GUIDELINES

This fixture is an extremely sophisticated piece of electronic equipment. To guarantee a smooth operation, it is important to follow all instructions and guidelines in this manual. The manufacturer of this device is not responsible for injury and/or damages resulting from the misuse of this fixture due to the disregard of the information printed in this manual. Only qualified and/or certified personnel should perform installation of this fixture and only the original rigging parts (omega brackets) included with this fixture should be used for installation. Any modifications to the fixture and/or the mounting hardware included will void the original manufactures warranty and increase the risk of damage and/or personal injury.

DO NOT PLUG FIXTURE INTO A DIMMER PACK!



PROTECTION CLASS 1 - FIXTURE MUST BE PROPERLY GROUNDED



NEVER OPEN THIS FIXTURE WHILE IN USE! UNPLUG POWER BEFORE SERVICING FIXTURE! NEVER TOUCH FIXTURE DURING OPERATION, AS IT MAY BE HOT! KEEP FLAMMABLE MATERIALS AWAY FROM FIXTURE!



INDOOR / DRY LOCATIONS USE ONLY! DO NOT EXPOSE FIXTURE TO RAIN AND MOISTURE!




NEVER LOOK DIRECTLY INTO THE LIGHT SOURCE! RETINA INJURY RISK - MAY INDUCE BLINDNESS! SENSITIVE PERSONS MAY SUFFER AN EPILEPTIC SHOCK!

SAFETY INSTRUCTIONS AND GUIDELINES

- **DO NOT TOUCH** the fixture housing during operation. Turn OFF the power and allow approximately 15 minutes for the fixture to cool down before serving.
- **DO NOT** shake fixture, avoid brute force when installing and/or operating fixture.
- DO NOT operate fixture if the power cord has become frayed, crimped and/or damaged. If the power cord is damaged, replace it immediately with a new one of similar power rating.
- DO NOT block any air ventilation slots. All fan and air inlets must remain clean and never blocked. Allow approx. 6" (15cm) between fixture and other devices or a wall for proper cooling.
- When installing fixture in a suspended environment, always use mounting hardware that is no less than M10 x 25 mm, and always install fixture with an appropriately rated safety cable.
- Always disconnect fixture from main power source before performing any type of service and/or cleaning procedure. Only handle the power cord by the plug end, never pull out the plug by tugging the wire portion of the cord.
- During the initial operation of this fixture, a light smoke or smell may emit from the interior of the fixture. This is a normal process and is caused by excess paint in the interior of the casing burning off from the heat associated with the lamp and will decrease gradually over time.
- Consistent operational breaks will ensure the fixture will function properly for many years to come.
- Use the original packaging and materials to transport the fixture in for service.

OVERVIEW

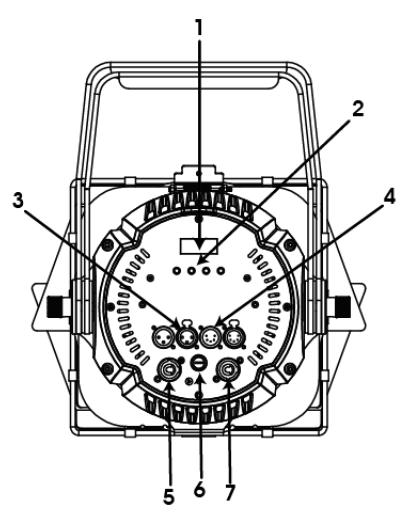

- 1. LCD Menu Display
- 2. MENU, UP, DOWN, ENTER Buttons
- 3. 3pin DMX IN/OUT
- 4. 5pin DMX IN/OUT
- 5. powerCON IN
- 6. Fuse
- 7. powerCON OUT

INSTALLATION



FLAMMABLE MATERIAL WARNING Keep fixture at least 5.0 ft (1.5m) away from any flammable materials, decorations, pyrotechnics, etc.



ELECTRICAL CONNECTIONS A qualified electrician should be used for all

electrical connections and/or installations.

CAUTIONS

- For added protection, mount the fixture in areas outside walking paths, seating areas, or in areas were unauthorized personnel might reach the fixture.
- Ambient operating temperature range for this fixture is 5° to 113°F. (-15° to 45°C) Do not use the fixture under or above this temperature.
- Before mounting the fixture to any surface, make sure the installation area can hold a minimum point load of 10 times the weight of the fixture.
- Fixture installation must always be secured with a secondary safety attachment, such as an appropriate safety cable.
- Never stand directly below the device when mounting, removing or servicing.

POWER LINKING

Max number of **FUZE PAR Z175™** units power linked together:

5 units @120V | 10 units @240V

NOTE: USE CAUTION WHEN POWER LINKING OTHER FIXTURES TO FUZE PAR Z175™! POWER CONSUMPTION OF OTHER LIGHTING FIXTURES WILL VARY! ALWAYS CHECK MAX AMP OUT RATING PRINTED ON THE REAR CONNECTION PANEL!

CLAMP INSTALLATION


The fixture provides an integrated mounting dual bracket / yoke. When mounting this fixture to truss be sure to secure an appropriately rated clamp to the mounting bracket / yoke using a M10 screw fitted through the center hole. Be sure to attach an appropriate **Safety Cable** (not included) to the fixture using the safety cable rigging point integrated into the back of the fixture.


RIGGING


Overhead rigging requires extensive experience, including amongst others calculating working load limits, installation material being used, and periodic safety inspection of all installation material and the fixture. If you lack these qualifications, do not attempt the installation yourself. Improper installation can result in bodily injury. Fixture is fully operational in the specific mounting positions illustrated below.



ALWAYS ATTACH A SAFETY CABLE TO THE FIXTURE WHENEVER INSTALLING IN A SUSPENDED ENVIRONMENT TO ENSURE THE FIXTURE WILL NOT DROP IF CLAMP FAILS.

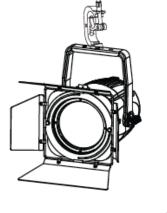


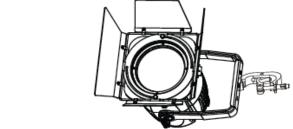

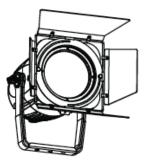

FIXTURE MENU

The fixture comes with an easy to navigate system menu. The control panel (see image below) located on the back of the fixture provides access to the main system menu and is where all necessary system adjustments are made to the fixture. During normal operation, pressing **MODE** button once will access the fixture's main menu. Once in the main menu you can navigate through the different functions and access the sub-menus with the **UP** and **DOWN** buttons. Once you reach a field that requires adjusting, press the **ENTER** button to activate that field and use the **UP** and **DOWN** buttons to adjust the field. Pressing the **ENTER** button once more will confirm your setting. You may exit the main menu at any time without making any adjustments by pressing the **MODE/ESC** button.

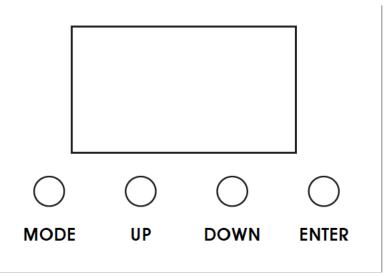

LCD CONTROL PANEL LOCKOUT

When the **Key Lock** menu is set to **ON**, the LCD display will turn OFF after 30 seconds and the (4) button Control Panel will be LOCKED. To unlock the (4) button LCD control panel, press and hold the **MODE** button.

INFORMATION DISPLAYED DURING INITIAL POWER ON

When the fixture is initially powered ON, the display shows the following information:




(Greater than or equal to)

	ELA	ATION© FUZE PAR Z175™ SYSTEM MENU				
MENU	OPTIONS / VALUES (Det	fault Settings in BOLD)	DESCRIPTION			
Set ADDR	001 ~ XXX		DMX Address Setting			
UserMode	CH:08 sRGBWI, CH:08 RG	I, CH:05 HSI+, CH:07 RGBW, GBW, CH:09 RGBW, CH:10 RGBW, CH:13 sRGBWI, CH:14 RGBW	Set DMX Channel			
	DimCurve	Standard , Stage, TV, Architectur, Theatre	Set Dimmer Curve Mode			
	No DMX	Hold / Blackout / Program	Function If NO DMX Detected			
	ZOOM	000 - 255	Manual Zoom Control			
	AUTO RUN	FQN: 01 -99	Set the number of times each internal macro will repeat before moving to the next macro.			
	01. STATIC CL: R	R/G/B/RG/GB/RB/RGB/BLAC F 00	Set Static Color Program Macro			
	02. CHANG SP01 F00	SP 01 -99 F 00 -99	Set Color Change Program Macro			
Function	03. FADE SP01 F00	SP 01 -99 F 00 -99	Set Color Fade Program Macro			
	Maaraa	00 -63	Select Color Macro			
	Macros	Zoom: 000 - 255	Set Zoom			
		Backligh 05 -60	LCD Backlight Shut Off Time (mins)			
	LCD. Set	Key Lock OFF / ON	Control Front Panel Buttons Key Lock			
		DispFlash ON / OFF	Display flashes when NO DMX			
	DFSET	OFF / ON	Reset Fixture Back Factory Defaults			
	TEMP	Fahren / Celsius	Temperature Switch Between C°/ F°			
	TimeInfo Current	XXXX (Hours)	Fixture Run Time From Power ON			
	TimeInfo TotalTim	XXXX (Hours)	Fixture Total Run Time			
	TimeInfo LastClea	XXXX (Hours)	Clear Fixture Last Run Time			
	TimeInfo TimePIN	PIN= 050	Enter PIN to Access Clear Last. Menu			
Info	TempInfo	XXX F ° / C°	Temperature in Fixture Head			
	ModelInf	Fuze Par Z175	Display Fixture Model Name			
	Software Version	1U V102	Software Versions			
		2U V102	(greater than or equal to)			

ELATION© FUZE PAR Z175™ SYSTEM MENU										
MENU	OPTIONS / VALUE	S (Default Settings in BOLD)	DESCRIPTION							
ZoomRset	Reset. M		Reset of Zoom Motor							
Slave	Slave		Set Slave Mode							
	ManCtrl ZOOM	000 - 255								
	ManCtrl Dimmer	000 - 255								
	ManCtrl Red	000 - 255								
Manual	ManCtrl Green	000 - 255	Manual Control							
	ManCtrl Blue	000 - 255								
	ManCtrl White	000 - 255								
	ManCtrl Strobe	000 - 255								

DIMMING CURVES

The **DimCurve** menu allows you to select one of the following preset dimming curves: **Standard, Stage, TV, Architec,** or **Theatre**. (See diagram below for more details)

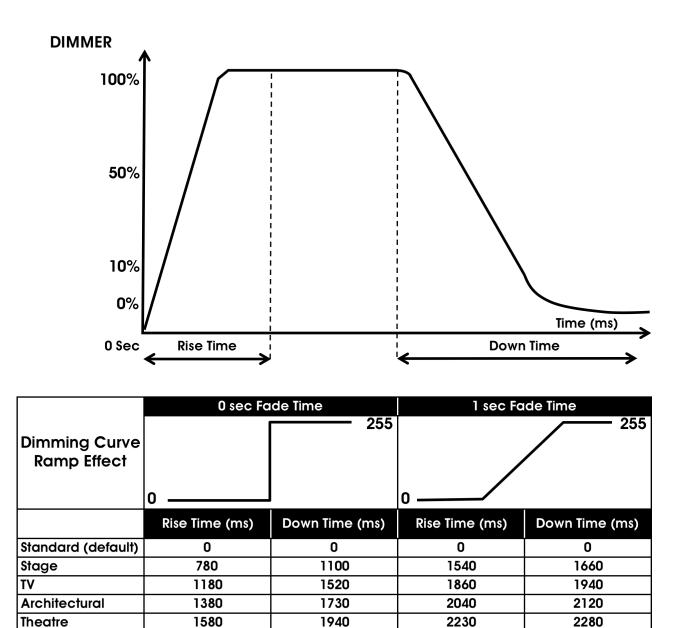

DMX CHANNEL FUNCTIONS AND VALUES

				DMX C		el Value	es / Func	ctions V	AR Z17 /ersion (<mark>rsions:</mark> 2	(14 DMX	Chanr	nels)	
				Feature							ritten n	otice	
						-		ge wiii		y prior w			
CH:04 RGBW	CH:05 HSI	CH:06 HSI	CH:07 RGBW	CH:08 sRGBWI	CH:08 RGBW	CH:09 RGBW	CH:10 RGBW	CH:11 16Bit	CH:11 HSI	CH:13 sRGBWI	CH:14 RGBW	VALUE	FUNCTION
1			1	0	1	1	1	1		0	,		RED
1			1	2	1	1	1	1		2	1	0-255	0 to 100%
								0					RED FINE
								2				0-255	RED FINE Adjustment
0			0	2	0	0	0	2		2	0		GREEN
2			2	3	2	2	2	3		3	2	0-255	0 to 100%
								4					GREEN FINE
								4				0-255	GREEN FINE Adjustment
0			0	4	0	0	0	F		4	0		BLUE
3			3	4	3	3	3	5		4	3	0-255	0 to 100%
								,					BLUE FINE
								6				0-255	BLUE FINE Adjustment
								_		-			WHITE
4			4	5	4	4	4	7		5	4	0-255	0 to 100%
													WHITE FINE
								8				0-255	WHITE FINE Adjustment
													SHUTTER / STROBE
												0-31	LED OFF
												32-63	LED ON
												64-95	Strobe Effect SLOW to FAST
				1		5	5		1	1	6	96-127	LED ON
						0	5		1	I	0	128-159	Pulse Effect in Sequences
												160-191	LED ON
												192-223	Random Strobe Effect SLOW to FAST
												224-255	LED ON
	1	1							0				HUE
	1	1							2			0-255	0-100%
	0	0							2				SATURATION
	2	2							3			0-255	0-100%
			F		F	4	4				7		DIMMER INTENSITY
			5		5	6	6				/	0-255	Dimmer 0 to 100%
					/	7	-				0		DIMMER INTENSITY FINE
					6	7	7				8	0-255	Dimmer FINE Adjustment
				,							INTENSITY		
	3	3		6					4	6		0-255	0-100%

									s: ≥ 102				
			Fee					rithout c	any prio	r written	notice.		
CH:04 RGBW	CH:05 HSI	CH:06 HSI	CH:07 RGBW	N CH:08 sRGBWI	CH:08 RGBW	CHANNEI CH:09 RGBW	CH:10 RGBW	CH:11 16Bit	CH:11 HSI	CH:13 sRGBWI	CH:14 RGBW	VALUE	FUNCTION
KODII	1101		кови	SKODWI	KODW	KOBW	KOBW	TODI	1101	SKODWI	KOBW		COLOR PRESETS
												0	OFF
												1-4	COLOR PRESET 01
												5-8	COLOR PRESET 02
												9-12	COLOR PRESET 03
												13-16	COLOR PRESET 04
												17-20	COLOR PRESET 05
												21-24	COLOR PRESET 06
												25-28	COLOR PRESET 07
												29-32	COLOR PRESET 08
												33-36	COLOR PRESET 09
												37-40	COLOR PRESET 10
												41-44	COLOR PRESET 11
												45-48	COLOR PRESET 12
												49-52	COLOR PRESET 13
												53-56	COLOR PRESET 14
												57-60	COLOR PRESET 15
									5	7	5	61-64	COLOR PRESET 16
												65-68	COLOR PRESET 17
												69-72	COLOR PRESET 18
												73-76	COLOR PRESET 19
												77-80	COLOR PRESET 20
												81-84	COLOR PRESET 21
												85-88	COLOR PRESET 22
												89-92	COLOR PRESET 23
												93-96	COLOR PRESET 24
												97-100	COLOR PRESET 25
												101-104	COLOR PRESET 26
												105-108	COLOR PRESET 27
												109-112	COLOR PRESET 28
												113-116	COLOR PRESET 29
												117-120	COLOR PRESET 30
												121-124	COLOR PRESET 31
												125-128	COLOR PRESET 32

			_	_			oftware						
			Fe	eatures a				vithout	any pric	or written	notice.		[
	MODE / CHANNEL												
CH:04 RGBW	CH:05 HSI	CH:06 HSI	CH:07 RGBW	CH:08 sRGBWI	CH:08 RGBW	CH:09 RGBW	CH:10 RGBW	CH:11 16Bit	CH:11 HSI	CH:13 sRGBWI	CH:14 RGBW	VALUE	FUNCTION
													COLOR PRESETS [continued]
												129-132	COLOR PRESET 33
												133-136	COLOR PRESET 34
												137-140	COLOR PRESET 35
												141-144	COLOR PRESET 36
												145-148	COLOR PRESET 37
												149-152	COLOR PRESET 38
												153-156	COLOR PRESET 39
												157-160	COLOR PRESET 40
												161-164	COLOR PRESET 41
												165-168	COLOR PRESET 42
												169-172	COLOR PRESET 43
												173-176	COLOR PRESET 44
												177-180	COLOR PRESET 45
												181-184	COLOR PRESET 46
												185-188	COLOR PRESET 47
									5	7	5	189-192	COLOR PRESET 48
												193-196	COLOR PRESET 49
												197-200	COLOR PRESET 50
												201-204	COLOR PRESET 51
												205-208	COLOR PRESET 52
												209-212	COLOR PRESET 53
												213-216	COLOR PRESET 54
												217-220	COLOR PRESET 55
												221-224	COLOR PRESET 56
												225-228	COLOR PRESET 57
												229-232	COLOR PRESET 58
												233-236	COLOR PRESET 59
												237-240	COLOR PRESET 60
												241-244	COLOR PRESET 61
												245-248	COLOR PRESET 62
												249-252	COLOR PRESET 63
												253-255	COLOR PRESET 64
													ZOOM
	4	4	6	7	7	8	8	9	6	8	9	0-255	ZOOM 0% to 100%
													ZOOM FINE
								10				0-255	ZOOM FINE Adjustment

						oports S							
			Fe	eatures c	ire subje	ect to c	hange	without	any prie	or writter	n notice		
	MODE / CHANNEL												
CH:04 RGBW	CH:05 HSI	CH:06 HSI	CH:07 RGBW	CH:08 sRGBWI	CH:08 RGBW	CH:09 RGBW	CH:10 RGBW	CH:11 16Bit	CH:11 HSI	CH:13 sRGBWI	CH:14 RGBW	VALUE	FUNCTION
													PROGRAM MACROS
												0	NO FUNCTION
												1-20	PROGRAM MACRO 01
												21-40	PROGRAM MACRO 02
												41-60	PROGRAM MACRO 03
												61-80	PROGRAM MACRO 04
												81-100	PROGRAM MACRO 05
												101-120	PROGRAM MACRO 06
									7	9	10	121-140	PROGRAM MACRO 07
												141-160	PROGRAM MACRO 08
												161-180	PROGRAM MACRO 09
												181-200	PROGRAM MACRO 10
												201-230	PROGRAM MACRO 11
												221-240	PROGRAM MACRO 12
												241-250	PROGRAM MACRO 13
												251-255	GRADIENT COLOR MACRO
									0	10	11		PROGRAM MACRO SPEED
									8	10	11	0-255	Program Macro Speed SLOW to FAST
									9	11	12		PROGRAM MACRO FADE
									,		12	0-255	0-100%
													DIMMING CURVE MODES
												0-20	STANDARD
												21-40	STAGE
		5					9		10	12	13	41-60	TV
												61-80	ARCHITECTURAL
												81-100	THEATRE
												101-255	Default to Unit Setting
													SPECIAL FUNCTIONS
	F		7	0	0	0	10	11	11	10	14	0-79	Normal
	5	6	7	8	8	9	10	11	11	13	14	80-84	Zoom Reset
												85-255	NO FUNCTION

CLEANING AND MAINTENANCE



CLEANING

Frequent cleaning is recommended to insure proper function, optimized light output, and an extended life. The frequency of cleaning depends on the environment in which the fixture operates: damp, smoky or particularly dirty environments can cause greater accumulation of dirt on the fixture's optics.

- Clean the external lens surface at least every 20 days with a soft cloth to avoid dirt/debris accumulation.
- Never use alcohol, solvents, or ammonia based cleaners.

MAINTENANCE

Regular inspections are recommended to insure proper function and extended life. There are no user serviceable parts inside this fixture, please refer all other service issues to an authorized Elation service technician. Should you need any spare parts, please order genuine parts from your local Elation dealer.

Please refer to the following points during routine inspections:

- A detailed electric check by an approved electrical engineer every three months, to make sure the circuit contacts are in good condition and prevent overheating.
- Be sure all screws and fasteners are securely tightened at all times. Lose screws may fall out during normal operation resulting in damage or injury as larger parts could fall.
- Check for any deformations on the housing, color lenses, rigging hardware and rigging points (ceiling, suspension, trussing). Deformations in the housing could allow for dust to enter into the fixture. Damaged rigging points or unsecured rigging could cause the fixture to fall and seriously injure a person(s).
- Electric power supply cables must not show any damage, material fatigue or sediments. Never remove the ground prong from the power cable.

TECHNICAL SPECIFICATIONS

SOURCE

175W RGBW COB LED 50,000 Hour Average LED Life* *May vary depending on several factors including but not limited to: Environmental Conditions, Power/Voltage, Usage Patterns (On-Off Cycling), Control, and Dimming.

EFFECTS

5° - 53° Motorized Zoom Electronic Strobe Color and Chase Macros Electronic Dimming: 0% - 100% 16-bit Dimming and Variable Dimming Curve Modes

CONTROL / CONNECTIONS

(12) DMX Channel Modes (14 Total Channels)
(4) Button Touch Control Panel
LCD Menu Display
3pin/5pin DMX In/Out
powerCON In/Out

SIZE / WEIGHT

Length: 18.2." (463mm) Width: 16.2" (411mm) Vertical Height: 17.0" (431mm) Weight: 20.0 lbs. (9.0 kg)

ELECTRICAL / THERMAL


AC 110-250V - 50/60Hz 220W Max Power Consumption 5°F to 113°F (-15°C to 45°C)

APPROVALS / RATINGS

CE | IP30

Please Note: Specifications and improvements in the design of this unit and this manual are subject to change without any prior written notice.

DIMENSIONAL DRAWINGS

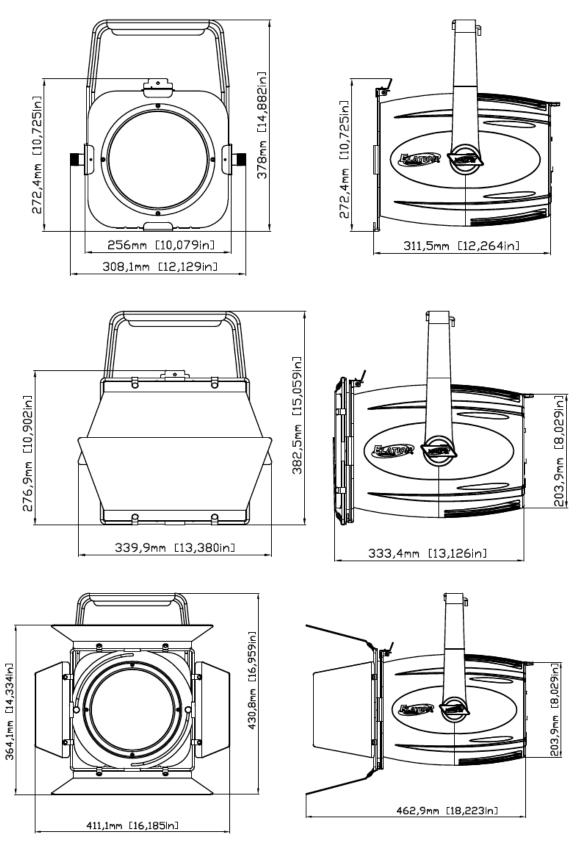

Please Note: Specifications and improvements in the design of this unit and this manual are subject to change without any prior written notice.

ORDER CODE	ITEM
NARROW CLAMP	Heavy Duty Wrap Around Hook Style Clamp
SCABLE 60	60 lbs. Rating 24 Inch Safety Cable
AC3PDMX5PRO	5 ft. (1.5m) 3pin PRO DMX Cable
AC5PDMX5PRO	5 ft. (1.5m) 5pin PRO DMX Cable
PLC3	3 ft. (1m) PowerCON PRO Link Cable
	Additional Cable Lengths Available

OPTIONAL ACCESSORIES