

ETYMÖTIC  
RESEARCH<sup>INC.</sup>

# DÖSIMETER

Personal Noise Dosimeter



*User Manual*  
*ER-200DW8*

# Contents

---

**Note:** This manual can be downloaded from [etymotic.com](http://etymotic.com).

## Operating Instructions

Introduction .....	4
--------------------	---

### Getting Started

Package Contents .....	5
Identification of Parts .....	6
Using the Windscreen .....	7-8

### Operating Instructions

Battery Insertion .....	9
Power Button Functions .....	9
Status Check .....	10
Normal Mode .....	11
Interpreting Results .....	12
QuickCheck Mode .....	13
Interpreting Results .....	14
Reading the Display: LEDs .....	15
What Dose % Means .....	16
NIOSH vs. OSHA Criteria .....	17
Data Logging .....	18
Memory Capacity .....	18-19
Clearing the Memory .....	19
Calibration .....	19
Specifications .....	20
Care and Maintenance .....	21
Warranty .....	21
FCC/Industry Canada Statements .....	21
Risk Factors for Hearing Loss .....	22

---

# Utility Suite Installation

About the Utility Suite .....	23
Installation .....	23-26
Connecting to the PC .....	27-28

# Using the Utility Suite

Utility Suite Screens .....	29
Menus .....	30-31
Setup Screen .....	32
Measurement Mode .....	33
Run Length .....	34
Power Button Functions .....	35
Writing Settings to the Dosimeter .....	36
Restore Default Settings .....	37
Data Screen .....	38
Downloading Stored Data .....	38
Data Table .....	39
Data Graphs .....	40
Normal Runs .....	40
QuickCheck Runs .....	41
Predictive Data Feature .....	41-42
Clearing the Memory .....	42
Saving Data .....	43
Printing Reports .....	44
Previously Saved Reports .....	44
Reports and Data Files .....	45-46

# Introduction

Hearing loss from loud sound affects millions of people. Noise-induced hearing loss is preventable, but most people don't know how long they can listen to loud sound without risking hearing damage. A single noise exposure may not result in hearing loss, but permanent damage to the inner ear from noise adds up over time. The accumulation of too much noise day by day, year after year, is the determining factor in hearing loss risk. A sound level meter is a device that measures noise at a particular point in time, while a dosimeter measures sound levels for many hours and calculates the cumulative noise dose in percent.

Daily noise dose is determined by both the intensity of the sound and the amount of exposure time. A 100% dose means that a person has reached the maximum noise exposure for the day, and continued exposure to loud sound could lead to hearing loss. Ideally, hearing protection should be used before the dose reaches 100% since dose limits are based on averages, and some ears are more susceptible to noise damage than others. When the noise dose exceeds 50% a person has reached half the maximum noise exposure for the day and it's a good idea to use hearing protection to prevent over-exposure, particularly if a 50% dose reading is reached early in the day. Noise dose limits are based on a 5-day work week, and assume quiet during non-work time. So the noise dose limit per week is 500% (100% x 5 days). Using hearing protection when dose exceeds 50% reduces the likelihood of exceeding the limit of 500% dose per week.

# Getting Started

The ER-200DW8 Personal Noise Dosimeter is an inexpensive, easy-to-use device that provides a good estimate of noise dose and alerts the user to the risk of over exposure.

In cases of gunfire and other impulse noise, no conventional dosimeter measures the risk accurately. More specialized equipment is required to measure impulse noise.

The ER-200DW8 has three modes of operation:

- **Status:** displays the previously measured results, indicates when batteries need to be replaced, and indicates when the device memory is full.
- **Normal:** measures and displays noise dose continuously for up to 7 days; provides an early warning for over-exposure and the need for hearing protection.
- **QuickCheck:** measures noise for two minutes then calculates and displays the estimated dose per hour. QuickCheck provides a quick way to measure a specific noise source to determine if permissible exposure levels will be exceeded and hearing protection is needed (e.g., loud equipment, vehicles, power tools, concerts or sporting events).

## Package Contents

- ER-200DW8 Personal Noise Dosimeter
- USB Cable
- PC Interface Software CD
- Windscreen
- Batteries: Three AAAA Alkaline\*
- User Guide

\*AAAA batteries are available at electronics retailers and at [etymotic.com](http://etymotic.com)

# Identification of Parts

- A Microphone
- B Windscreen Socket
- C LEDs
- D Power Button
- E Clip
- F Battery Compartment
- G USB Socket



## Using the Windscreen

For accurate measurements, the 35 mm (1.4") windscreen included with the ER-200DW8 should be used when noise is measured outdoors or near any turbulence, e.g., from a fan. The foam windscreen allows accurate measurement in winds up to 15 to 20 mph.


**Note: Blowing across the microphone opening on the dosimeter can cause the same turbulence as a 50 mph wind.**

The windscreen contains a plastic pin on the interior to anchor it to the ER-200DW8. To attach the windscreen, carefully pull the foam back to visualize the pin. Place the pin in the windscreen socket at the top of the ER-200DW8. Gently pull the foam down over the top of the dosimeter case. To remove the windscreen, grasp the windscreen and pin and pull straight out.

## Windscreen



Windscreen fits on top of the dosimeter

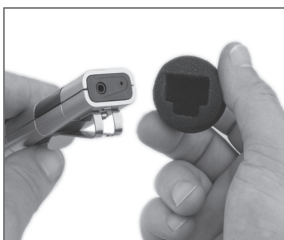

Pull up the foam and line up the windscreen pin with the windscreen socket on top of the dosimeter



Push firmly into the opening until you hear it snap in



Gently pull foam down over top of dosimeter case. Dosimeter is ready to operate





# Operating Instructions

## Battery Insertion

On the back side of the dosimeter, locate the arrow on the battery compartment.

- Press down and slide the cover off.
- Insert three AAAA batteries (supplied) positive side down as shown.
- Replace cover.



## Power Button Functions

The Power button is used to select the type of run. This sequence cannot be changed.

- One press: Displays Status
- Two presses: Starts a Normal run
- Three presses: Starts a QuickCheck run



# Status Check

## Power ON

- Press and release the power button **one time**.  
The 12.5% green LED illuminates briefly.
- The previously measured noise dose is displayed (flashing LED).

## Device Status is Displayed

- **Two Green LEDs**  
Battery is good; memory capacity is acceptable
- **Two Green and one Yellow LED**  
Battery is low or memory capacity is low
- **Two Red LEDs — 3 Possibilities**
  - Battery is dead
  - Device memory is full
  - Hardware failure

Good  
2 Green



Caution  
2 Green and  
1 Yellow



Warning  
2 Red



# Normal Mode

**Run Length: Programmable  
(16 hours; 3 days; 5 days; 7 days)**

## **Power ON**

- Press and release the power button **two times**.
  - The 12.5% (green) LED illuminates on the first press
  - The 25% (green) LED illuminates on the second press
- Three LEDs (green, yellow and red) flash twice. Then the 12.5% LED flashes, indicating the dosimeter is now measuring and integrating sound levels.

## **Measurement Window**

In Normal mode, dose values are obtained every 220 msec, summed over a 3.75 minute interval and saved in non-volatile memory every 3.75 minutes (16 times per hour).

## **Measurement Period**

The default measurement period is 16 hours. The current dose is continually displayed by a flashing LED. At the end of the measurement period three LEDs (green, yellow and red) flash twice, indicating the measurement is complete. The dosimeter automatically shuts off.

Dose is stored in the device memory and will be displayed when the device is powered on in Status mode. Stored data can also be downloaded to a PC.

## **Power OFF**

- To shut off prior to automatic shutdown: press and hold the power button for two seconds.
- Three LEDs (green, yellow and red) flash twice and the device shuts off.

# Interpreting Results

## Normal Mode (Based on NIOSH Criteria)

LED	Dose%	Risk Factor	Hearing Protection Needed
green 12.5% (slow flash)	< 12.5%	No risk of hearing loss	No
green 12.5% (regular flash)	12.5 - 24%	No risk of hearing loss	No
green 25%	25 - 49%	No risk of hearing loss	No
yellow 50%	50 - 99%	1/2 or more of daily dose	Yes (conservatively)
red 100%	100 - 199%	Exposure limit exceeded	Yes
red 2x	200 - 399%	> 2x allowable daily dose	Yes
red 4x	400 - 799%	> 4x allowable daily dose	Yes
red 8, 16, 32x (regular flash)	8x	> 8x allowable daily dose	Yes
red 8, 16, 32x (double flash)	16x	> 16x allowable daily dose	Yes
red 8, 16, 32x (fast flash)	32x	> 32x allowable daily dose	Yes

# QuickCheck Mode

**(Estimated Dose per Hour) Test Time: 2 minutes**

## Power ON

- Press and release the power button **three times**.
  - The 12.5% (green) LED illuminates on the first press.
  - The 25% (green) LED illuminates on the second press
  - The 50% (yellow) LED illuminates on the third press.
- The LEDs sweep twice from bottom to top.
- The bottom LED flashes green throughout the measurement, indicating QuickCheck mode.
- The solid LED indicates the predicted dose per hour.

After 2 minutes the LEDs sweep twice from bottom to top, indicating the measurement is complete.

- The solid LED (predicted dose per hour) displays for 7 seconds while the bottom LED flashes green (indicating QuickCheck). The dosimeter then shuts off.
- Result is stored in the device memory and is displayed when the device is turned on again in Status mode. Stored data can also be downloaded to a PC.

## Power OFF

To power off prior to QuickCheck's automatic shutdown you must wait at least 15 seconds into the measurement.

- Press and hold the power button for 2 seconds. The LEDs will sweep twice, bottom to top.
- The estimated dose per hour (solid LED) is displayed for 7 seconds while the bottom LED flashes green (indicating QuickCheck). The dosimeter shuts off.

**NOTE:** If the dosimeter is shut off prior to its automatic shutdown, it will still calculate the predicted hourly dose based on the sound level and duration of the measurement.

# Interpreting Results


## QuickCheck Mode (Based on NIOSH Criteria)

Solid LED is	Est. Dose per hour	Est. Dose per 8 hours
No LED lit	< 12.5%	<100%
green 12.5%	12.5 - 24%	100-192%
green 25%	25 - 49%	200 - 392%
yellow 50%	50 - 99%	400 – 792%
red 100%	100 - 199%	800 – 1592%
red 2x	200 - 399%	1600 -3192%
red 4x	400 - 799%	3200 – 6392%
>8x alternating flash red/green	>800%	>6400%

# Reading the Display: What the LEDs Mean

## LED Color

The dosimeter uses color-coded LEDs to display noise dose in percent.

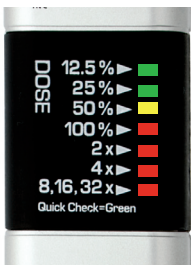

**Green (Safe):** Noise dose is below 50%

**Yellow (Borderline):** Noise dose is greater than 50% and less than 100%

**Red (High Risk):** Noise dose is greater than 100%

## LED Flash Rate In Normal mode:

- A slow flashing LED at 12.5% means that the noise dose is at or below 12.5% (i.e., between 0% and 12.5%). A fast flash at 12.5% indicates the dose exceeds 12.5% (i.e., dose is between 12.5 and 25%)
- LEDs 25% to 4x flash rapidly when that dose level is exceeded
- For the bottom LED (8, 16, 32x):
  - Regular flash: dose exceeds 8x
  - Double flash: dose exceeds 16x
  - Fast continuous flash: dose exceeds 32x

## In QuickCheck mode:

- All LEDs are solid except the bottom LED, which flashes green to indicate QuickCheck mode.
- If dose per hour exceeds 8x the bottom LED flashes alternately red and green.

## What Dose % Means

Noise dose is a measurement of noise exposure. It is the combination of the amount of sound and the amount of exposure time. While sound levels may fluctuate over time, noise dose never decreases over time; it either remains stable or increases. Think of 100% dose as the exposure limit for an entire day. Note, however, that dose limits are based on a 5-day work week and assume quiet the rest of the time; therefore 500% is the exposure limit for an entire week. The risk of hearing impairment grows with increasing noise dose.

The limits of safe exposure to high sound levels are not absolute, since people differ in their degree of susceptibility to noise-induced hearing loss. Dose limits are based on average susceptibility. A small fraction of the population is more susceptible than average, and for these people a 100% dose per day (or 500% per week) may be enough noise exposure to cause hearing loss over time. Likewise, a small fraction of the population is less susceptible than average, and these people may be able to tolerate noise exposures exceeding 500% in a week without developing significant hearing problems. Most people will fall somewhere between the two extremes.

Since noise-induced hearing loss is irreversible and there is no way to determine individual susceptibility beforehand, a conservative approach would be to monitor the noise dose and use hearing protection whenever the noise dose exceeds 50%. By doing this, the risk of over-exposure is minimized.



# NIOSH vs. OSHA Criteria for Estimating Allowable Noise Dose

In the United States two standards are used to define how noise dose is calculated: National Institute for Occupational Safety and Health (NIOSH) Criteria for a Recommended Standard (NIOSH, 1998) and Occupational Safety and Health Administration (OSHA) Occupational Noise Standard (OSHA, 1983).

When deciding which standard to use it is important to note that the differences in these standards have a significant impact on hearing loss risk. The more conservative NIOSH criteria are based on scientific data relating noise levels to risk of hearing damage, and are more protective of hearing than the OSHA criteria. OSHA criteria allow for higher exposure levels and/or longer exposure times as compared to the NIOSH criteria, and are therefore less protective of hearing.

**EXAMPLE:**

NIOSH 100% dose = 85 dB for 8 hrs or 88 dB for 4 hrs

OSHA 100% dose = 90 dB for 8 hrs or 95 dB for 4 hrs

## Allowable Daily Exposures (Hours per Day) Based on OSHA and NIOSH

Noise level dBA	85	88	90	92	94	95	97	100
OSHA	16		8	6		4	3	2
NIOSH	8	4			1	$\frac{3}{4}$	$\frac{1}{2}$	$\frac{1}{4}$

## Data Logging

Normal and QuickCheck results are stored in the dosimeter and can be downloaded, saved and printed using the ER-200DW8 Utility Suite. See Utility Suite User Guide for instructions and information.

## Memory Capacity

The ER-200DW8 has a non-volatile memory. Data stored in the device are retained even if the batteries are removed after a completed run. Data can be downloaded and saved to a PC after each run or after multiple runs. The ER-200DW8 can be set to overwrite data when its memory is full; in this case, the oldest run is the first to be overwritten. If the ER-200DW8 is set so that data is not overwritten, when the device memory is full, data must be downloaded and/or removed from the device to clear the memory for further data runs.

There are 48 blocks of data storage available in the instrument. The number of "runs" the device can store depends on the type and length of each run.

**QuickCheck:** 2 blocks

**Normal (1 hr):** 2 blocks

**Normal (16 hr):** 5 blocks

**Normal (3 days):** 19 blocks

**Normal (5 days):** 31 blocks

**Normal (7 days):** 43 blocks

Any combination of runs can be used up to the memory capacity of the device.

Examples:

- a. 24 QuickCheck runs  
[24 \* 2 blocks each = 48 total]
- b. Nine 16-hour runs + One QuickCheck run  
[9 \* 5 blocks each + 2 = 47 total]
- c. Two 3-day runs + Two 16-hour runs  
[2 \* 19 blocks each + 2 \* 5 blocks each = 48 total]
- d. One 5-day run + Three 16-hour runs + 1 QuickCheck run  
[31 blocks + 3 \* 5 blocks each + 2 = 48 total]
- e. One 7-day run + One 16-hour run  
[43 blocks + 5 blocks = 48 total]

When the memory is full the Status indicator (accessed with one press of the power button) shows two red LEDs:



## Clearing the Memory

When the ER-200DW8 memory is full and the dosimeter is set not to overwrite the data, then data must be removed from the device before additional data runs can be obtained.

## Calibration

The ER-200DW8 dosimeter is factory calibrated. Advanced users can verify calibration using the ER-200DW8 Utility Suite. See [www.etymotic.com](http://www.etymotic.com) for more information.

# Specifications

The default settings used by the ER-200DW8 for calculation of noise dose are consistent with ANSI S1.25–1991 (R2002) Specification for Personal Noise Dosimeters and NIOSH Criteria for a Recommended Standard (NIOSH, 1998).

Default settings are:

- Exchange rate: 3 dB
- Criterion level: 85 dB
- Threshold level: 75 dB

**Run Length:** 16 hours\*

**Calibration Accuracy:**  $\pm 2.5$  dB

**Frequency Weighting:** A

**Response:** Slow

**Temperature Range of Operation:**

-10°C to 45°C (14°F to 113°F)

**Omni-directional Microphone:**

Flat from 100 Hz to 15 kHz

**Power Supply:** Three AAAA batteries

**RMS Detector:** Dynamic range 60 dB (70 to 130 dB)

**Battery Life:** > 200 hours continuous use

\*Note: to make an 8-hour measurement, the dosimeter should be set to measure for 16 hours. This timeframe allows for an adequate time window around the measurement and accommodates overtime and swing-shift scheduling.

Flexibility in the dosimeter design allows programmable control of dosimeter settings using the PC interface.

Choices include:

- **Exchange rate:** 3, 4 or 5 dB
- **Criterion level:** 70 to 95 dB, in 1-dB steps
- **Threshold level:** 70 to 90 dB, in 1-dB steps
- **Measurement time (Run Length) in Normal Mode:** 16 hours; 3 days; 5 days; 7 days

## Care and Maintenance

- Do not expose to extreme temperatures
- Do not immerse in any liquids
- Clean with a soft dry cloth
- Avoid dropping and hard knocks to the unit

## Warranty

Etymotic Research, Inc. warrants this product against defects in material or workmanship for a period of one year from the date of original purchase. Etymotic will repair or replace the defective product at its option if returned within the warranty period to our service facility. This warranty is in lieu of all other warranties, expressed or implied, including, but not limited to, any implied warranty of merchantability or fitness for a particular purpose.

## FCC / Industry Canada Statements

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:  
(1) this device may not cause harmful interference, and  
(2) this device must accept any interference received, including interference that may cause undesired operation.

This class B digital apparatus complies with Canadian ICES-003.

Cet appareil numérique de la classe B est conforme à la norme NMB-003 du Canada.

## Risk Factors for Hearing Loss

Health risks from excessive noise exposure include permanent hearing loss and tinnitus (ringing in the ears). Other factors such as genetics, exposure to smoke, pesticides, chemical solvents and certain medications increase the risk of hearing loss. Some of these factors make noise exposure more damaging to hearing than noise exposure alone. The dosimeter predicts average risk, not individual risk.

# About the Utility Suite

The ER-200DW8 Utility Suite allows you to:

- Download, view, save, and print data from the ER-200DW8 Personal Noise Dosimeter
- Change measurement settings on the ER-200DW8 Personal Noise Dosimeter

## System Requirements

Windows 8 or later\*

One of the following PDF readers:

- Adobe Acrobat Reader (X or later)
- Adobe Acrobat (X or later)
- Adobe Acrobat Pro (X or later)

1G RAM (32-bit OS) or 2G RAM (64-bit OS)

USB Port

A screen resolution of 1024 x 768 (or better) is recommended. The size of the Utility Suite window cannot be adjusted. Lower resolution values will result in an inability to view the full screen.

\*Version 4.04 is backward compatible with:

- Windows XP (SP2 or later)
- Windows Vista (SP2 or later)
- Windows 7 (SP1 or later)

# Installation



**Important:** Do not connect the dosimeter to your PC until the Utility Suite software has been installed.

- The ER-200DW8 Utility Suite must be installed on each PC on which data will be downloaded and stored.


Insert the Utility Suite installation CD into the PC.

Using AutoPlay, Click "Run setup.exe" to begin installation.

If AutoPlay is disabled, navigate to the CD using Windows Explorer and Double-Click setup.exe

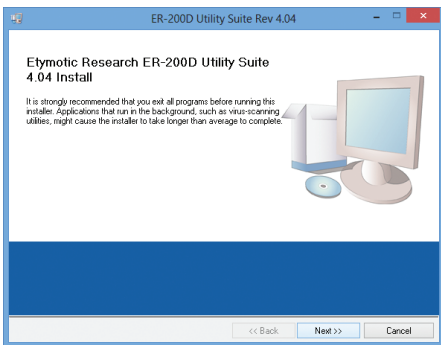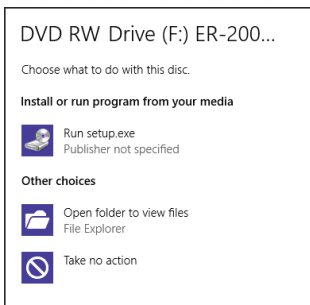


Two locations will appear for the Destination Directory. Important: Do not change the installation directories from the default locations.

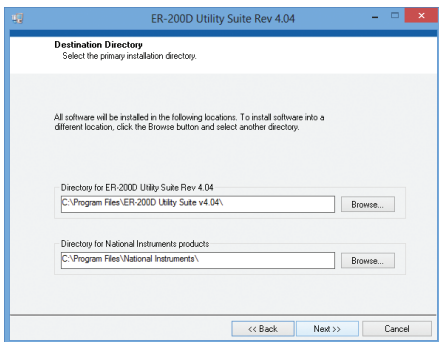


Click Next >>




Accept all licensing agreements.

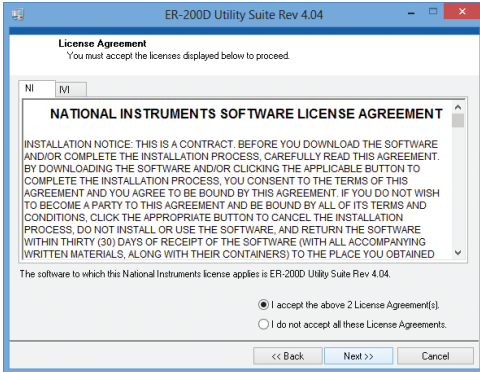


Click Next >>

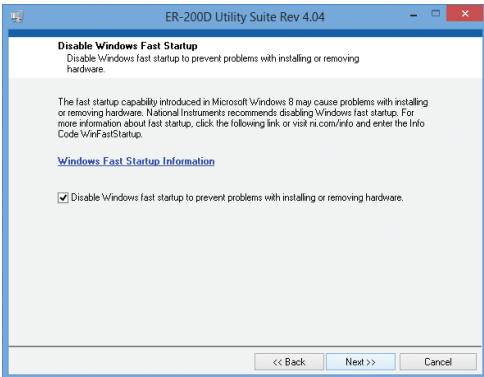


Click Next >>

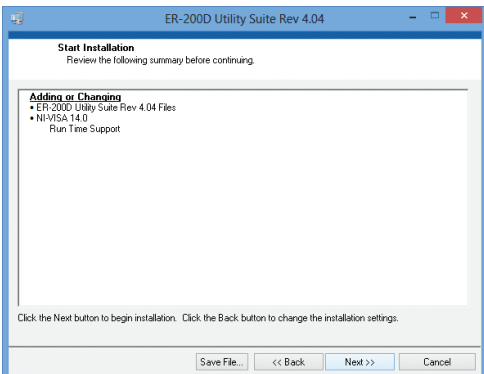


Click Next >>

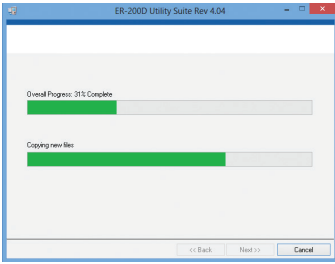

Wait for the installer to finish copying all necessary files.

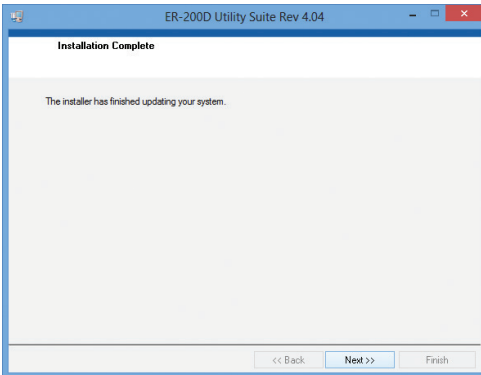

Click Next >>

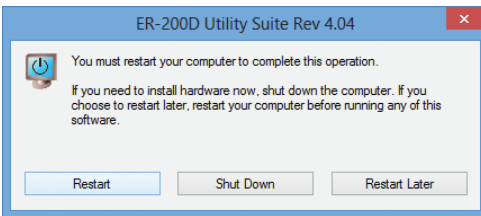

After installation is complete you will be prompted to restart the PC. After restarting your PC, you can connect the dosimeter to the PC with the cable provided.

An ETYMOTIC RESEARCH Logo for the Utility Suite will be on your computer desktop. ▶



# Connecting to the PC

Important: Plug the cable directly into a PC USB port. Do not plug it into a USB hub.

Note:

Each dosimeter has a unique serial number. Multiple dosimeters can be interfaced with a single PC; however, only one dosimeter at a time can be connected to the PC.

1. Remove the battery cover of the ER-200DW8



2. Connect the USB cable to the ER-200DW8.



3. Connect the USB cable to the computer.



# Utility Suite Screens

Open the ER-200DW8 Utility Suite by double-clicking the icon. ▶




ER200-D  
Utility Suite  
Rev 4.04


There are 3 main screens in the Utility Suite:

Home, Setup, and Data.

## Home Screen

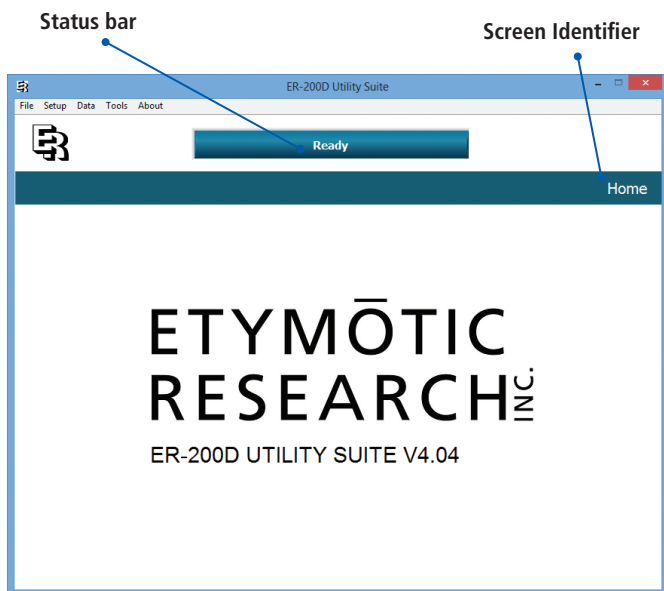

# Menus



## File

- **Open:** Opens saved reports
- **Save:** Creates and saves a report for the currently selected data run
- **Save All:** Creates and saves reports for **all** displayed data runs
- **Print:** Prints a report for the currently selected data run
- **Print Preview:** Generates a print preview for the currently selected data run
- **Exit:** Closes the software

## Setup

- **View Setup Window:** Displays Setup information for the connected ER-200DW8
- **Read ER-200D Setup:** Reads setup information stored on the connected ER-200DW8
- **Write From Setup Panel:** Writes the displayed setup information to the connected ER-200DW8
- **Restore Factory Defaults:** Restores Setup to factory default settings

## Data

- **View Data Window:** Displays data screen
- **Read ER-200D Data:** Reads data from the connected ER-200DW8
- **Delete ER-200D Data:** Deletes data from the connected ER-200DW8

- **Describe Highlighted Run:** Opens a text box for the user to enter details for the highlighted data run
- **Describe All Runs:** Opens a text box for each displayed run
- **Clear Screen:** Clears the data screen. Data remain on the ER-200DW8 until removed (see Data – Delete above).

## Tools

### Check Calibration

- **Microphone:** Allows user to check microphone calibration
- **Direct Input** (special uses only): Allows user to check calibration of direct input


The ER-200DW8 is factory calibrated. Calibration values affect the calculated noise dose. Only expert users should change calibration settings. Users who wish to check microphone calibration need a signal source that generates a 94 dB SPL, 1-kHz signal at the microphone. Calibration of the direct input feature (special use only) can be checked with a 10mV, 1-kHz signal. Contact customer service at Etymotic Research for additional information on Advanced Features.

### Log In For Advanced Features

Access to Advanced Features lets expert users change calibration settings, update firmware and save and upload setup images. If performed incorrectly, changing these settings can result in serious measurement errors. Access to Advanced Features requires a user name and password.

## About

- **About:** Displays the software version.

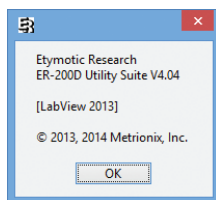


# Setup Screen

The Setup Screen is used to customize the dosimeter.


Changes made on the setup screen must be written to the dosimeter (see “Writing settings to the Dosimeter”).

Any changes not written to the dosimeter will be lost and the device will revert to its default or previously stored settings.

From the menu bar click “Setup.”  
Click “Read ER-200D Setup.” ▶

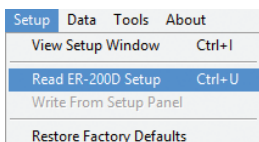


The Status Bar will display “Reading ER-200D Setup” followed by “Ready.” ▼

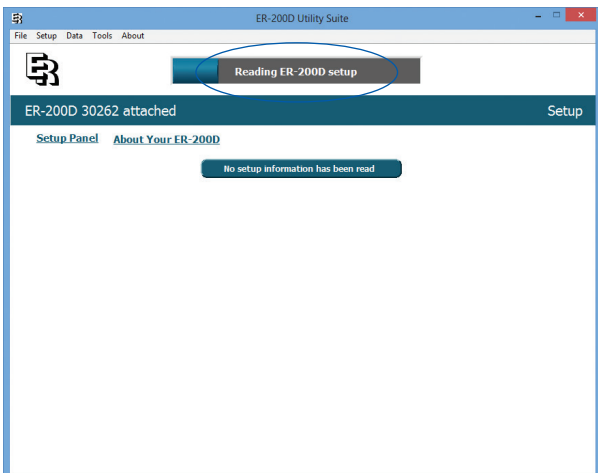



The Setup Screen displays the factory default settings the first time the dosimeter is used. Thereafter, stored settings are displayed.

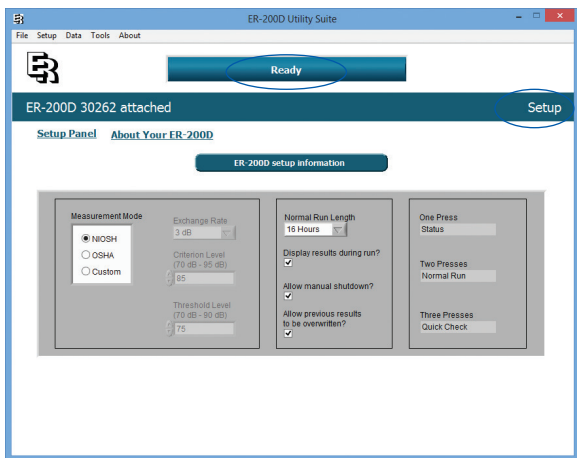


## Measurement Mode

NOTE: Exchange rate, criterion level and threshold level determine how noise dose is defined and computed, and will impact the dose results. The default settings correspond to NIOSH (1998) recommendations, which are more conservative (more protective) than the OSHA criteria.

### NIOSH (default)

Exchange rate: 3 dB  
Criterion level: 85 dB  
Threshold level: 75 dB

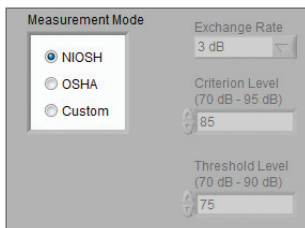

### OSHA

Exchange rate: 5 dB  
Criterion level: 90 dB  
Threshold level: 80 dB


### Custom

Exchange rate: 3, 4 or 5 dB  
Criterion level: 70 to 95 dB, in 1-dB increments  
Threshold level: 70 to 90 dB, in 1-dB increments

# Run Length

## Normal Run Length 16 Hours (default) ▶

Allows for adequate run time before and after a typical 8-hour work shift, as well as any overtime that may occur.

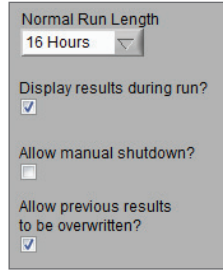

## Alternate Options

3 Days, 5 Days and 7 Days

## Run-Time Clock

The ER-200DW8 has a run-time clock, but not a real-time clock. For run lengths over 16 hours, the dose continues to accumulate the entire measurement time. Dose does not "auto-zero" every 24 hours. Users requiring the average dose per day will need to download and view the data in the saved text file to calculate the average dose per day.

**NOTE:** For extended run lengths (3, 5 or 7 days) it is recommended you disable the "Allow Manual Shutdown" feature and install new batteries prior to starting.

## Display Results During Run

This ensures the LEDs are lit during all measurements.

**Unchecked:** The top (12.5%) LED flashes to indicate the dosimeter is functioning, but the dose value is not displayed.

## Allow Manual Shutdown

Allows user to manually power OFF before the end of a Normal or QuickCheck run.

**Unchecked:** Dosimeter remains ON until the end of the Normal or QuickCheck run, after which it automatically powers OFF. This prevents intentional or unintentional shutdown of the device.


## Allow Previous Results to Be Overwritten

The dosimeter automatically overwrites the oldest data when the device memory is full without signaling the user. For more information on memory capacity and the number of data runs that can be stored, see pages 18-19.

**Unchecked:** Ensures that new data do not overwrite older saved data in the device. LEDs indicate when the device memory is full. Data must be downloaded and/or removed from the device to clear the memory for more runs.

## Power Button Functions

The Power Button is used to select the type of run. This sequence cannot be changed. ▶

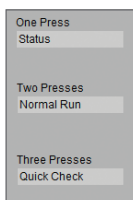


## About Your ER-200DW8

Displays identifying information about the connected dosimeter, which is useful to the factory if troubleshooting a specific device is necessary.

From the Setup screen, click “About Your ER-200D”

Information on the “About Your ER-200D” screen cannot be changed by the user.

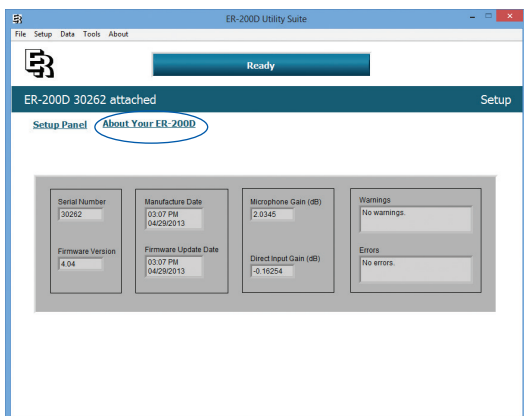



# Writing Settings to the Dosimeter

When settings are changed on the Setup screen, "Unsaved setup information" flashes until the settings are written to the dosimeter.

**Unsaved setup information**

## To Save Settings



- Click "Setup" on the menu bar
- Click "Write from Setup Panel" from the dropdown menu

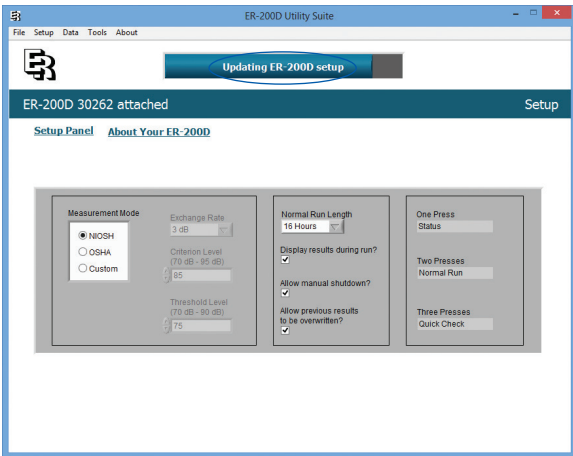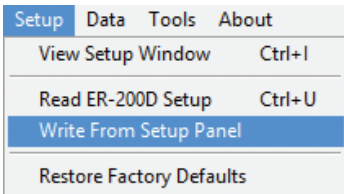

- Status bar indicates "Updating ER-200D Setup"
- After changes are programmed, status bar displays "Ready"

# Restore Default Settings

- Click "Setup" from the menu bar
- Click "Restore Factory Defaults"

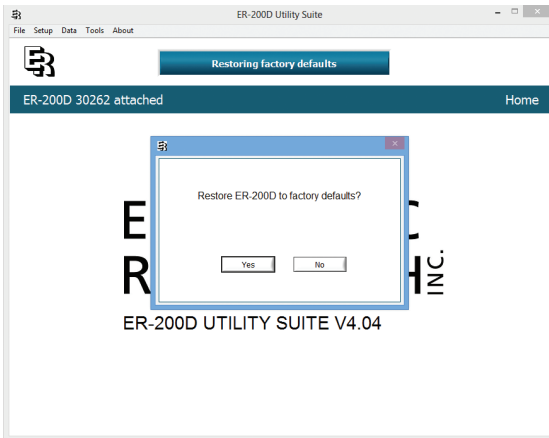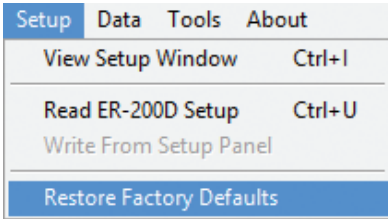


- Click "Yes"
- Status bar indicates "Restoring Factory Defaults"
- After changes are programmed, status bar displays "Ready"


# Data Screen

## Downloading Stored Data

- From either the Home screen or Setup screen, click “Data” on the menu bar.
- Click “Read ER-200D Data.”

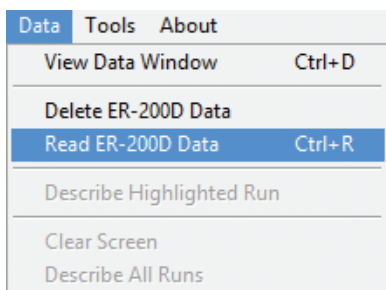

The blue status bar indicates “Reading ER-200D data”

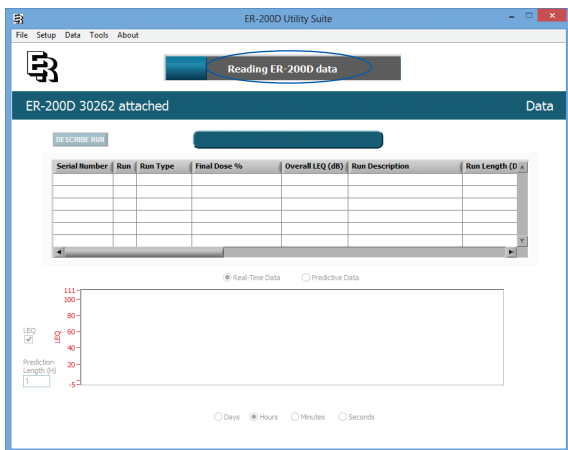

# Data Table

All data runs are displayed in the Data Table, with the most recent run at the top of the list.

Serial Number	Run	Run Type	Final Dose %	Overall LEQ (dB)	Run Description	Run Length (DD:HH:MM:SS)
30262	010	Normal Run	1400% (1.4X)	105.23	Hoffman Estates HS Marchin	00:01:04:37
30262	009	Normal Run	< 1%	58.77	Dosimeter sitting on kitchen	00:16:00:00
30262	008	Normal Run	190% (1.9X)	84.58	CES: exhibit hall, Cirque (Low	00:16:00:00
30262	007	Normal Run	160% (1.6X)	84.07	Goalgetter's Park, Field 1. No	00:16:00:00
30262	006	Quick Check	100% (1.0X)	94.12	long, loud "AHHH" test	00:00:01:53
30262	005	Quick Check	160% (1.6X)	96.03		00:00:01:53

- **Serial Number:** Device serial number
- **Run:** Sequential, beginning with 001
- **Run Type:** Normal or QuickCheck
- **Final Dose %:** Dose at end of run
- **Overall Leq:** A-weighted continuous equivalent sound level
- **Run Description:** This is a textbox in which the user can enter data describing the run

EXAMPLE:

"Jane Smith, Packing Line 1, Full Capacity, First Shift, 5-18-2009."

## To Enter A Run Description

- Double-click on the desired run or click the blue "Describe Run" box on the screen.
- Type information into dialog box and click OK.
- Run description will be immediately updated.


**Note:** Once a report is created, the Run Description cannot be altered in the report. A new report can be made, but it must be saved using a different file name.

- **Run Length:** Actual run time, displayed as Days-Hours-Minutes-Seconds
- **Max Run Length:** Maximum time the dosimeter could run
- **Exchange Rate, Criterion and Threshold:** As selected from the Setup Screen
- **Signal Source:** internal microphone (default) or direct input
- **Calibration:** Calibration value used at the time of the run
- **Run Termination:** Completed normally; manual shutdown; or sudden power loss
- **Warnings:** Any warnings that occurred during the run
- **Software Version:** software version at the time of the run

# Data Graphs

- The data graph displays dose data from the run highlighted in the Data Table.
- To display graphs for other runs, select the run by clicking on the line in the Data Table that contains the run data.
- Dose is displayed by blue fill on the graph and indicated numerically on the right side of the graph.

## Normal Runs

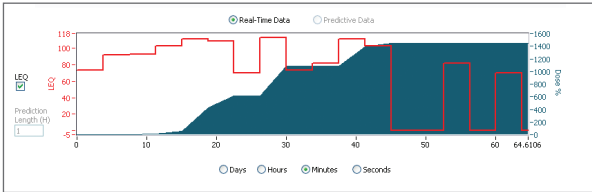

**Leq (red)**


**Dose % (blue)**

- **Leq** (Equivalent Continuous Level) is displayed on the left side of the graph and indicated with a red line on the graph when the Leq box is checked. Leq is only available for Real-Time Data.
- For Normal runs, only Real-Time Data are available.
- In Normal Mode, dose values are obtained every 220 msec and summed over a 3.75 minute interval.



# QuickCheck Runs

- QuickCheck run time is approximately 2 minutes.
- Estimated dose per hour is displayed in the data table.

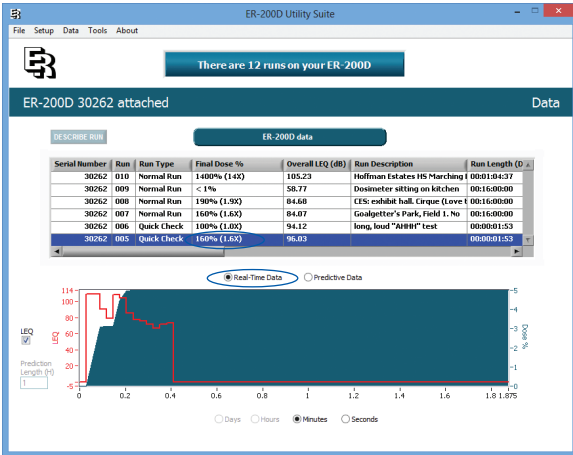



Real-time data are displayed

# Predictive Data Feature

Runs can be viewed as Real-Time Data or Predictive Data.

Selecting Predictive Data allows the user to see estimated dose for various time periods.

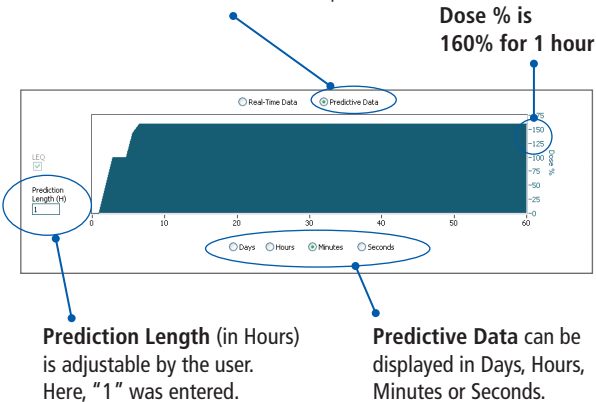

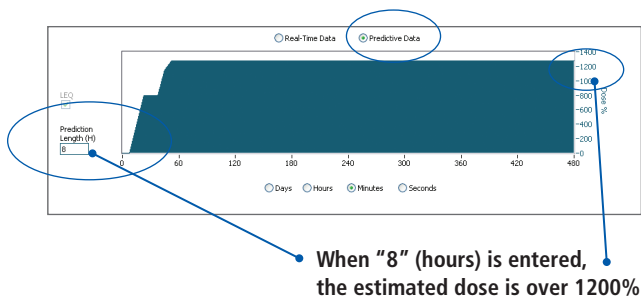

**Note** Only dose per hour data are displayed on the printed report.

## Clearing the Memory

**Important:** Download and save data from the dosimeter prior to clearing the memory.

- Click "Data" on the menu bar
- Click "Delete ER-200D Data"
- A dialog box appears to confirm data deletion
- Click "Yes"

Data	Tools	About
View Data Window		Ctrl+D
Delete ER-200D Data		
Read ER-200D Data		Ctrl+R
Describe Highlighted Run		
Clear Screen		
Describe All Runs		

When the ER-200DW8 memory is full and the dosimeter is set not to overwrite the data, then data must be removed from the device before additional data runs can be obtained.

# Saving Data

Reports are created and saved in pdf format. Data are also saved in a text file when a report is created.

- Prior to saving a report enter a run description.
- Reports are write-protected and can't be changed after they are saved.

## **Disconnect Without Saving**

- If user reads and displays data and then disconnects
  - Data are not saved to the PC.
  - Data will disappear from the Data screen but are still present in the dosimeter.

## **To Save a Highlighted Run**

- Click "File" on the menu bar.
- Click "Save" on the dropdown menu.
- A default name is assigned using the dosimeter serial number and run number (e.g., SN20056 Run 010).
- The file can be renamed using any combination of letters and numbers.
- A dialog box appears asking if you want to print the report.

## **To Save All Runs**

- Click "File" on the menu bar.
- Click "Save All" on the dropdown menu.

# Printing Reports

## **To Save and Print**

- Save the selected report as described above. A dialog box appears asking if you would like to print.

## **To Print Without Saving**

- From the menu bar Click "File." Click "Print." The file will print but it will not be saved.

## Previously Saved Reports

Previously saved reports can be uploaded, viewed and printed from within the Utility Suite or your PDF viewer. The dosimeter does not have to be connected to the PC. To view reports from within the Utility Suite:

- Click "File" on the menu bar.
- Click "Open."
- Select a previously saved file.


## **To Enter a Run Description for a Previously Saved File**

- Open the desired file.
- Enter a run description.
- Save the file using a different file name than the original.

# Reports and Data Files

The default location for reports is C:\Etymotic Research\ER-200D Utility Suite\Reports. The user can save reports to a different location if desired.


## PDF Report:

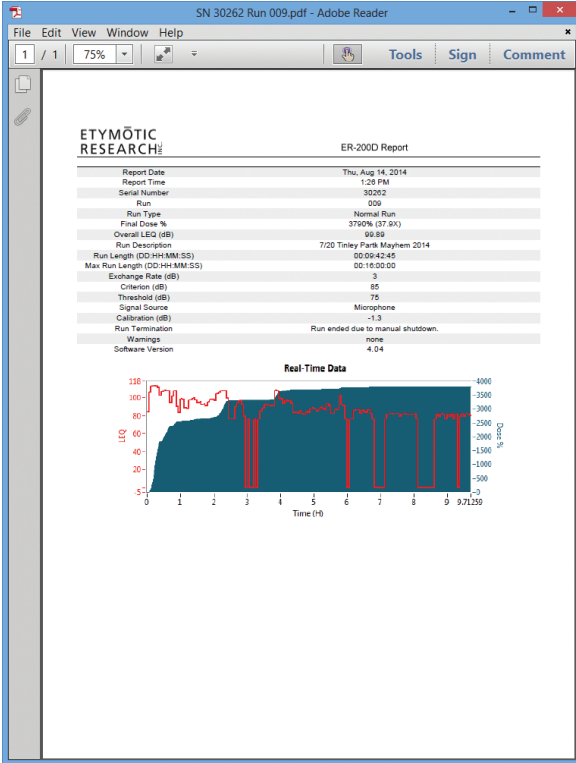

## Text File:

The text file contains a data table documenting: Time; Dose%; Leq; and Predicted Time and Predicted Dose% (QuickCheck only). Values are shown for each 3.75 minute time block. The Data Table can be used to create graphs if desired, using a program such as Excel.

Data are recorded as fractions of an hour; data at 3.75 minutes is written as 0.062 (3.75 minutes ÷ 60 minutes = 0.062).

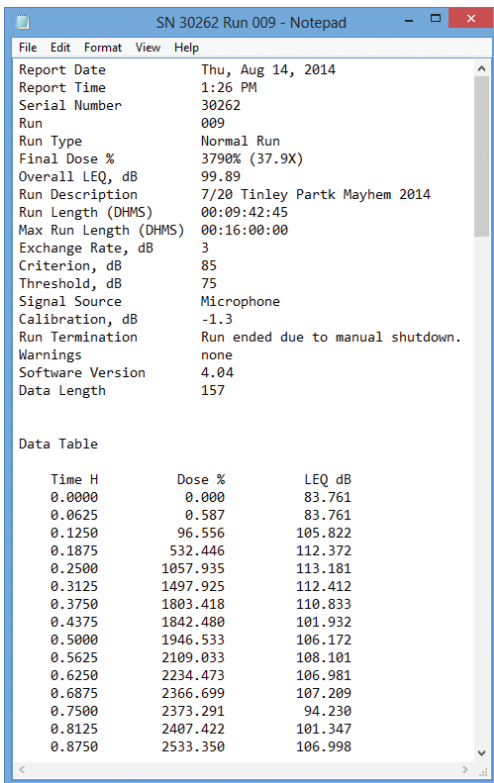

The screenshot shows a Notepad window titled "SN 30262 Run 009 - Notepad". The text content is as follows:

```
Report Date      Thu, Aug 14, 2014
Report Time     1:26 PM
Serial Number   30262
Run            009
Run Type       Normal Run
Final Dose %   3790% (37.9X)
Overall LEQ, dB 99.89
Run Description 7/20 Tinley Park Mayhem 2014
Run Length (DHMS) 00:09:42:45
Max Run Length (DHMS) 00:16:00:00
Exchange Rate, dB 3
Criterion, dB  85
Threshold, dB  75
Signal Source  Microphone
Calibration, dB -1.3
Run Termination Run ended due to manual shutdown.
Warnings      none
Software Version 4.04
Data Length   157
```

Below the summary is a "Data Table" with three columns: Time H, Dose %, and LEQ dB.

Time H	Dose %	LEQ dB
0.0000	0.000	83.761
0.0625	0.587	83.761
0.1250	96.556	105.822
0.1875	532.446	112.372
0.2500	1057.935	113.181
0.3125	1497.925	112.412
0.3750	1803.418	110.833
0.4375	1842.480	101.932
0.5000	1946.533	106.172
0.5625	2109.033	108.101
0.6250	2234.473	106.981
0.6875	2366.699	107.209
0.7500	2373.291	94.230
0.8125	2407.422	101.347
0.8750	2533.350	106.998

The Raw Data are used by the PC Interface program for calculations.



# ETYMŌTIC RESEARCH<sup>INC</sup>

61 Martin Lane • Elk Grove Village, IL 60007  
[www.etymotic.com](http://www.etymotic.com) • 1-888-389-6684 • 1-847-228-0006

©2014 ER078122-A