


Overview

The EOS C200B Digital Cinema Camera comes as a standalone camera body, excluding the built-in electronic viewfinder, LCD monitor, handle and handgrip accessories that come with the EOS C200. This allows the user the flexibility to customize the camera with a wide range of accessories to fit their specific needs. The camera's small form factor allows it to be used in tighter spaces, and more easily attached to a gimbal or drone.

The camera can record internal 4K RAW to a CFast™ 2.0 card in our new Cinema RAW Light format without compromising detail, as well as 4K UHD and Full HD in MP4 format to SD cards. The 8.85 Megapixel Super 35mm CMOS sensor, 13 stops of dynamic range, Dual Pixel CMOS AF, full compatibility with Canon EF-mount lenses, and HDR capability help make the EOS C200B ideal for film, documentary and television production, corporate and event videography, and newsgathering. The camera's multitude of features help deliver outstanding image quality, performance and versatility.

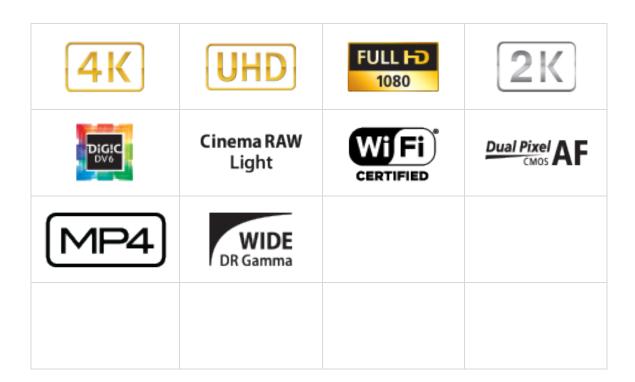


Features:


Canon 8.85 Megapixel Super 35mm CMOS Sensor

The EOS C200B Digital Cinema Camera integrates an 8.85 Megapixel Super 35mm 16:9 CMOS sensor that supports 4K (DCI) recording with a maximum resolution of 4096 x 2160 pixels. The camera fully utilizes the image data delivered by this 4K CMOS sensor to also enable Over Sampling HD Processing for 2K (DCI) and Full HD1080/60p recording.

Each pixel in this CMOS imaging sensor also maintains a wide pixel pitch that maximizes the amount of light that falls on to each photo site, thus enhancing the EOS C200B camera's sensitivity while also minimizing noise and supporting ISO speeds of up to 102,400 for extreme low-light imaging. This sensor also reduces data-readout resulting in a reduction in rolling-shutter artifacts.

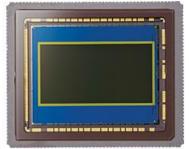


Canon 8.85 Megapixel Super35mm CMOS Sensor

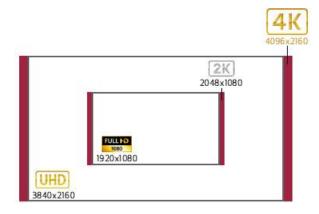

Fully Compatible with New and Existing Canon EF-Mount Lenses

A major aspect of the creative filmmaking potential of the EOS C200B Digital Cinema Camera is its compatibility with the full range of more than 100 Canon EF and EF-S photographic lenses (including specialty tilt-shift and fisheye models) and Canon's 4K CN-E Cinema prime and zoom lenses (including the "ENG-style" Canon CINE-SERVO and COMPACT-SERVO zooms. Improved EF lens communication capabilities of the EOS C200B camera provide the display of CN-E Cinema lens T-values, compatibility with Dual-Pixel CMOS AF, lens metadata acquisition, and chromatic aberration correction.



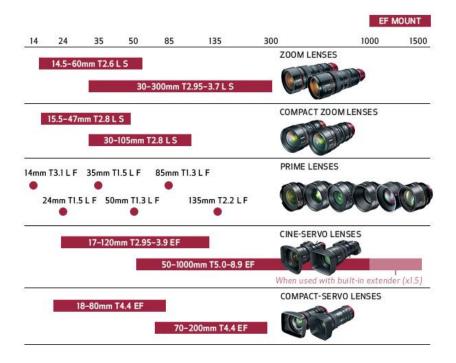

For those users who are accustomed to seeing the T-value displayed when using EF lenses for digital cinema, it is possible to switch the camera to display either the F-value or the T-value. This is important for those that shoot on movie sets and prefer to know how much light is passing through the opening of the lens and actually making it to the sensor. T-values are the traditional measure of light reaching the sensor in video production, while F-stop is the measure of light in still photography. The ability to see the F-stop helps those transitioning from still to video shooting.



Flexibility for Custom Shooting Situations

The EOS C200B Digital Cinema Camera comes as a standalone camera body, excluding the built-in electronic viewfinder, LCD monitor, handle and handgrip accessories that come with the EOS C200. This allows the user the flexibility to customize the camera with a wide range of accessories to fit their specific needs.



The camera's small form factor allows it to be used in tighter spaces and mounted into a variety of gyro-stabilized housings, robotic camera pedestals, on a crane or drone, remotely operated for surveillance activities, hidden inside a racecar or helicopter, or other hard-to-reach locations where the camera is not immediately accessible.




The customizable EOS C200B can be ideal for a variety of applications including film, documentary and television production, corporate and event videography, and newsgathering

Dual DiG!C DV 6 Image Processors


The EOS C200B Digital Cinema Camera features our newly developed dual DiG!C DV 6 image processors, which powerfully process high-resolution image data.

The two on-board DiG!C DV 6 image processors allow for the recording of 1,800 horizontal TV lines in 4K. The DiG!C 6 is Canon's sixth-generation Image processor that uses proprietary technology, allowing users to achieve high performance and creative freedom when acquiring images.

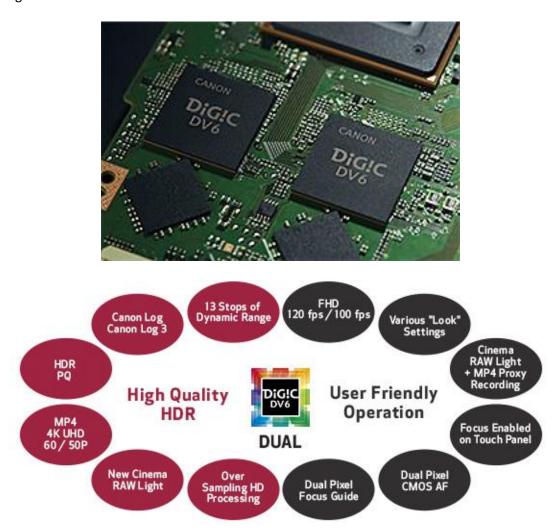

Over Sampling HD Processing

The EOS C200B features Over Sampling HD Processing*, a high-image-quality signal processing system that satisfies a broad spectrum of video production needs by effectively utilizing the abundant powers of 4K image expression in 2K (2048 x 1080) / Full HD (1920 x 1080) recording.

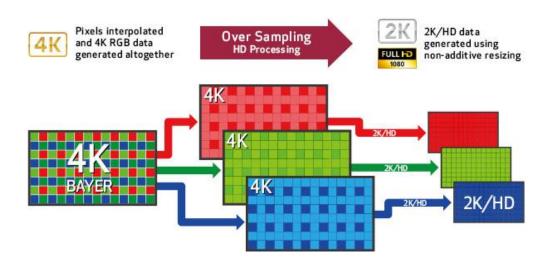

^{*}Over Sampling HD processing is not available with Cinema RAW Light recording or 120p/100p

ISO Range of 100 to 102,400 Supported

The EOS C200B supports an ISO range of between 160 and 25,600. That range expands to between 100 to 102,400 when the "Extended Sensitivity" is set on the camera. This range of ISO settings provide the user with more creative freedom. Low ISO values allow the user to use large iris settings and shallow depth of field, even in scenes of bright light. The higher ISO values provide the user with more flexibility in dimly lit situations. A 54db gain setting can also be set to achieve high sensitivity in dimly lit scenes.




Certain image and effect are simulated.

Dual Pixel CMOS AF Technology


The EOS C200B Digital Cinema Camera features our Dual Pixel CMOS AF (DAF) Technology. DAF is a breakthrough AF technology that uses the CMOS sensor.

Each pixel in the camera's CMOS sensor is configured with two photodiodes. Two independent image signals can then be detected at each photosite. By implementing phase-difference AF, smooth focusing is accomplished using Canon EF lenses with much higher speed and accuracy than was possible with previous technologies- a major advantage during single-operator shooting.

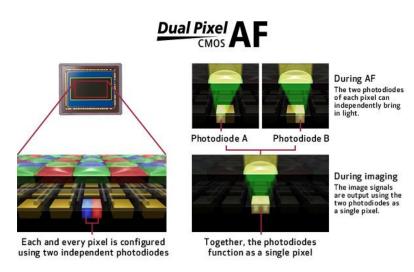

Continuous AF⁺ and Face Detection AF⁺ with all Canon EF Lenses*

The EOS C200B has one-touch AF (with a push-button) and continuous AF within approximately 80% of the overall image area. Face Detection AF is another autofocus mode that can track a person's face in the frame and maintain focus on them. To further fine tune AF performance, the EOS C200B offers the ability to set the AF tracking speed (up to 10 steps) and sensitivity (up to 7 steps) to match the user's preference.

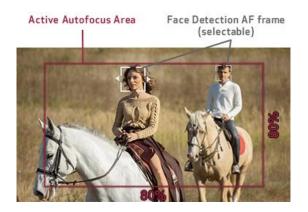

^{*}Excluding manual focus lenses

Dual Pixel CMOS AF with Touch Focus[†]

Achieve faster focus with the optional Touch Screen LCD Monitor (LM-V1), a new accessory with touch screen support. Tapping the area of the frame quickly brings the image into focus. This ability to choose the subject for focusing with the tap of the screen helps to make focusing intuitive.




Dual Pixel Focus Guide⁺

The camera's Dual Pixel Focus Guide takes advantage of Dual Pixel CMOS AF data to display focus assist information on the screen. The innovative user interface applies Dual Pixel CMOS AF technology to provide the user focus feedback. This lowers the barrier for focusing, especially when shooting in 4K, which requires strict focus accuracy.

The Dual Pixel Focus Guide presents the user with a rectangle in which to focus the subject. The rectangle turns green when the subject is in focus. If the subject is out of focus the box will turn gray and the arrows will indicate which way to adjust the lens to regain focus.





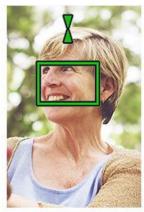

Focused



Back Focus Indicator

The camera also has a focus pre-set feature. Separate predetermined focus points can be selected and when the SET button is pushed, the lens will move focus from one mark to the other. This is especially useful when focusing in scenes with multiple subjects.



AF Tuning[†]

A newly developed menu function has been added for Auto-Focus tuning, allowing easy access to camera and lens settings. The AF Speed Tuning function allows users to set the lens drive speed to any of 10 steps. AF subject tracking characteristics can also be varied and set to any of 7 steps, allowing the user to select the appropriate responsiveness when changes have occurred in the subject.







Tuning of AF subject tracking characteristics (7 steps)

[†]These features are built-in to the camera, but require the optional LCD Monitor (LM-V1) accessory to be accessed.


Internal 4K RAW Recording with New Cinema RAW Light

The EOS C200B Digital Cinema Camera features Canon's newly developed Cinema RAW Light, a 4K RAW recording file format offering a smaller file size compared to our standard RAW*¹ files, while maintaining the same high resolution, high color reproducibility, and wide dynamic range data to provide dramatically greater freedom in grading and compositing.

^{*1} Standard RAW: EOS C500/EOS C300 Mark II/EOS C700 camera RAW



Cinema RAW Light files are about 1/3 to 1/5 the size of our standard RAW files. The smaller file size and reduced bit rate speeds up data transfer and allows internal recording to CFast™ cards.

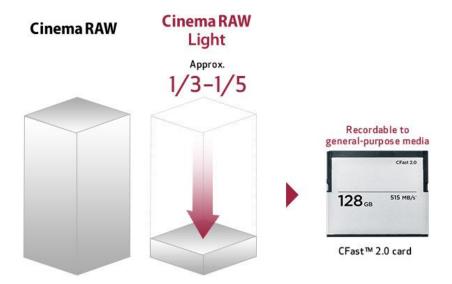

The reduced file size also helps users extend storage capacity and transfer files on a network more easily. The high bit depth of Cinema RAW Light (10bit/12bit*²) maximizes retention of color and dynamic range information, which is especially critical in HDR production.


 $^{*^2}$ 12bit for 4K/30p and under, 10bit for 4K/60p and 50p. Each bit is efficiency optimized in consideration of visual properties.

Cinema RAW Light files can be transcoded to other commonly used file formats, such as DPX or ProRes for later editing and online delivery using Canon's CRD software.

			System frequency/frame rate							and the second
Resolution	Color Sampling	Bitrate	59.94Hz		50.00Hz		24.00Hz	Audio	Recording Media	
	Jamping		59.94P	29.97P	23.98P	50.00P	25.00P	24.00P		Media
4K	10 bit	1G bps	•	_	_	•	_	_	LPCM 16 bit	CE TM
4096x2160	12 bit	1G bps	-	•	•	-	•	•	48kHz 4ch	CFast™
2K 2048x1080 (Proxy)	YCbCr 4:2:0 8 bit	Approx. 35Mbps LongGOP	•	•	•	•	•	•	LPCM 16 bit 48kHz 4ch AAC 16 bit 48kHz 2ch	SD

Simultaneous Recording

4K video can be recorded to a CFast™ 2.0 card, while recording 2K proxy video to an SD card. The smaller file size of the 2K proxy file allows for easier editing.

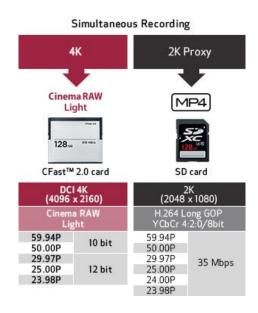

Internal 4K UHD and Full HD Recording in MP4


The EOS C200B Digital Cinema Camera offers 4K UHD and Full HD recording in MP4 format, up to 60fps. The compact size of the MP4 codec allows the EOS C200B to capture images directly to low cost SD cards.



634			System frequency/frame rate							The second
Resolution	Color Sampling	Bitrate	59.94Hz		50.00Hz		24.00Hz	Audio	Recording Media	
	Jamping		59.94P	29.97P	23.98P	50.00P	25.00P	24.00P	(Messes)	Media
UHD 3840x2160	YCbCr 4:2:0 8 bit	150Mbps LongGOP	•	•	•	•	•	•	LPCM 16 bit 48kHz 4ch	SD
FULL 1080 1080 1920x1080	YCbCr 4:2:0 8 bit	35Mbps LongGOP	•	•		•	•	•	A AC 16 bit 48kHz 2ch	SD

Double Slot Recording

Mirror recording of 4K UHD/Full HD MP4 image files to the camera's two SD slots is also possible, saving time and effort of having to make copies of the data after recording.

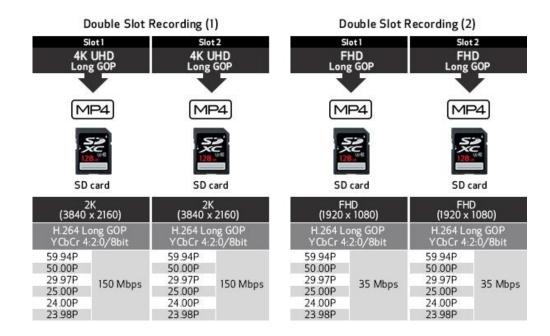

Full HD 120P/100P Slow Motion Recording Support

The EOS C200B Digital Cinema Camera supports high-speed recording in Full HD at 120p/100p fps to enable additional creative freedom for slow motion replays and other special effects. It's capable of a maximum 120fps, realizing even greater emotion in visual expression.





Recording mode/Playback frame rate	Recording frame rate (speed)
59.94P	120P (x0.5)
29.97P	120P (x0.25)
23.98P	120P (x0.2)
24.00P	120P (x0.2)
50.00P	100P (x0.5)
25.00P	100P (x0.25)

^{*} For PAL values change from 120 fps to 100 fps. Supports slow-motion recording.


Image is simulated

Professional Workflow

The EOS C200B Digital Cinema Camera offers a variety of professional workflows. The camera's new Cinema RAW Light format provides professional shooters with the widest dynamic range and highest color fidelity for post production work. Using Canon's CRD software and Canon RAW Light codec with up to 15 stops of dynamic range is achievable.

MP4 recording is also possible on the camera for situations such as newsgathering, where capturing the image and speed through post are priority.

The EOS C200B supports both ACES 1.0 and HDR imaging through support for emerging HDR standards. Canon is working closely with 3rd party developers to help ensure maximum compatibility for these new formats with NLE and grading systems.

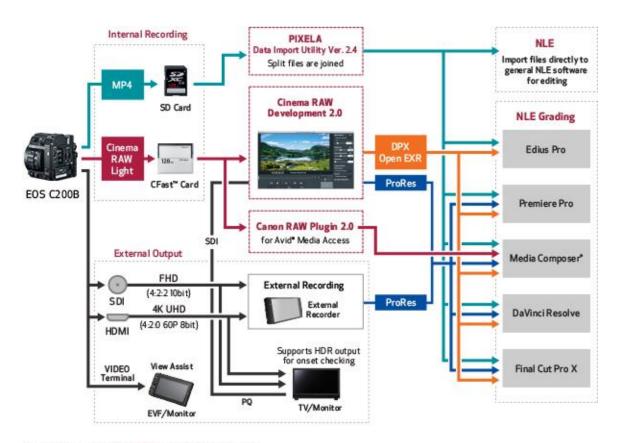

The parts marked with [___] are provided by Canon.

Canon Log and Canon Log 3


The EOS C200B supports both Canon Log and Canon Log 3 Gamma. Canon Log is designed to reproduce, in post production, the entire tonal range that the CMOS image sensor is capable of. Log workflow provides the user with higher dynamic range, more highlight and shadow retention, and more flexibility in grading.

Canon Log 3 is ideal for professional end users that want to get the most out of the camera system, and provides the most versatility for post production when recording in camera.

When using Canon RAW Light and Canon's RAW development software it is possible to additionally use Canon Log 2 allowing for a total of 15 stops of dynamic range out of the camera. Using this method requires additional post production time over other options, but gives the highest quality and flexibility for post.

Wide DR Gamma

The EOS C200B provides the Canon Wide Dynamic Range Gamma function that allows users to get many of the benefits of Canon Log Gamma while maintaining an 18% gray point similar to Rec. 709. By using this setting, users can maintain the full dynamic range of the sensor without the need for extensive post processing. Use of Wide DR Gamma can greatly reduce post production time while maintaining very high image quality.

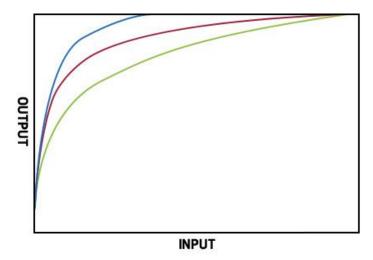

Standard

Overexposure is likely to occur in high-contrast scenes.

Wide DR

Achieves smooth gradation and reduces overexposure by seamlessly compressing high-brightness areas.

- Canon Log

Enables color corrections with high flexibility because a sufficient margin is provided for high-brightness areas.


Canon Cinema RAW Development 2.0

Canon has developed a mature workflow for the EOS C200B, Cinema RAW Development 2.0, which supports the new Cinema RAW Light format and is provided as a free download. In addition to new development process support, it also brings features from the previous release including support for HDR monitoring, Canon Log Gammas, ACES 1.0 and more.



Canon RAW Plugin 2.0 for Avid® Media Access

Canon RAW Plugin 2.0 for Avid® Media Access is provided as a free download, which allows users to directly import Canon Cinema RAW data into an Avid Media Composer® system. This helps streamline the workflow, while enabling stress-free real-time playback and reducing file ingest wait time.

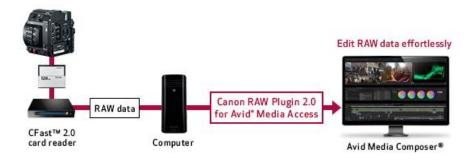

HDR Viewing

The EOS C200B Digital Cinema Camera supports HDR recording in the ITU-R BT.2100 standard (PQ). HDR on-set monitoring is possible using HDR compatible reference displays, including all of our Canon 4K UHD Reference Displays. This allows operators to shoot HDR footage while getting a preview of the finished product.




Image is simulated

ACES 1.0 Support*


The EOS C200B Digital Cinema Camera supports the Academy Color Encoding System (ACES 1.0). Using Canon supplied IDTs, images captured on the EOS C200B can be imported directly into the ACES compatible systems. In addition, video output from the camera can be monitored by selecting the ACESproxy.

ACESproxy allows the camera to send a monitor output that simulates ACES space to a compatible monitor or device. Modifications made using the proxy output can be saved and later brought into the editing or grading suite to help insure changes and color choices made on set are accurately reproduced in post.

ACES image display is supported in Canon's full line of 4K UHD Reference Displays.

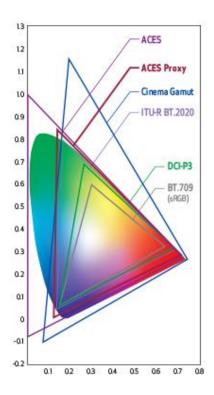

*0.7 is not supported

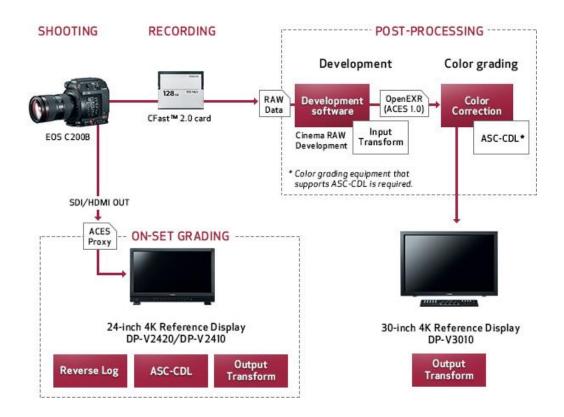

Wide Range of Connectivity Options

The EOS C200B Digital Cinema Camera has a wide range of terminals that can be useful in a variety of production shooting and display situations.



Output Signal Configurations (During Shooting)

Record	ding signal configu	ration	Output signal configuration				
			SDI te	rminal	HDMI OUT terminal		
Recording Type	Frame rate	Resolution	SDIo	utput	HDMI maxim	um resolution	
Recording type	Trainerate	resolution	2048×1080 / 1920×1080	1920×1080	3840×2160	1920×1080	
RAW	59.94p 50.00p 29.97p 25.00p 24.00p 23.98p	4096×2160	2048×1080 YCbCr 4:2:2 10 bit	1920×1080*1 YCbCr 4:2:2 10 bit	1920×1080*1 YCbCr 4:2:2 10 bit	1920×1080*1 YCbCr 4:2:2 10 bit	
59.94p 50.00p 29.97p		3840×2160	1920×1080		3840×2160 YCbCr 4:2:2 8 bit*2	1920×1080 YCbCr 4:2:2 10 bit*3	
MP4	25.00p 24.00p 23.98p	1920×1080	YCbCr 4:2:2 10 bit		1920×1080 YCbCr 4:2:2 10 bit	720×480*4 (59.94p) 720×576*4 (50.00p)	

Output Signal Configurations (During Playback)

Record	ling signal configu	ıration	Output signal configuration				
			SDI te	erminal	HDMI OUT terminal		
Recording Type	Frame rate	Resolution	SDI o	output	HDMI maxim	um resolution	
Recording Type	Traine rate	Nesoudui	2048×1080 / 1920×1080	1920×1080	3840×2160	1920×1080	
RAW	59.94p 50.00p 29.97p 25.00p 24.00p 23.98p	4096×2160	2048×1080 YCbCr 4:2:2 10 bit	19 20×1080*1 YCbCr 4:2:2 10 bit	1920×1080*1 YCbCr 4:2:2 10 bit	1920×1080*1 YCbCr 4:2:2 10 bit	
	3840×2160		1920×1080		3840×2160 YCbCr 4:2:2 8 bit	1920×1080 YCbCr 4:2:	
MP4	50.00p 29.97p 25.00p 24.00p 23.98p	1920×1080	YCbCr 4	2:28 bit	1920×1080 YCbCr 4:2:2 8 bit	8 bit 720×480 (59.94p) 720×576	
				2048×1080 YCbCr 4:2:0 8 bit	1920×1080 YCbCr 4:2:0 8 bit	1920×1080 YCbCr 4:2:2 8 bit	(50.00p)

^{* 1: 2048×1080} signals will have black bands added above and below.

* 2: YCbCr 4:2:08bit when the frame rate is 59.94P or 50.00P.

* 3: Output will be YCbCr 4:2:28 bit when the recording mode is slow motion mode.

* 4: The recording mode of slow motion is excluded.

Output Specifications (Assist Features)

Mode		Output destination	HDR(PQ)	Magn.	WFM	LUT	Peaking	Zebra		
				-	Panel/EVF	Panel/EVF	•	•	•	
			EVF	23	together	together	•	•	•	
	60P/50P & 2K o	recording	SDI	•	•	•	•	×	×	
	di Zivi	зафис	SDI	•	•	•	•	×	×	
	4		HDMI	•	•	×	×	×	×	
RAW	60P/50P & 4K out	recording put 60P*	× (HDMI)	×	27		2		22	
4K (4096x2160)	60P/50P & 4K out	recording put 30P*	HDMI	×	155.0	×	×	×	×	
			Panel	-	Panel/EVF	Panel/EVF	•	•		
	30P/25P	recording	EVF	751	together	together	•	•	•	
	& 2K		SDI	•	•	•	•	×	×	
			SDI	•	•	•	•	×	×	
			HDMI	•	•	×	×	×	×	
			Panel	5)	Panel/EVF	Panel/EVF . together	•	•	•	
		4K UHD output	EVF	7:	together ★30fps		•	•	•	
			HDMI	25	28	×	×	×	×	
MP4	60P/50P recording		Panel	-	Panel/EVF	Panel/EVF	•	•	•	
		FHD output	EVF		together ★30fps	together	•		•	
			SDI	7:	★60fps	•		×	×	
			HDMI	1	★60fps	×	×	×	×	
4K UHD (3840x2160)	30/25P recording	4K UHD output	Panel	-	Panel/EVF	Panel/EVF together	•	•	•	
Andrew Commence (EVF	72	together		•	•	•	
			HDMI		-	×	×	×	×	
				Panel	10.70	Panel/EVF	Panel/EVF	•	•	•
		FHD output	EVF	-	together	together	•	•	•	
			SDI	10.77.0	•	•	•	×	×	
			HDMI	-	•	×	×	×	×	
			Panel	-	Panel/EVF	Panel/EVF	•	•	•	
	60P/50P	recording	EVF	34	together	together	•	•	•	
	& 2K c		SDI	9.T.	•	•	•	×	×	
MP4			HDMI	(<u>-</u>	•	×	×	×	×	
FHD			Panel	8.5	Panel/EVF	Panel/EVF	•	•	•	
(1920x1080)	30P/25P	recording	EVF	-	together	together	•	•	•	
	& 2K c		SDI	8.7	•		•	×	×	
			HDMI	- 1		×	×	×	×	


 $^{^*}$ Proxy recording is not available when outputting in 4K during RAW 4K DCI 60P/50P recording, so 4K output during RAW recording is not supported.

Other Functions

In-camera ND Filter

The EOS C200B Digital Cinema Camera features in-camera ND filters to help save production time and help increase shooting versatility without the need to change filters. The internal ND filters are selected with the ND FILTER + and - buttons on the left side of the camera.

The camera uses an internal, motorized ND assembly consisting of two rotating disks with glass ND filters between the rear of the lens and the front of the sensor. This combination of ND filters allows 5 steps of neutral density. In normal mode 2, 4 and 6 stops are available. In extended mode, 8 and 10 stops are also available. Neutral density filters allow the operator more control of exposure in bright scenes, especially where shallow depth of field is desired.

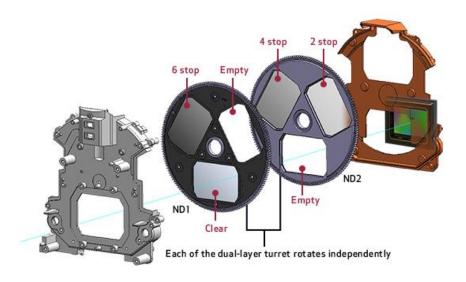

Turret combinations and focal distance

	ND1	ND 2	Total
	Clear	Empty	0 Stop
Normal Mode	Empty	2 Stop	2 Stop
Normai Mode	Empty	4 Stop	4 Stop
	6 Stop	Empty	6 Stop
200 00000	6 Stop	2 Stop	8 Stop
Extension Mode	6 Stop	4 Stop	10 Stop



RC-V100 Remote Control Support

Camera settings can be accessed and controlled from a distance using Canon's RC-V100 Remote Controller. The RC-V100 plugs into the EOS C200B through the remote terminal on the rear panel. This optional accessory allows image quality adjustments and camera operations to be set from a distance.



Focusing, aperture and zooming operations can also be performed remotely using the Link-up feature with Canon CINE-SERVO lenses.

Updated Browser Remote Functions Including Focus Support

Some applications require the camera to be located a distance away from the operator, such as on a crane or jib. The ability to perform remote operation of camera functions in these situations can be critical. Multiple camera operations can be performed on the EOS C200B from a connected device (such as a pc, tablet or smartphone) by accessing the Browser Remote with a general-purpose browser.



A wide range of auto focus functions can also be controlled using the Browser Remote, including the ability to move the focus area with just a touch when using a compatible tablet or smartphone.

Browser Remote

Cone Stot:

Selectable

Face Pricery

Face Pricery

Face Detection Off

Face Pricery

Face Detection Off

Face Pricery

Face Detection Off

Face Detection Off

Face Pricery

Face Detection Off

Face Detection O

Main AF functions of Browser Remote

Center/Selectable	Control exercised over Area Position item on AF menu
ONE-SHOT AF/AF LOCK	Button for executing One-shot AF/AF lock
One shot/Continuous/Boosted MF	Control exercised over Mode item on AF menu
Face Priority/Face Only	Control exercised over Face AF item on AF menu
AF Speed +2 - Standard7	Control exercised over AF Speed item on AF menu
Track/Track Cancel	Start and stop of tracking operations (same as tracking performed by EOS C200/EOS C200B function assignment button)

Certain image and effect are simulated.

Manual focus can also be controlled from the Browser Remote, helping to ensure accurate focus from remote locations where manual focusing is not possible.

A live feed from the camera can be displayed simultaneously from multiple connected devices accessing the Browser Remote. One device can be used to check focus, while the client or director can monitor the live action from another compatible device.



GPS Receiver (GP-E2)

The optional GPS Receiver GP-E2 is compatible with the EOS C200B and can be connected to the camera using a USB cable, providing location and time information that is recorded during shooting. The GPS Data helps support editing work and adds more useful information for archiving purposes.



Products not shown to scale.



[Specifications]

Image Sensing Device						
Sensor	CMOS Sensor (single-panel) equiva	lent to Super 35mm				
Total Pixels	Approx. 9.84 megapixels (4206 x 2340)					
Number of Effective	Approx. 8.85 megapixels (4096 x 2	160): When 4096 x 2160 or 2048 x				
Pixels	1080 is selected as the resolution	1080 is selected as the resolution				
	Approx. 8.29 megapixels (3840 x 2160): When 3840 x 2160 or 1920 x 1080 is selected as the resolution					
Filter	RGB primary color filter (Bayer arra	ay)				
Lens Mount						
Lens Mount	Canon EF mount					
Exposure						
Exposure Mode	 (1) Manual exposure based on shutter setting, iris setting, ISO/gain setting, and ND filter setting (2) Push auto iris control, auto iris control (light metering system selection/AE shift possible) 					
Shutter Setting	Speed, Angle, Clear Scan, Slow, or Off mode selected Either 1/3 or 1/4 steps selected as speed increment					
Iris Setting	possible (2) Push auto IRIS control* (3) Auto IRIS control* *Lenses that support Auto Iris:	ements, 1/3-step increments or fine				
	EF lenses	Cinema lenses				
	EF-S 10-18mm f/4.5–5.6 IS STM	CN 7x17 KAS S/E1				
	EF-S 18-55mm f/3.5-5.6 IS STM	CN 20x50 IAS H/E1				
	EF-S 18–135mm f/3.5-5.6 IS STM	CN-E 18–80mm T4.4 L IS KAS S				
	EF-S 55–250mm f/4-5.6 IS STM EF-S 18–135mm f/3.5-5.6 IS USM EF 24–105mm f/3.5-5.6 IS STM	CN-E 70–200mm T4.4 L IS KAS S				
ISO Speed Setting	1 step, 1/3 step settings [*100 - 160 - 25600 - *102400] *When the sensitivity is expanded					
Gain Setting	Normal [*-6dB2dB - 42dB - *54dB] Fine: Setting in 0.5 dB step increments possible *When the sensitivity is expanded					
ND Filter	5 density settings (2, 4, 6, 8*, 10* s *When expansion is selected	etops)				
	Motorized drive					
Focus Control						

Focus Co	ntrol	Dual Pixel CMOS AF supported, Manual Focus, One-Shot AF,				
		Continuous AF, AF-Boosted MF, Face Detection AF (only lenses that				
		support AF functions can be used in any of these modes), Focus Guide				
White Ba	lance					
White Ba	lance	AWB, Kelvin setting (setting range: 2000K to 15000K/-20CC to +20CC),				
		Daylight, Tungsten, Set A, Set B)				
Frame Ra	ite					
Frame Ra	ite	(1) 59.94 Hz mode (59.94P/29.97P/23.98P)				
		(2) 50.00 Hz mode (50.00P/25.00P)				
		(3) 24.00 Hz mode (24.00P)				
Dynamic	Range					
Dynamic Range		Canon Log 3: 1600% (ISO 800 or above)				
		Canon Log/Wide DR: 800% (ISO 400 or above)				
Video Foi	rmats					
RAW	Video	Codec: Cinema RAW Light				
		Resolution: 4096 x 2160				
		Bit Depth: 10 bit (59.94P/50.00P), 12 bit				
		(29.97P/23.98P/25.00P/24.00P)				
		Bit Rate: 1 Gbps				
	Audio	Linear PCM: 16 bit / 48 kHz / 4 channels				
MP4	Video	Codec: MPEG-4 AVC/H.264				
		Resolution: 3840 x 2160 / 1920 x 1080				
		Bit Rate: 150 Mbps (3840 x 2160), 35 Mbps (1920 x 1080)				
		Color Sampling: YCC420 8 bit				
	Audio	MPEG-4 AAC-LC (16 bit / 48 kHz / 2 channels) Linear PCM (16 bit / 48 kHz / 4 channels)				
MP4	Video	Resolution: 2048 x 1080				
(Proxy)	video	Bit Rate: 35 Mbps				
(FIOXY)		Color Sampling: YCC420 8 bit				
Recording	g Media	color sumpling. Tee+20 0 bit				
Recording		(1) CFast™ card (1 slot): RAW movies				
Recording	5 IVICUIA	(2) SD card (2 slots): Recording of MP4 movies, photos (JPEG), custom				
		pictures, menus				
		and other data possible				
Time Cod	le	Drop frame* or non-drop frame				
		Rec run, free run, regeneration				
		*In 59.94P/29.97P mode only				
Rec Mode	e (MP4 Recording)	Slow motion recording, pre-recording, frame recording, interval				
	J.	recording recording, pre-recording, frame recording, interval				

Other recor	rding functions ding)	Relay recording, double slot recording			
Others		Custom picture setting, black balance adjustments, color bars, peaking display, zebra display, My Menu setting, fan, waveform monitor display, assignable buttons (1-17), key lock, marker display, enlarged display, custom display, peripheral illumination correction, GPS support (GP-E2), monaural microphone, and other functions			
Playback					
Playback Playback Operations		Normal playback, fast forward (at speeds of \times 5, \times 15, \times 60), fast reverse (at speeds of \times 5, \times 15, \times 60), frame forward, frame reverse, rec review			
	Clip Display	3x4 (clip) index screen (RAW/MP4/Photo)			
Terminals					
Terminals	Input only	REMOTE terminal, MIC jack, INPUT terminals (2 sets)			
	Output only	SDI terminal, HDMI OUT terminal, headphones jack, USB terminal, VIDEO terminal			
	Input/Output Control	Ethernet terminal			
Power Sup	ply				
Power Sup	ply	14.4 V DC (battery pack), 16.7 V DC (DC-IN)			
Image Proc	essing Platform				
Image Proc	essing Platform	Dual DiG!C DV 6			
Related Ac	cessories				
Related Acc	cessories	Battery Pack (BP-A30/BP-A60) Battery Charger (CG-A10/ CG-A20*) LCD Monitor (LM-V1)* LCD Attachment Unit (LA-V1)* Clamp Base (CL-V2)* Camera Grip (GR-V1)* Handle Unit (HDU-2)* OLED Electronic View Finder (EVF-V70) Shoulder Support Unit (SU-15) 8-pin Remote Cable (RR-10/RR-100) Rod Clamp (RD-1) AC Adapter (CA-A10) Compact Power Adapter (CA-CP200B) Unit Cable (UN-5/UN-10)			

	Remote Controller (RC-V100)
	GPS Receiver (GP-E2)
	Shoulder Strap (SS-1200)
	Tripod Adapter (TA-100)
	Tripod Base (TB-1)
	EF lens groups, EF cinema lens groups
	Accessories designed for the EF lens group and EF cinema lens group
	*Indicates new accessories
Dimensions (width	x height x depth) (excluding cable, belt, etc.)
Body	Approx. 5.7 x 5.7 x 5.4 in. (144 x 146 x 137mm)
•	
	Approx. 6.7 x 8.2 x 5.4 in. (169 x 209 x 137mm) [With mic holder unit
	attached]
	Approx. 2.9 lb. (1335g)
W/Δισht	
Weight	, (Pp. 07. 2.3 lb. (19998)