

Long Shelf for R2G & R2RT

Congratulations on your purchase from RocknRoller Multi-Cart, the most acclaimed and innovative transforming utility carts available. Although very easy to use, RocknRoller Multi-Cart's patented design operates differently than typical carts or dollies. To ensure maximum performance from your RocknRoller Multi-Cart, we recommend reading this instruction and assembly sheet thoroughly. U.S. Patent #'s: 5,228,716; 5,476,282; 6,966,574; 7,437,801; 7,490,847 & Pats. Pend.

LIMITED WARRANTY: RocknRoller Multi-Cart shelves carry a one-year warranty against defective material or workmanship on components. As with any equipment, normal maintenance is required. Caution should be used when moving any load with Multi-Carts or any other dolly.

Your RocknRoller Multi-Cart shipping box should contain a frame and the following parts:

1 x	Wooden shelf	2 x	Large hex nuts, 14mm
2 x	Metal brackets	6 x	Small Washers
1 x	Metal rail with push button	2 x	Large Washers
1 x	Metal rail without push button	1 x	Wing nut
6 x	Short Allen bolts, 36mm	1 x	Allen wrench, large
1 x	Medium Allen bolt, 42mm	1 x	Allen wrench, small
2 x	Long Allen bolt, 52mm	1 x	10mm wrench
6 x	Small hex nuts, 10mm		

Assembly Instructions




1. Find the single hole in the wood shelf, located along one of the short sides. Position the wood shelf board so the textured surface faces down, and the hole is to your left.



2. Find the metal rail with a push button, and position the rail on the board so the button is facing you. Line the holes in the rail up with the row of holes closest to you and insert 4 short allen bolts from the textured side.



3. Secure the rail using 4 small washers and 2 small hex nuts. Repeat the process for the second rail. Both angled ends of the rail should be on the right, facing up.

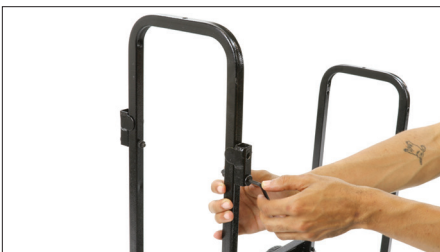

4. Raise both handles of the R2 cart while in the retracted position. Fully extend the cart to its maximum length. Find the 2 metal brackets and position them on the outer sides of the tall handle. The wings on the bracket should be on top, the holes on the brackets should be on bottom. Line the holes of the bracket up with the holes on the handles. Insert the long Allen bolts, and secure with the large washers and large hex nuts.



5. Place the shelf onto the cart by inserting the rails into the brackets, and lining up the hold along the short side with the hole in the top of the short handle. Insert the medium Allen bolt from the top, and secure with the wing nut.

