


Right Arm[®] Counter Balance Kit


INSTALLATION INSTRUCTIONS



Step 1: Remove the connector on the fixture cable. Loosen and remove the tilt bolt.

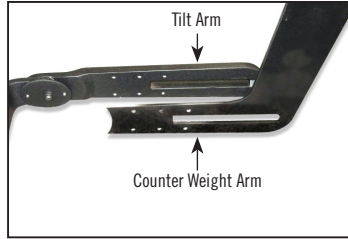


Step 2: Lay the tilt arm on a work surface. Align the counter weight arm with the tilt arm.

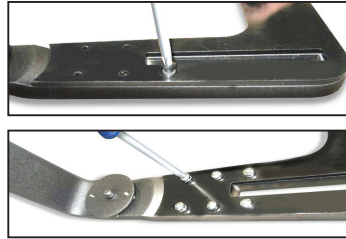


Step 3: Install six 5mm screws and lock washers. Tighten.



Step 4: Pass the fixture cable back through the slot in the tilt arm.

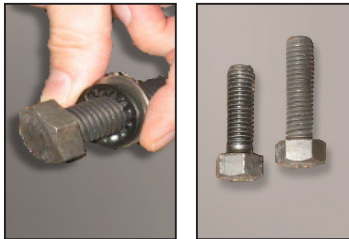

Step 5: Install the 16mm x 45mm bolt with the original washer and lock washer.

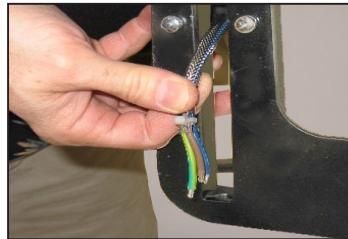


Step 6: Install the tilt arm with counter weight arm onto the Right Arm[®].




Step 7: Tighten the tilt bolt.



Step 8: Install a 5° or 10° Source Four.

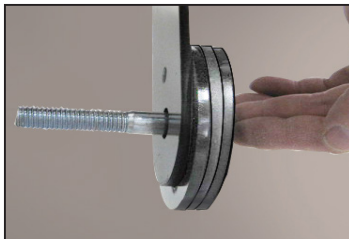


Step 9: Insert the 1/2" - 13 x 3/4" bolt and begin installing weights. For best results, use three weights on the outside of the counter weight arm and nine on the inside (closest to the Source Four). Place one washer under the bolt head and other washer under the nut.

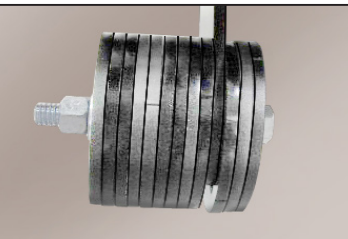

Step 10: Install the 1/2" nut with lock washer. Leave the nut loose for now.



Step 11: Install the safety pin through the holes in all weights and the hole in the counter weight arm.

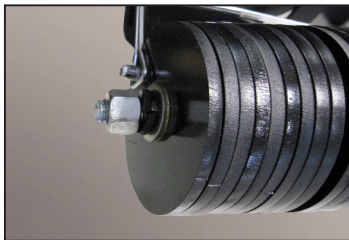

Step 12: Tighten the 1/2" nut.

Step 13: Balance the Right Arm[®] according to the instructions in the user manual.

- Only operate the Right Arm[®] in mode #9. The balanced 5° or 10° will not clear the underside of the horizontal frame of the Right Arm[®].
- Minimal roaming may still occur at the end of a movement due to 5° or 10° Source Four mass.

Kit Includes	
1 – Counter Weight Arm	1 – 1/2" - 13 x 3/4" Bolt
12 – Counter Balance Weights	1 – 1/2" Washer
1 – 16mm x 45mm Bolt	1 – 1/2" Nut
6 – 5mm x 10mm Pan Head Phillips	1 – 1/2" Spring Lock Washer
6 – 5mm Spring Lock Washer	1 – 5/8" x 3" Locking Pin