

FLURRY *Beam*[™]



Blizzard Lighting, LLC
www.blizzardlighting.com
Waukesha, WI USA
Copyright (c) 2015

TABLE OF CONTENTS

Flurry Beam™ Moving Head Fixture	1
1. Getting Started	3
What's In The Box?	3
Getting It Out Of The Box	3
Powering Up!	3
Getting A Hold Of Us	3
Safety Instructions (Don't Stick Your Hand In The Toaster!)	4
2. Meet The Flurry Beam™ Moving Head	5
Features	5
DMX Quick Reference	5
The Flurry Beam™ Pin-up Picture	6
3. Setup	7
Fuse Replacement	7
Connecting A Bunch Of Flurry Beam™ Fixtures	7
Data/DMX Cables	7
Cable Connectors	8
3-Pin??? 5-Pin??? Huh?	8
Take It To The Next Level: Setting up DMX Control	8
Fixture Linking (Master/Slave Mode)	9
Mounting/Rigging	9
4. Operating Adjustments	10
Navigating The Control Panel	10
Control Panel Menu Structure	11
Set The DMX Starting Address	12
Slave Mode	12
Auto Mode	12
Sound Active	12
Manual Adjustments	12
Menu Password Protection	13
System Reset	13
Restore Factory Settings	13
DMX Channel Values In-Depth	14
5. Appendix	15
A Quick DMX Lesson	15
Troubleshooting	15
Keeping Your Flurry Beam™ As Good As New	16
Returns (Gasp!)	16
Shipping Issues	16
Tech Specs	17

1. GETTING STARTED

What's In The Box?

- 1 x Flurry Beam™ Moving Head Fixture
- An Ever-So-Handy Power Cord
- A Sweet Mounting Bracket
- This Lovely User Manual

Getting It Out Of The Box

Congratulations on purchasing Flurry Beam™, the fun sized moving beam head fixture that is small in stature, but big where it counts! Now that you're the proud owner of a Flurry Beam™ (or hopefully, *Beams!*), you should carefully unpack the box and check the contents to ensure that all parts are present and in good condition. If anything looks as if it has been damaged in transit, notify the shipper immediately and keep the packing material for inspection. Again, please save the carton and all packing materials. If a fixture must be returned to the factory, it is important that the fixture be returned in the original factory box and packing.

Powering Up!

All fixtures must be powered directly off a switched circuit and **cannot be run off a rheostat (variable resistor) or dimmer circuit, even if the rheostat or dimmer channel is used solely for a 0% to 100% switch.**

AC Voltage Switch - Not all fixtures have a voltage select switch, so please verify that the fixture you receive is suitable for your local power supply. See the label on the fixture or refer to the fixture's specifications chart for more information. A fixture's listed current rating is its average current draw under normal conditions. Check the fixture or device carefully to make sure that if a voltage selection switch exists that it is set to the correct line voltage you will use.

Warning! Verify that the voltage select switch on your unit matches the line voltage applied. Damage to your fixture may result if the line voltage applied does not match the voltage indicated on the voltage selector switch. All fixtures must be connected to circuits with a suitable Ground (Earthing).

Getting A Hold Of Us

If something happens goes wrong, please visit www.blizzardlighting.com/support and open a support ticket. We'll be happy to help, honest.

Blizzard Lighting
N24 W23750 Watertown Rd. Suite B
Waukesha, WI 53188 USA
www.blizzardlighting.com

Disclaimer: The information and specifications contained in this document are subject to change without notice. Blizzard Lighting™ assumes no responsibility or liability for any errors or omissions that may appear in this user manual. Blizzard Lighting™ reserves the right to update the existing document or to create a new document to correct any errors or omissions at any time. You can download the latest version of this document from www.blizzardlighting.com.

Author:	Date:	Last Edited:	Date:
J. Thomas	12/4/2015	J. Thomas	12/5/2015

SAFETY INSTRUCTIONS



Please read these instructions carefully. They include important information about the installation, usage and maintenance of this product.

- Please keep this User Guide for future use. If you sell the unit to someone else, be sure that they also receive this User Guide.
- ALWAYS make sure that you are connecting to the proper voltage, and that the line voltage you are connecting to is not higher than that stated on the decal or rear panel of the fixture.
- This product is intended for indoor use only.
- To prevent risk of fire or shock, do not expose fixture to rain or moisture.
- Make sure there are no flammable materials close to the unit while operating.
- The unit must be installed in a location with adequate ventilation, at least 20in (50cm) from adjacent surfaces. Be sure that no ventilation slots are blocked.
- ALWAYS disconnect from the power source before servicing or replacing fuse and be sure to replace with same fuse size and type.
- ALWAYS secure fixture using a safety chain. NEVER carry the fixture by its cord. Use its carrying handles.
- DO NOT operate at ambient temperatures higher than 104°F (40°C).
- In the event of a serious operating problem, stop using the unit immediately. NEVER try to repair the unit by yourself. Repairs carried out by unskilled people can lead to damage or malfunction. Please contact the nearest authorized technical assistance center. Always use the same type spare parts.
- NEVER connect the device to a dimmer pack.
- Make sure the power cord is never crimped or damaged.
- Never disconnect the power cord by pulling or tugging on the cord.
- Avoid direct eye exposure to the light source while it is on.

Caution! There are no user serviceable parts inside the unit. Do not open the housing or attempt any repairs yourself. In the unlikely event your unit may require service, please visit our support website at: www.blizzardlighting.com/support.

2. MEET THE FLURRY BEAM™ MOVING HEAD

MAIN FEATURES:

- Ultra-bright 60W 6-in-1 RGBW LED light source
- Pan: 540°/ Tilt: 220° (8/16-Bit Resolution)
- Super-sharp 2.5° beam angle
- Excellent, portable, moving head beam fixture
- Built-in automated programs via master/slave
- Built-in sound activated programs via master/slave
- Ultra-smooth dimming system
- Defeatable pan/tilt correction with trim adjustment
- Intelligent fan cooling system with temperature auto detect
- 1-10Hz/second strobe effects
- 3-pin male input and 3-pin female output
- Compact, high quality housing

CONTROL:

- USITT DMX-512 (14-channels)
- Easy-to-use 4-button LCD control panel menu


DMX Quick Reference (14-Channel Mode)

Channel	What it does
1	Pan
2	Tilt
3	Fine Pan
4	Fine Tilt
5	Pan/Tilt Speed (Fast <--> Slow)
6	Dimmer (0% <--> 100%)
7	Red (0% <--> 100%)
8	Green (0% <--> 100%)
9	Blue (0% <--> 100%)
10	White (0% <--> 100%)
11	Strobe (Slow <--> Fast)
12	Color Mixing
13	Auto + Sound Active Mode
14	Motor Reset

Figure 1: The Flurry Beam™ Pin-Up Picture



Figure 2: The Rear Connections

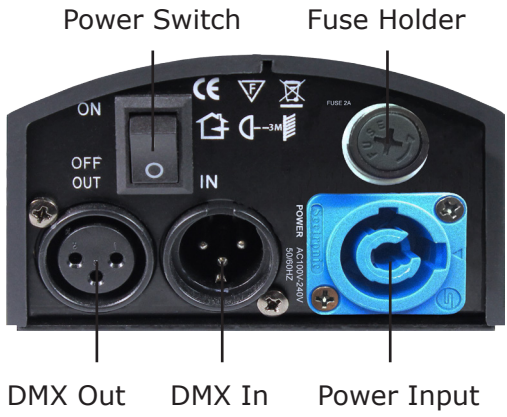

3. SETUP



Before replacing a fuse, disconnect power cord. ALWAYS replace with the same type and rating of fuse.

Fuse Replacement

With a phillips head screwdriver, remove the fuse holder from its housing. Remove the damaged fuse from its holder and replace with exact same type fuse. Insert the fuse holder back in its place and reconnect power.

Connecting A Bunch of Flurry Beam™ Fixtures

You will need a serial data link to run light shows using a DMX-512 controller or to run shows on two or more fixtures set to sync in master/slave operating mode. The combined number of channels required by all the fixtures on a serial data link determines the number of fixtures the data link can support.

Fixtures on a serial data link must be daisy chained in one single line. Also, connecting more than 32 fixtures on one serial data link without the use of a DMX optically-isolated splitter may result in deterioration of the digital DMX signal. The maximum recommended cable-run distance is 500 meters (1640 ft). The maximum recommended number of fixtures on a serial data link is 32 fixtures.

Data/DMX Cabling


To link fixtures together you'll need data cables. You should use data-grade cables that can carry a high quality signal and are less prone to electromagnetic interference.

For instance, Belden© 9841 meets the specifications for EIA RS-485 applications. Standard microphone cables will "probably" be OK, but note that they cannot transmit DMX data as reliably over long distances. In any event, the cable should have the following characteristics:

*2-conductor twisted pair plus a shield
Maximum capacitance between conductors – 30 pF/ft.
Maximum capacitance between conductor & shield – 55 pF/ft.
Maximum resistance of 20 ohms / 1000 ft.
Nominal impedance 100 – 140 ohms*


Cable Connectors

Cables must have a male XLR connector on one end and a female XLR connector on the other end. (Duh!)

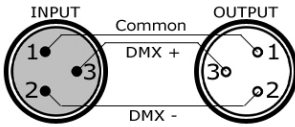

A Word on Termination: DMX is a resilient communication protocol, however errors still occasionally occur. Termination reduces signal errors, and therefore best practices include use of a terminator in all circumstances. If you are experiencing problems with erratic fixture behavior, especially over long signal cable runs, a terminator may help improve performance.

To build your own DMX Terminator:
Obtain a 120-ohm, 1/4-watt resistor, and wire it between pins 2 & 3 of the last fixture. They are also readily available from specialty retailers.

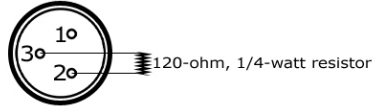

CAUTION: Do not allow contact between the common and the fixture's chassis ground. Grounding the common can cause a ground loop, and your fixture may perform erratically. Test cables with an ohm meter to verify correct polarity and to make sure the pins are not grounded or shorted to the shield or each other.

3-Pin??? 5-Pin??? Huh?!?

If you use a controller with a 5 pin DMX output connector, you will need to use a 5 pin to 3 pin adapter. They are widely available over the internet and from specialty retailers. If you'd like to build your own, the chart below details a proper cable conversion:


Conductor	3-Pin Female (Output)	5-Pin Male (Input)
Ground/Shield	Pin 1	Pin 1
DMX Data (-)	Pin 2	Pin 2
DMX Data (+)	Pin 3	Pin 3
Not Used.	No Connection.	No Connection.
Not Used.	No Connection.	No Connection.

Take It To The Next Level: Setting Up DMX Control

Step 1: Connect the male connector of the DMX cable to the female connector (output) on the controller.




Step 2: Connect the female connector of the DMX cable to the first fixture's male connector (input). *Note:* It doesn't matter which fixture address is the first one connected. We recommend connecting the fixtures in terms of their proximity to the controller, rather than connecting the lowest fixture number first, and so on.

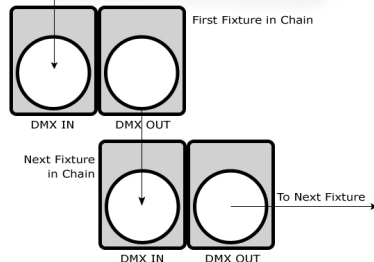

Step 3: Connect other fixtures in the chain from output to input as above. Place a DMX terminator on the output of the final fixture to ensure best communication.

Fixture Linking (Master/Slave Mode)

1. Connect the (male) 3 pin connector side of the DMX cable to the output (female) 3 pin connector of the first fixture.
2. Connect the end of the cable coming from the first fixture which will have a (female) 3 pin connector to the input connector of the next fixture consisting of a (male) 3 pin connector. Then, proceed to connect from the output as stated above to the input of the following fixture and so on.

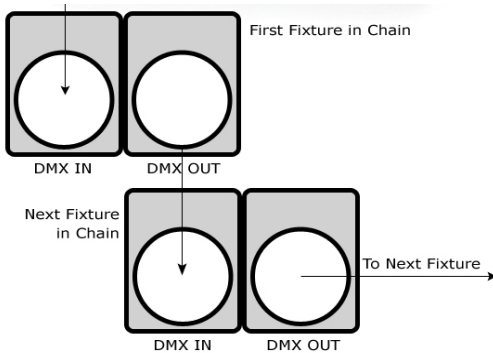

A quick note: Often, the setup for Master-Slave and Standalone operation requires that the first fixture in the chain be initialized for this purpose via either settings in the control panel or DIP-switches. Secondly, the fixtures that follow may also require a slave setting.

Check the **"Operating Adjustments"** section in this manual for complete instructions for this type of setup and configuration.

Mounting & Rigging

This fixture may be mounted in any SAFE position provided there is enough room for ventilation.

It is important never to obstruct the fan or vents pathway. Mount the fixture using a suitable "C" or "O" type clamp. The clamp should be rated to hold at least 10x the fixture's weight to ensure structural stability. Do not mount to surfaces with unknown strength, and ensure properly "rated" rigging is used when mounting fixtures overhead.

Adjust the angle of the fixture by loosening both knobs and tilting the fixture. After finding the desired position, retighten both knobs.

- When selecting installation location, take into consideration lamp replacement access (if applicable) and routine maintenance.
- Safety cables **MUST ALWAYS** be used.
- Never mount in places where the fixture will be exposed to rain, high humidity, extreme temperature changes or restricted ventilation.

4. OPERATING ADJUSTMENTS

The Control Panel

All the goodies and different modes possible with the Flurry Beam™ are accessed by using the control panel on the rear of the fixture. There are 4 control buttons below the LCD display which allow you to navigate through the various control panel menus.

<ESC>

Is used to navigate to the previous higher-level menu item.

<UP>


Scrolls through menu items and numbers in ascending order.

<DOWN>

Scrolls through menu items and numbers in descending order.

<ENTER>

Is used to select and confirm/store the current selection.

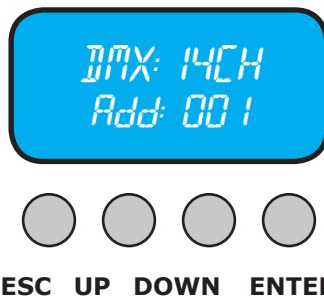

The control panel LCD display shows the menu items you select from the menu map on page #11. When a menu function is selected, the display will show immediately the first available option for the selected menu function.

Press the **<ESC>** button to access the main menu. Then use the **<UP/ DOWN>** buttons to navigate the main menu options. Press the **<ENTER>** button to select any menu function currently displayed, then use the **<UP/ DOWN>** buttons to scroll through any submenu options. You can press **<ENTER>** to save any changes made, or press **<ESC>** to exit without saving.

Control Panel Menu Structure

DMX: 14CH	<ENTER>	To choose a DMX address from 001-512
Test	Auto1	Pan/Tilt auto run & color chasing with strobe
	Auto2	Pan/Tilt auto run & color chasing (slow)
	Auto3	Pan/Tilt auto run & color chasing (fast)
	Auto4	Pan/Tilt auto run & color fade (slow)
	Auto5	Pan/Tilt auto run & color fade (fast)
	Auto6	Pan/Tilt fixed with color chase
	Auto7	Pan/Tilt fixed with color fade
	Sound1	Sound active mode 1 (slow speed)
	Sound2	Sound active mode 2 (fast speed)
Manual *Follow DMX channel values for each listed on page 14.	CH01	Pan (0° <-> 540°)
	CH02	Tilt (0° <-> 220°)
	CH03	Fine pan (16-bit)
	CH04	Fine tilt (16-bit)
	CH05	Pan/tilt speed (fast <-> slow)
	CH06	Dimmer
	CH07	Red Dimmer
	CH08	Green Dimmer
	CH09	Blue Dimmer
	CH10	White Dimmer
	CH11	Strobe
	CH12	Color Mixing
	CH13	Auto + sound active
	CH14	Motor reset
Option	Pan	Invert pan (yes/no)
	Tilt	Invert tilt (yes/no)
	YSet	Reset fine tilt (yes/no)
	Sound	Mic sensitivity adjustment (0-255)
	LCD	LCD display backlight setting (on/off)
PassWord	PassWord Lock	Enter password 988 to enable menu password protection upon system restart
	PassWord UnLock	Enter password 988 to disable menu password protection upon system restart
Re- Def-	<ENTER>	Reset system default settings
Reset All	<ENTER>	Fixture reset

DMX Mode

Allows the unit to be controlled by any universal DMX controller.

Set The DMX Starting Address

- 1.) To assign a DMX starting address to the fixture, press the **<ESC>** button until you reach the top menu level (and then use the **<UP/DOWN>** buttons if necessary) to navigate to **MENU1: Dmx 14CH**, and press the **<ENTER>** button. Then use the **<UP/DOWN>** buttons to display any value within the range of **001-512**, then push the **<ENTER>** button.

Slave Mode

- 1.) Connect fixtures together via DMX.
- 2.) The first fixture in the DMX chain is the master fixture, and the following fixtures will follow the master.

Auto, Stand-Alone, Sound Active Modes:

Allows single or M/S units to run factory installed programs at user selectable speeds.

Auto Mode

- 1.) Press the **<ESC>** button until you reach the top menu level (and then use the **<UP/DOWN>** buttons if necessary) to navigate to **Menu2: Test**, and press the **<ENTER>** button.
- 2.) Press the **<UP/DOWN>** buttons to highlight **Auto1-Auto7**, then press **<ENTER>**.

Sound Active Mode

- 1.) Press the **<ESC>** button until you reach the top menu level (and then use the **<UP/DOWN>** buttons if necessary) to navigate to **Menu2: Test**, and press the **<ENTER>** button.
- 2.) Press the **<UP/DOWN>** buttons to highlight **Sound1** or **Sound2**, and then press the **<ENTER>** button.
- 3.) You can then adjust the mic sensitivity level by returning to the top menu level, and then in the same manner navigate to **Menu4: Option > Sound**, and choose a mic level setting between the values of 000-255.

Manual Adjustments

- 1.) Press the **<ESC>** button until you reach the top menu level (and then use the **<UP/DOWN>** buttons if necessary) to navigate to **Menu3: Manual**, and press the **<ENTER>** button.
- 2.) Press the **<UP/DOWN>** buttons to highlight **CH1-CH14**, and then press the **<ENTER>** button.
- 3.) Every option for **CH1-CH14** uses the exact same values of 000-255 as listed on the DMX chart on page 14.

Menu Password Protection

Allows you to enable/disable the menu password protection feature.

- 1.) Press the **<ESC>** button until you reach the top menu level (and then use the **<UP/DOWN>** buttons if necessary) to navigate to **Menu5: PassWord**, and press the **<ENTER>** button.
- 2.) Press the **<UP/DOWN>** buttons to highlight **PassWord Lock** or **PassWord UnLock**, and then press the **<ENTER>** button. Enter the three digit code: 988, then press the **<ENTER>** button.
- 3.) Power off/on. You have now enabled/disabled the password protect feature.

System Reset

- 1.) To automatically reset the X/Y motors to automatically realign the moving head position, press the **<ESC>** to reach the top menu level, and use the **<UP/DOWN>** buttons navigate to **Menu7: Reset**, and press **<ENTER>**. Then simply press **<ENTER>** again to confirm.

Restore Factory Settings

- 1.) To reset the fixture to its factory default settings, press the **<ESC>** to reach the top menu level, and use the **<UP/DOWN>** buttons navigate to **Menu6: Re-Def-**, and press **<ENTER>**.

DMX Values In-Depth (14-Channel Mode)

Channel	Value	What It Does
1	000 <--> 255	Pan (0-540°)
2	000 <--> 255	Tilt (0-220°)
3	000 <--> 255	Fine Pan (16-bit)
4	000 <--> 255	Fine Tilt (16-bit)
5	000 <--> 255	Pan/Tilt Speed (Fast <--> Slow)
6	000 <--> 255	Dimmer (0% <--> 100%)
7	000 <--> 255	Red Dimmer (0% <--> 100%)
8	000 <--> 255	Green Dimmer (0% <--> 100%)
9	000 <--> 255	Blue Dimmer (0% <--> 100%)
10	000 <--> 255	White Dimmer (0% <--> 100%)
11	000 <--> 000 001 <--> 255	Strobe No Function Strobe (Slow to Fast)
12	001 <--> 043 044 <--> 085 086 <--> 127 128 <--> 169 170 <--> 211 212 <--> 253 254 <--> 255	Color Mixing Red (full), Green (fade in) Red (fade out), Green (full) Green (fade out), Blue (fade in) Blue (full), Red (fade in) Red/Blue (full), Green (fade in) Red/Green/Blue (full), White (fade in) Red/Green/Blue/White (full)
13	000 <--> 010 011 <--> 040 041 <--> 070 071 <--> 100 101 <--> 130 131 <--> 160 161 <--> 190 191 <--> 220 221 <--> 240 241 <--> 255	Auto/Sound Active No Function Auto 1: Pan/Tilt auto run & color chasing with strobe Auto 2: Pan/Tilt auto run & color chasing (slow) Auto 3: Pan/Tilt auto run & color chasing (fast) Auto 4: Pan/Tilt auto run & color fade (slow) Auto 5: Pan/Tilt auto run & color fade (fast) Auto 6: Pan/Tilt fixed with color chase Auto 7: Pan/Tilt fixed with color fade Sound active mode 1 (slow speed) Sound active mode 2 (fast speed)
14	000 <--> 254 255	Reset No Function Fixture resets in 3 seconds

5. APPENDIX

A Quick Lesson On DMX

DMX covers (and is an abbreviation for) Digital MultipleXed signals. It is the most common communications standard used by lighting and related stage equipment.

DMX provides up to 512 control "channels" per data link. Each of these channels was originally intended to control lamp dimmer levels. You can think of it as 512 faders on a lighting console, connected to 512 light bulbs. Each slider's position is sent over the data link as an 8-bit number having a value between 0 and 255. The value 0 corresponds to the light bulb being completely off while 255 corresponds to the light bulb being fully on.

DMX data is transmitted at 250,000 bits per second using the RS-485 transmission standard over two wires. As with microphone cables, a grounded cable shield is used to prevent interference with other signals.

There are five pins on a DMX connector: a wire for ground (cable shield), two wires for "Primary" communication which goes from a DMX source to a DMX receiver, and two wires for a "Secondary" communication which goes from a DMX receiver back to a DMX source. Generally, the "Secondary" channel is not used so data flows only from sources to receivers. Hence, most of us are most familiar with DMX-512 as being employer over typical 3-pin "mic cables," although this does not conform to the defined standard.

DMX is connected using a daisy-chain configuration where the source connects to the input of the first device, the output of the first device connects to the input of the next device, and so on. The standard allows for up to 32 devices on a single DMX link.

Each receiving device typically has a means for setting the "starting channel number" that it will respond to. For example, if two 6-channel fixtures are used, the first fixture might be set to start at channel 1 so it would respond to DMX channels 1 through 6, and the next fixture would be set to start at channel 7 so it would respond to channels 7 through 12.

Troubleshooting

Symptom	Solution
Fixture Auto-Shut Off	Check the fan in the fixture. If it is stopped or moving slower than normal, the unit may have shut itself off due to high heat. This is to protect the fixture from overheating. Clear the fan of obstructions, or return the unit for service.
Beam is Dim	Check optical system and clean excess dust/grime. Also ensure that the 220V/110V switch is in the correct position, if applicable.
No Light Output	Check to ensure fixture is operating under correct mode, IE sound active/auto/DMX/Etc., if applicable. Contact service for more information.
Chase Speed Too Fast/Slow	Check to ensure proper setup of speed adjustment.
No Power	Check fuse, AC cord and circuit for malfunction.
No Response to Audio	Verify that the fixture is in "Sound Active" mode. Adjust Audio Sensitivity, If Applicable.
Fixture Not Responding / Responding Erratically	Make sure all connectors are seated properly and securely. Use Only DMX Cables. Install a Terminator. Check all cables for defects. Reset fixture(s).

Keeping Your Flurry Beam™ As Good As New

The fixture you've received is a rugged, tough piece of pro lighting equipment, and as long as you take care of it, it will take care of you. That said, like anything, you'll need to take care of it if you want it to operate as designed. You should absolutely keep the fixture clean, especially if you are using it in an environment with a lot of dust, fog, haze, wild animals, wild teenagers or spilled drinks.

Cleaning the optics routinely with a suitable glass cleaner will greatly improve the quality of light output. Keeping the fans free of dust and debris will keep the fixture running cool and prevent damage from overheating.

In transit, keep the fixtures in cases. You wouldn't throw a prized guitar, drumset, or other piece of expensive gear into a gear trailer without a case, and similarly, you shouldn't even think about doing it with your shiny new light fixtures.

Common sense and taking care of your fixtures will be the single biggest thing you can do to keep them running at peak performance and let you worry about designing a great light show, putting on a great concert, or maximizing your client's satisfaction and "wow factor." That's what it's all about, after all!

Returns (Gasp!)

We've taken a lot of precautions to make sure you never even have to worry about sending a defective unit back, or sending a unit in for service. But, like any complex piece of equipment designed and built by humans, once in a while, something doesn't go as planned. If you find yourself with a fixture that isn't behaving like a good little fixture should, you'll need to obtain a Return Authorization (RA).

Don't worry, this is easy. Just go to our website and open a support ticket at www.blizzardlighting.com/tickets, and we'll issue you an RA. Then, you'll need to send the unit to us using a trackable, pre-paid freight method. We suggest using USPS Priority or UPS. Make sure you carefully pack the fixture for transit, and whenever possible, use the original box & packing for shipping.

When returning your fixture for service, be sure to include the following:

- 1.) Your contact information (Name, Address, Phone Number, Email address).
- 2.) The RA# issued to you
- 3.) A brief description of the problem/symptoms.

We will, at our discretion, repair or replace the fixture. Please remember that any shipping damage which occurs in transit to us is the customer's responsibility, so pack it well!

Shipping Issues

Damage incurred in shipping is the responsibility of the shipper, and must be reported to the carrier immediately upon receipt of the items. Claims must be made within seven (7) days of receipt.

Tech Specs!

Weight & Dimensions	
Width	7.9 inches (20.1 cm)
Depth	7.7 inches (19.6 cm)
Height	12.5 inches (31.7 cm)
Weight	7.7 lbs (3.5 kg)
Power	
Operating Voltage	AC 110-240VAC, 50/60 Hz
Power Consumption	98W, 1.27A
Power Factor	.64
Light Source	
LED	1* 60W 6-in-1 RGBW LED
Optical	
Beam Angle	2.5° Beam Angle
Luminous Intensity	43,678 Lux @ 2m 7,306 Lux @ 5m
Thermal	
Max. Operating Temp.	104 degrees F (40 degrees C) ambient
Control	
Protocol	USITT DMX-512
DMX Channels	14-Channel
Input	3-pin XLR Male
Output	3-pin XLR Female
Other Operating Modes	Standalone, Master/Slave, Sound Active
Other Information	
I hope you don't mind that I made you say "jambalaya" to yourself.	
Warranty	2-year limited warranty, does not cover malfunction caused by damage to LED.

DISCLAIMER:

The power connector fitted to the fixture and fixture cord are designed for compatibility with products manufactured by Neutrik AG, Neutrik USA and their related entities, however they are not manufactured by, affiliated with or endorsed by Neutrik AG, Neutrik USA, or any related entity. Neutrik® and powerCON® are registered trademarks of Neutrik AG.

This page is intentionally left blank.

This page is intentionally left blank.



**Enjoy your product!
Our sincerest thanks for your purchase!
--The team @ Blizzard Lighting**