

Digital Wireless Receiver

Operating Instructions

Before operating the unit, please read this manual thoroughly and retain it for future reference.

DWR-R01D


WARNING

To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture.

To avoid electrical shock, do not open the cabinet. Refer servicing to qualified personnel only.

WARNING

THIS APPARATUS MUST BE EARTHED.

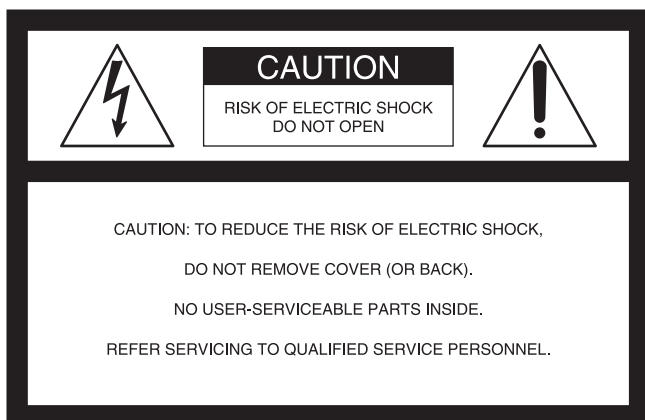


This symbol is intended to alert the user to the presence of uninsulated “dangerous voltage” within the product’s enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



This symbol is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

Important Safety Instructions

- Read these instructions.
- Keep these instructions.
- Heed all warnings.
- Follow all instructions.
- Do not use this apparatus near water.
- Clean only with dry cloth.
- Do not block any ventilation openings. Install in accordance with the manufacturer’s instructions.

- Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding-type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
- Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
- Only use attachments/accessories specified by the manufacturer.
- Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over. 
- Unplug this apparatus during lightning storms or when unused for long periods of time.
- Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.

CAUTION

The apparatus shall not be exposed to dripping or splashing. No objects filled with liquids, such as vases, shall be placed on the apparatus.

WARNING

Excessive sound pressure from earphones and headphones can cause hearing loss. In order to use this product safely, avoid prolonged listening at excessive sound pressure levels.

Suomessa asuville asiakkaille

Laite on liitettävä suojamaadoituskoskettimilla varustettuun pistorasiaan

For kundene i Norge

Apparatet må tilkoples jordet stikkontakt

För kunderna i Sverige

Apparaten skall anslutas till jordat uttag

For the customers in the U.S.A.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a

residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

You are cautioned that any changes or modifications not expressly approved in this manual could void your authority to operate this equipment.

All interface cables used to connect peripherals must be shielded in order to comply with the limits for a digital device pursuant to Subpart B of Part 15 of FCC Rules.

If you have any questions about this product, you may call: Sony's Business Information Center (BIC) at 1-800-686-7669

or Write to: Sony Customer Information Services Center
6900-29 Daniels Parkway, PMB 330 Fort Myers, Florida
33912

Declaration of Conformity

Trade Name: SONY
Model: DWR-R01D
Responsible party: Sony Electronics Inc.
Address: 16530 Via Esprillo, San Diego, CA
92127 U.S.A.
Telephone No.: 858-942-2230

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

For the customers in Canada

Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

The term "IC:" before the radio certification number only signifies that Industry Canada technical specifications were met.

This Class B digital apparatus complies with Canadian ICES-003.

AVERTISSEMENT

Afin de réduire les risques d'incendie ou d'électrocution, ne pas exposer cet appareil à la pluie ou à l'humidité.

Afin d'écarter tout risque d'électrocution, garder le coffret fermé. Ne confier l'entretien de l'appareil qu'à un personnel qualifié.

AVERTISSEMENT

CET APPAREIL DOIT ÊTRE RELIÉ À LA TERRE.

ATTENTION

Eviter d'exposer l'appareil à un égouttement ou à des éclaboussures. Ne placer aucun objet rempli de liquide, comme un vase, sur l'appareil.

ATTENTION

Cet appareil n'est pas déconnecté de la source d'alimentation secteur tant qu'il est raccordé à la prise murale, même si l'appareil lui-même a été mis hors tension.

AVERTISSEMENT

Une pression acoustique excessive en provenance des écouteurs ou du casque peut provoquer une baisse de l'acuité auditive.

Pour utiliser ce produit en toute sécurité, évitez l'écoute prolongée à des pressions sonores excessives.

Pour les utilisateurs au Canada

L'utilisation doit répondre aux deux conditions suivantes : (1) ce matériel ne doit pas provoquer de brouillage et (2) il doit accepter tout brouillage, même celui qui est susceptible d'affecter son fonctionnement.

La mention « IC: » devant le numéro de certification/homologation signifie uniquement que les spécifications techniques d'Industrie Canada sont remplies.

Cet appareil numérique de la classe B est conforme à la norme NMB-003 du Canada.

WARNUNG

Um die Gefahr von Bränden oder elektrischen Schlägen zu verringern, darf dieses Gerät nicht Regen oder Feuchtigkeit ausgesetzt werden.

Um einen elektrischen Schlag zu vermeiden, darf das Gehäuse nicht geöffnet werden. Überlassen Sie Wartungsarbeiten stets nur qualifiziertem Fachpersonal.

WARNUNG

DIESES GERÄT MUSS GEERDET WERDEN.

VORSICHT

Das Gerät ist nicht tropf- und spritzwassergeschützt. Es dürfen keine mit Flüssigkeiten gefüllten Gegenstände, z. B. Vasen, darauf abgestellt werden.

VORSICHT

Solange das Netzkabel an eine Netzsteckdose angeschlossen ist, bleibt das Gerät auch im ausgeschalteten Zustand mit dem Stromnetz verbunden.

WARNUNG

Zu hoher Schalldruck von Ohrhörern und Kopfhörern kann Gehörschäden verursachen.

Um dieses Produkt sicher zu verwenden, vermeiden Sie längeres Hören bei sehr hohen Schalldruckpegeln.

AVVERTENZA

Per ridurre il rischio di incendi o scosse elettriche, non esporre questo apparato alla pioggia o all'umidità.

Per evitare scosse elettriche, non aprire l'involucro. Per l'assistenza rivolgersi unicamente a personale qualificato.

AVVERTENZA

QUESTO APPARECCHIO DEVE ESSERE COLLEGATO A MASSA.

ATTENZIONE

L'apparecchio non deve essere esposto a gocciolamenti o spruzzi. Non collocare sull'apparecchio oggetti contenenti liquidi, come ad esempio vasi di fiori.

ATTENZIONE

L'apparecchio non è scollegato dalla fonte di alimentazione CA (corrente di rete) fintanto che è collegato ad una presa di corrente, anche se l'apparecchio stesso è stato spento.

AVVERTENZA

Un'eccessiva pressione sonora da auricolari e cuffie può causare la perdita dell'udito.

Per usare questo prodotto in maniera sicura, evitare l'ascolto prolungato a livelli eccessivi di pressione sonora.

ADVERTENCIA

Para reducir el riesgo de electrocución, no exponga este aparato a la lluvia ni a la humedad.

Para evitar descargas eléctricas, no abra el aparato. Solicite asistencia técnica únicamente a personal especializado.

ADVERTENCIA

ESTE APARATO DEBE CONECTARSE A TIERRA.

PRECAUCIÓN

No se debe exponer la unidad a goteos o salpicaduras. Tampoco se deben colocar sobre la misma objetos llenos de líquido, tales como un florero.

PRECAUCIÓN

La unidad no queda desconectada de la alimentación eléctrica siempre que esté conectado al tomacorriente incluso aunque se desconecte el interruptor principal.

ADVERTENCIA

Una excesiva presión de sonido de los auriculares y cascos auriculares puede provocar una pérdida de percepción de sus oídos.

Para utilizar este producto con seguridad, no escuche durante mucho tiempo con niveles de presión de sonido excesivos.

This model has an RF module of the FCC/IC approval built-in

BUILT IN MODULE RM-223

**FCC-ID: AK8RM223
IC: 409B-RM223**

For the customers in the U.S.A.

IMPORTANT NOTE: To comply with the FCC RF exposure compliance requirements, no change to the antenna or the device is permitted, Any change to the antenna or the device could result in the device exceeding the RF exposure requirements and void user's authority to operate this device.

This device complies with FCC radiation exposure limits set forth for uncontrolled equipment and meets the FCC radio frequency (RF) Exposure Guidelines in Supplement C to OET65. This device has very low levels of RF energy that it is deemed to comply without testing of specific absorption radio (SAR).

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.



For the customers in Europe

Hereby, Sony Corporation, declares that this DWR-R01D is in compliance with the essential requirements and other relevant provisions of the Directive 1999/5/EC. For details, please access the following URL: <http://www.compliance.sony.de/>

This product is intended to be used in the following countries : United Kingdom, Germany, Norway, Luxembourg, Belgium, Denmark, France, Italy, Sweden, Switzerland, Finland, Iceland, and Turkey.

Pour les clients en Europe

Par la présente Sony Corporation déclare que l'appareil DWR-R01D est conforme aux exigences essentielles et aux autres dispositions pertinentes de la directive 1999/5/CE.

Pour toute information complémentaire, veuillez consulter l'URL suivante: <http://www.compliance.sony.de/>

Ce produit est prévu pour être utilisé dans les pays suivants: Royaume-Uni, Allemagne, Norvège, Luxembourg, Belgique, Danemark, France, Italie, Suède, Suisse, Finlande, Islande et Turquie.

Für Kunden in Europa

Hiermit erklärt Sony Corporation, dass sich das Gerät DWR-R01D in Übereinstimmung mit den grundlegenden Anforderungen und den übrigen einschlägigen Bestimmungen der Richtlinie 1999/5/EG befindet. Weitere Informationen erhältlich unter: <http://www.compliance.sony.de/>

Dieses Produkt ist für den Gebrauch in den folgenden Ländern vorgesehen: Vereinigtes Königreich, Deutschland, Norwegen, Luxemburg, Belgien, Dänemark, Frankreich, Italien, Schweden, Schweiz, Finnland, Island und Türkei.

Per i clienti in Europa

Con la presente Sony Corporation dichiara che questo DWR-R01D è conforme ai requisiti essenziali ed alle altre disposizioni pertinenti stabilite dalla direttiva 1999/5/CE. Per ulteriori dettagli, si prega di consultare il seguente URL: <http://www.compliance.sony.de/>

Questo prodotto è destinato all'uso nei seguenti paesi: Regno Unito, Germania, Norvegia, Lussemburgo, Belgio, Danimarca, Francia, Italia, Svezia, Svizzera, Finlandia, Islanda e Turchia.

Para los clientes de Europa

Por medio de la presente Sony Corporation declara que el DWR-R01D cumple con los requisitos esenciales y cualesquiera otras disposiciones aplicables o exigibles de la Directiva 1999/5/CE. Para mayor información, por favor consulte el siguiente URL: <http://www.compliance.sony.de/>

Este producto está destinado a utilizarse en los siguientes países: Reino Unido, Alemania, Noruega, Luxemburgo, Bélgica, Dinamarca, Francia, Italia, Suecia, Suiza, Finlandia, Islandia y Turquía.

Voor de klanten in Europa

Hierbij verklaart Sony Corporation dat het toestel DWR-R01D in overeenstemming is met de essentiële eisen en de andere relevante bepalingen van richtlijn 1999/5/EG. Nadere informatie kunt u vinden op: <http://www.compliance.sony.de/>

Dit product is bedoeld om in volgende landen gebruikt te worden: Verenigd Koninkrijk, Duitsland, Noorwegen, Luxemburg, België, Denemarken, Frankrijk, Italië, Zweden, Zwitserland, Finland, IJsland en Turkije.

For kunder i Europa

Härmed intygar Sony Corporation att denna DWR-R01D står i överensstämmelse med de väsentliga egenskapskrav och övriga relevanta bestämmelser som framgår av direktiv 1999/5/EG.

För ytterligare information gå in på följande hemsida:
<http://www.compliance.sony.de/>

Den här produkten är avsedd för användning i följande länder: Storbritannien, Tyskland, Norge, Luxembourg, Belgien, Danmark, Frankrike, Italien, Sverige, Schweiz, Finland, Island och Turkiet.

Para os clientes da Europa

Sony Corporation declara que este DWR-R01D está conforme com os requisitos essenciais e outras disposições da Directiva 1999/5/CE.

Para mais informacoes, por favor consulte a seguinte URL:
<http://www.compliance.sony.de/>

Este produto destina-se a ser usado nos seguintes países: Reino Unido, Alemanha, Noruega, Luxemburgo, Bélgica, Dinamarca, França, Itália, Suécia, Suíça, Finlândia, Islândia e Turquia.

For kunder i Europa

Undertegnede Sony Corporation erklærer herved, at følgende udstyr DWR-R01D overholder de væsentlige krav og øvrige relevante krav i direktiv 1999/5/EF. For yderligere information gå ind på følgende hjemmeside: <http://www.compliance.sony.de/>

Dette produkt er beregnet til brug i de følgende lande: Storbritannien, Tyskland, Norge, Luxembourg, Belgien, Danmark, Frankrig, Italien, Sverige, Schweiz, Finland, Island og Tyrkiet.

Euroopassa oleville asiakkaille

Sony Corporation vakuuttaa täten että DWR-R01D tyyppinen laite on direktiivin 1999/5/EY oleellisten vaatimusten ja sitä koskevien direktiivin muiden ehtojen mukainen.

Halutessasi lisätietoja, käy osoitteessa:
<http://www.compliance.sony.de/>

Tämä tuote on tarkoitettu käytettäväksi seuraavissa maissa: Yhdistynyt kuningaskunta, Saksa, Norja, Luxemburg, Belgia, Tanska, Ranska, Italia, Ruotsi, Sveitsi, Suomi, Islanti ja Turkki.

For kundene i Europa

Sony Corporation erklærer herved at utstyret DWR-R01D er i samsvar med de grunnleggende krav og øvrige relevante krav i direktiv 1999/5/EF.

For flere detaljer, vennligst se:
<http://www.compliance.sony.de/>

Dette produktet er ment for bruk i følgende land: Storbritannia, Tyskland, Norge, Luxemburg, Belgia, Danmark, Frankrike, Italia, Sverige, Sveits, Finland, Island og Tyrkia.

Για τους πελάτες στην Ευρώπη

Με την παρούσα η Sony Corporation δηλώνει ότι DWR-R01D συμμορφώνεται προς της ουσιώδεις απαιτήσεις και τις λοιπές σχετικές διατάξεις της οδηγίας 1999/5/ΕΚ..

Για λεπτομέρειες παρακαλούμε όπως ελένξετε την ακόλουθη σελίδα του διαδικτύου:
<http://www.compliance.sony.de/>

Το προϊόν προορίζεται για χρήση στις εξής χώρες: Ηνωμένο Βασίλειο, Γερμανία, Νορβηγία, Λουξεμβούργο, Βέλγιο, Δανία, Γαλλία, Ιταλία, Σουηδία, Ελβετία, Φινλανδία, Ισλανδία και Τουρκία.

За клиентите в Европа

С настоящето Сони Корпорация декларира, че този DWR-R01D отговаря на основните изисквания и другите съответстващи клаузи на Директива 1999/5/ЕС.

Подробности може да намерите на Интернет страницата : <http://www.compliance.sony.de/>.

Този продукт е предназначен за употреба в следните държави: Обединеното кралство, Германия, Норвегия, Люксембург, Белгия, Дания, Франция, Италия, Швеция, Швейцария, Финландия, Исландия и Турция.

Pro zákazníky v Evropě

Sony Corporation tímto prohlašuje, že tento DWR-R01D je ve shodě se základními požadavky a dalšími příslušnými ustanoveními směrnice 1999/5/ES. Podrobnosti lze získat na následující URL:
<http://www.compliance.sony.de/>

Tento produkt je určen k použití v následujících zemích: Spojené království, Německo, Norsko, Lucembursko, Belgie, Dánsko, Francie, Itálie, Švédsko, Švýcarsko, Finsko, Island a Turecko.

Euroopa klientidele

Sony Corporation kinnitab käesolevaga seadme DWR-R01D vastavust 1999/5/EÜ direktiivi põhinõuetele ja

nimetatud direktiivist tulenevatele teistele asjakohastele sätetele.

Üksikasjalikum info: <http://www.compliance.sony.de/>.

See toode on ettenähtud kasutamiseks järgmistes riikides: Suurbritannia, Saksamaa, Norra, Luksemburg, Belgia, Taani, Prantsusmaa, Itaalia, Rootsi, Šveits, Soome, Island ja Türgi.

Európai vásárlóink fi gyelmébe

Alulírott, Sony Corporation nyilatkozom, hogy a(z) DWR-R01D megfelel a vonatkozó alapvető követelményeknek és az 1999/5/EC irányelv egyéb előírásainak.

További információkat a következő weboldalon találhat: <http://www.compliance.sony.de/>

Ez a termék a következő országokban használható: Egyesült Királyság, Németország, Norvégia, Luxemburg, Belgium, Dánia, Franciaország, Olaszország, Svédország, Svájc, Finnország, Izland és Törökország.

Klientiem Eiropā

Ar šo Sony Corporation deklarē, ka DWR-R01D atbilst Direktīvas 1999/5/EK būtiskajām prasībām un citiem ar to saistītajiem noteikumiem.

Plašāka informācija ir pieejama: <http://www.compliance.sony.de/>

Šis produkts ir paredzēts lietošanai šādās valstīs: Apvienotā Karaliste, Vācija, Norvēģija, Luksemburga, Beļģija, Dānija, Francija, Itālija, Zviedrija, Šveice, Somija, Islande un Turcija.

Klientams Europoje

Šiuo Sony Corporation deklaruoją, kad šis DWR-R01D atitinka esminius reikalavimus ir kitas 1999/5/EB Direktyvos nuostatas.

Susipažinti su visu atitikties deklaracijos turiniu Jūs galite interneto tinklalapyje: <http://www.compliance.sony.de/>

Šis gaminys skirtas naudoti šiose šalyse: Jungtinėje Karalystėje, Vokietijoje, Norvegijoje, Liuksemburge, Belgijoje, Danijoje, Prancūzijoje, Italijoje, Švedijoje, Šveicarijoje, Suomijoje, Islandijoje ir Turkijoje.

Dotyczy klientów z Europy

Niniejszym Sony Corporation oświadcza, że DWR-R01D jest zgodne z zasadniczymi wymaganiami oraz innymi

stosownymi postanowieniami Dyrektywy 1999/5/WE.

Szczegółowe informacje znaleźć można pod następującym adresem URL:

<http://www.compliance.sony.de/>

Ten produkt jest przeznaczony do użytku w następujących krajach: Wielkiej Brytanii, Niemczech, Norwegii, Luksemburgu, Belgii, Danii, Francji, Włoszech, Szwecji, Szwajcarii, Finlandii, Islandii i Turcji.

Pentru clienții din Europa

Prin prezenta, Sony Corporation declară că acest DWR-R01D respectă cerințele esențiale și este în conformitate cu prevederile Directivei 1995/5/EC. Pentru detalii, vă rugăm accesați următoarea adresă: <http://www.compliance.sony.de/>

Acest produs este destinat utilizării în următoarele țări: Regatul Unit, Germania, Norvegia, Luxemburg, Belgia, Danemarca, Franța, Italia, Suedia, Elveția, Finlanda, Islanda și Turcia.

Pre zákazníkovi v Európe

Sony Corporation týmto vyhlasuje, že DWR-R01D splňuje základné požiadavky a všetky príslušné ustanovenia Smernice 1999/5/ES.

Podrobnosti získate na nasledovnej webovej adrese: <http://www.compliance.sony.de/>

Tento produkt je určený na používanie v nasledovných krajinách: Veľká Británia, Nemecko, Nórsko, Luxembursko, Belgicko, Dánsko, Francúzsko, Taliansko, Švédsko, Švajčiarsko, Fínsko, Island a Turecko.

Za stranke v Evropi

Sony Corporation izjavlja, da je ta DWR-R01D v skladu z bistvenimi zahtevami in ostalimi relevantnimi določili direktive 1999/5/ES.

Za podrobnosti vas naprošamo, če pogledate na URL: <http://www.compliance.sony.de/>

Izdelek je namenjen za uporabo v naslednjih državah: Veliki Britaniji, Nemčiji, Norveški, Luksemburgu, Belgiji, Danski, Franciji, Italiji, Švedski, Švici, Finski, Islandiji in Turčiji.

Table of Contents

Features	9
Parts Identification	10
Front Panel.....	10
Rear Panel.....	13
Preparation	15
Rack Mounting	15
System Configuration Examples	16
Using the Supplied Antennas.....	16
Configuration Example of Multi-Channel System	18
Configuration Example of ST Remote System	21
Configuration Example of NT Remote System	22
Setting the Receiving Channel	23
Selecting the Group/Channel.....	23
Using the Active Channel Scan Function...	23
Using the Clear Channel Scan Function.....	24
Using the Encrypted Transmission Function	24
Using Secure Key Mode (SECURE KEY)	24
Using Password Mode (PASSWORD).....	25
Menu Displays and Detailed Settings	25
Menu Structure and Hierarchy.....	25
Basic Menu Operations.....	26
RECEIVER Menu	26
Group/channel Selection (GP/CH)	26
Active Channel Scanning Function (ACTIVE CH SCAN)	26
Clear Channel Scan Function (CLEAR CH SCAN).....	26
Encrypted Transmission Function (ENCRYPTION).....	27
Setting Analog Audio Output Level (OUTPUT LEVEL).....	27
TRANSMITTER (Transmitter Virtual) Menu	27
Display of the Power Save Setting (POWER SAVE)	27
Display of the Transmission Power Setting (RF POWER)	28
Display of Audio Input Level (INPUT LEVEL).....	28
Display of the Low-cut Filter Setting (LCF)	28
Display of the +48 V Power Setting (+48V)	28
Display of Accumulated Transmitter Use Time (TIME)	28
RF REMOTE Menu	28
Using the Wireless Remote Control Function (RF REMOTE).....	28
Pairing With a Transmitter (PAIRING)	28
Displaying the Remote Mode (MODE).....	29
UTILITY Menu	30
Items Related to Signal Reception (RF submenu)	30
Items Related to Audio (AUDIO submenu)	30
Items Related to Network (NETWORK submenu)	31
Items Related to Display (DISPLAY submenu)	31
Resetting Parameters to Their Factory Settings (FACTORY PRESET)	31
Displaying the Software Version (VERSION)	31
Changing the Settings on the Transmitter	32
Group/channel Setting (GP/CH).....	32
Power-saving Setting (POWER SAVE).....	32
Transmission Power Setting (RF POWER)	32
Audio Input Level Setting (INPUT LEVEL)	32
Low-cut Filter Setting (LCF).....	32
+48 V Power Setting (+48V).....	32
Block Diagram	33
When the Alert Indicator Lights	34
Error Messages	35
Troubleshooting	36
Important Notes on Operation	37
Notes on Using the Receiver	37
On cleaning	37
Specifications	38

Features

The DWR-R01D Digital Wireless Receiver is a rack-mountable wireless receiver capable of receiving two channels from digital wireless transmitters. This receiver enables the application of multiple channels over unused television channels through the use of the built-in Sony original channel plan.

What are the strengths of a Digital Wireless Microphone System?

This system has the following special features and qualities:

- High-quality audio signal transmission approaching to the quality of wired microphone
- Extremely tolerant to interference waves and secure wireless transmission
- Simultaneous multi-channel operation
- Encrypted transmission
- Metadata transmission

The features of this receiver are described below.

Preprogrammed wireless channel plans for simultaneous multi-channel operation

The DWR-R01D has many preprogrammed channel groups, meaning combination of wireless channels to permit simultaneous operation of multiple channels without intermodulation. The DWR-R01D also has channel plans for multi-channel system using digital wireless system with analog wireless system, making the channel setting easier in such cases.

Building up wireless remote control system according to system scale

Digital wireless transmitters can be remotely controlled while checking their status on the display of the DWR-R01D. According to the scale and purposes of the system, the following two types of wireless remote control system can be built up.

ST remote system (stand-alone wireless remote control system)

The DWR-R01D emits control signal through the whip antenna attached to the REM ANT connector to control the transmitters.

NT remote system (network wireless remote control system)

By adding the optional RMU-01 Remote Control Unit, up to 82 transmitters can be controlled, enabling the multi-channel remote control system operation. Using two or

more RMU-01 units within a system can achieve wider area coverage.

Operation status monitoring with the Wireless Studio software

The supplied Wireless Studio software allows you to monitor the status of each receiver, transmitter, and RMU used for operation.

Two-channel wireless receiver

With its dual-channel receiver capability, one DWR-R01D can be used with two transmitters simultaneously. Up to eight units can be connected to an antenna in cascade, and up to 16 channels can also be operated without an antenna divider. Furthermore, if an optional WD-850 UHF Antenna Divider is used, a system with more than 16 channels can be built.

Auto channel scanning functions

The DWR-R01D comes with two auto channel scanning functions (active channel scan function and clear channel scan function) that allow for fast, easy and safe frequency channel changes.

Various information display and improvement of operability


The large-scale OLED (Organic Light-Emitting Diode) display shows various operational information. The large display, menu buttons, and jog dial enable fast operation. Furthermore, an ALERT indicator on the front panel lights if trouble occurs during operation, so you can respond quickly.

Rack mounting

The DWR-R01D can be mounted in an EIA standard 19-inch rack (1U size). Solid all-in-one structure is adopted on the screw brackets and side panels.

Parts Identification

Front Panel

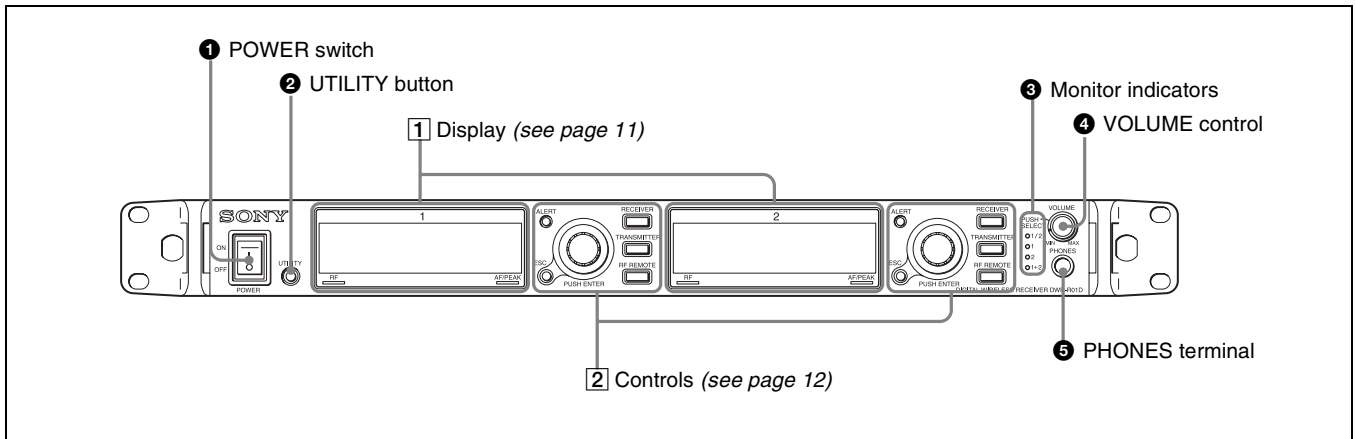

1 POWER switch

Turns the receiver on or off.

Set to the **I** position to turn the receiver on. Set to the **O** position when turning off the main power supply.

2 UTILITY (UTILITY menu) button

Press to display UTILITY menu. This button lights up brightly during UTILITY menu operation.

3 Monitor indicators

One of four indicators lights up corresponding to the VOLUME control operation.

1/2: Audio from channel 1 is output from the L channel of the headphones and audio from channel 2 is output from the R channel.

1: Audio from channel 1 is output from the L and R channels of the headphones.

2: Audio from channel 2 is output from the L and R channels of the headphones.

1+2: Audio from channel 1 and 2 are mixed to be output L and R channels of the headphones.

4 VOLUME (monitor channel selection/monitor volume) control

Press to change the audio output from the headphones. Rotate to control monitor volume.


5 PHONES (headphones) terminal

Connect the headphones here.

1 Display

The contents of the display before the DWR-R01D enters menu operation (top display) are described below. Since the top display shows information contained in the metadata sent from the transmitter as well as the receiver settings and status, this can be used for operation monitoring.

The display contents of receiver channel 1 and 2 are the same. The display of receiver channel 1 is used for illustration purposes.

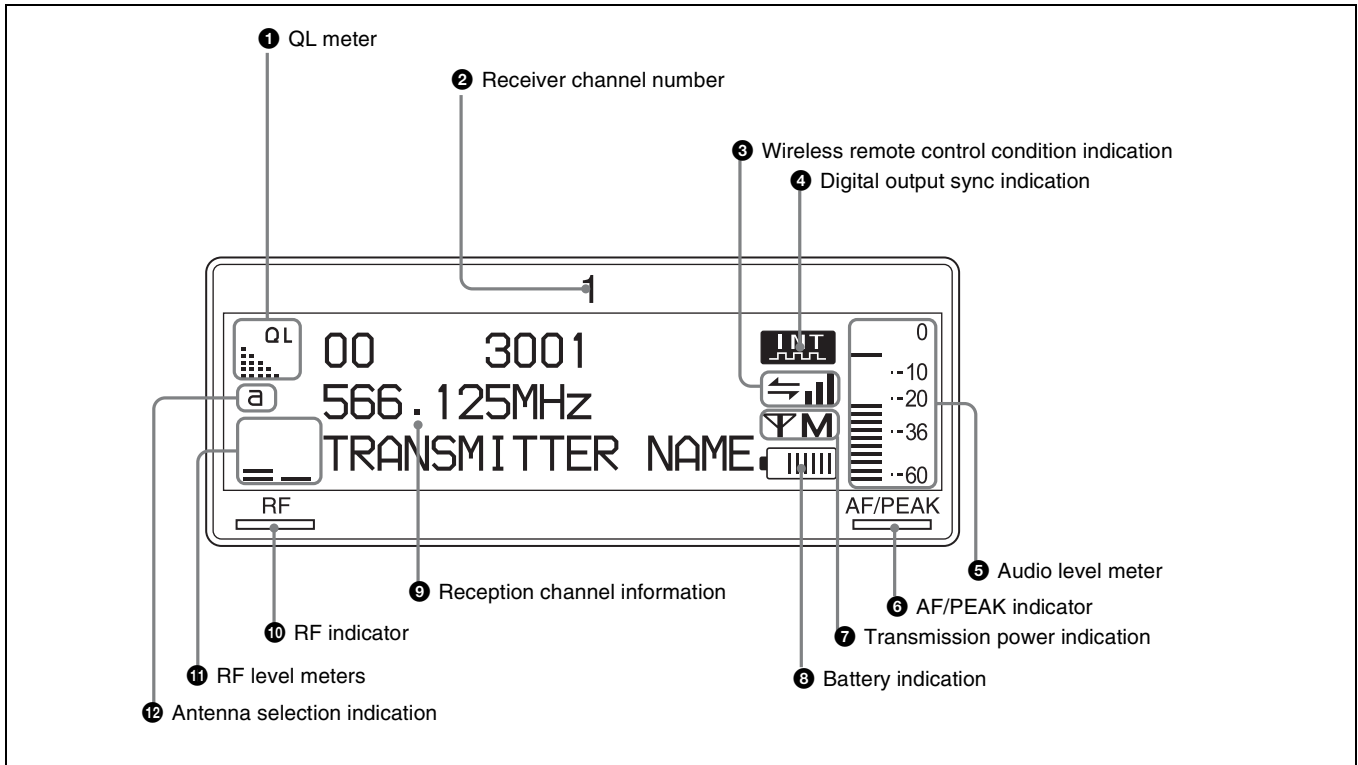

1 QL (signal quality level) meter

Indicates the quality of data that is received. This meter allows you to monitor RF signal deterioration that may occur when there is signal interference or when the transmitter is too far from the receiver.

2 Receiver channel number

Indicates the receiver channel number.

3 Wireless remote control condition indication

Indicates the signal transmission condition of the wireless remote control function (four levels).

- ↔||||: Good transmission
- ↔|||: Somewhat good transmission
- ↔||: Somewhat poor transmission
- ↔|: Poor transmission
- ↔/: Unable to communicate with paired transmitter

Note

When the wireless remote control function (*see page 28*) is off, this indication does not appear.

4 Digital output sync indication

Indicates sync status of the signal output from the DIGITAL OUT connectors.

INT: Output signal is in sync with the internal clock.

EXT: Output signal is in sync with the signal input from the WORD SYNC IN connector.

5 Audio level meter

Indicates the level of audio signal input to the transmitter. The segments indicating below the reference input level of the transmitter appear dimly.

When "MIC" is set for the reference input level on the transmitter: Segments indicating -36 dBFs or below appear dimly.

When "LINE" is set for the reference input level on the transmitter: Segments indicating -20 dBFs or below appear dimly.

6 AF/PEAK (audio signal peak) indicator

Lights up green when the audio signal exceeding reference level is input to the transmitter.

Lights up red when the audio signal exceeding -3 dBFs is input to the A/D converter on the transmitter.

7 Transmission power indication

Indicates the current transmission power setting. This setting can be changed in the TRANSMITTER menu (*see page 27*).

- ☞ **H**: transmitting at 50 mW
- ☞ **M**: transmitting at 10 mW
- ☞ **L**: transmitting at 1 mW

For details on changing the transmitter settings, see “Changing the Settings on the Transmitter” on page 32.

8 Battery indication

Based on metadata from the transmitter, this shows the transmitter’s battery condition according to eight level indications.

Replace both batteries when the battery indication starts to flash.

For details on how to change the batteries on the transmitter, refer to the Operating Instructions supplied with the transmitter.

9 Reception channel information

Shows the information on receiving signal and the transmitter name.

First row: Group and channel

Middle row: Frequency of the channel

Last row: Transmitter name and sleep state

10 RF (radio reception) indicator

Lights up to indicate the level of the signal input from the ANTENNA a/b IN connector as follows.

On in orange: 80 dB μ or more

On in green: 25 dB μ to 80 dB μ

On in red: 15 dB μ to 25 dB μ

Off: Less than 15 dB μ

11 RF (radio reception) level meters


Indicates the level of the signal input from the ANTENNA a/b IN connector. The number of segments that light up depends on the input level.

12 Antenna selection indication

Indicates the antenna currently selected by the diversity function.

2 Controls

The control areas for channel 1 and channel 2 are identical.

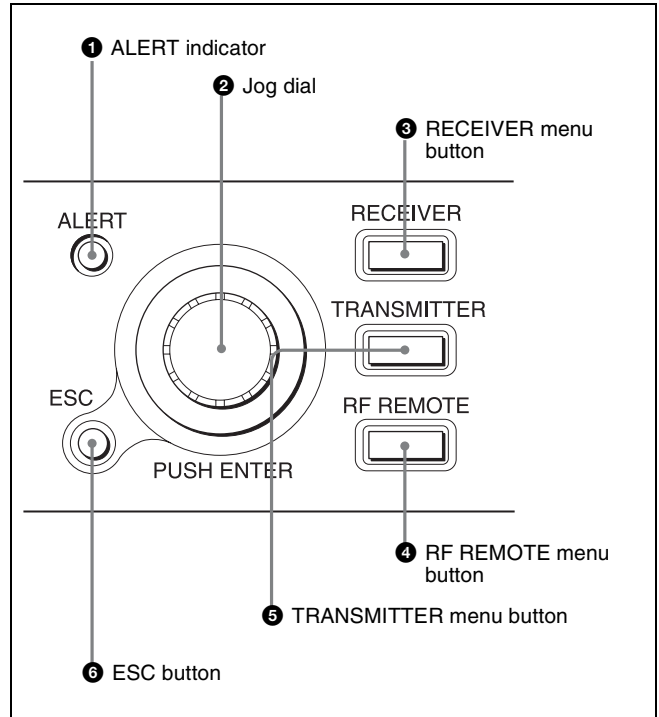

1 ALERT (alert) indicator

Lights up red when error is detected.

For the specific causes of alerts and remedies, see “When the Alert Indicator Lights” on page 34.

2 Jog dial

Rotate to select an item or a parameter value in the menu. Press to enter the selected item or parameter value.

3 RECEIVER (RECEIVER menu) button

Press to enter the RECEIVER menu. While in the RECEIVER menu, this button lights up brightly.

4 RF REMOTE (RF REMOTE menu) button

Press to enter the RF REMOTE menu. While in the RF REMOTE menu, this button lights up brightly.


5 TRANSMITTER (TRANSMITTER menu) button

Press to enter the TRANSMITTER menu. While in the TRANSMITTER menu, this button lights up brightly.

6 ESC (escape) button

Press to go back to the previous menu display.

Rear Panel

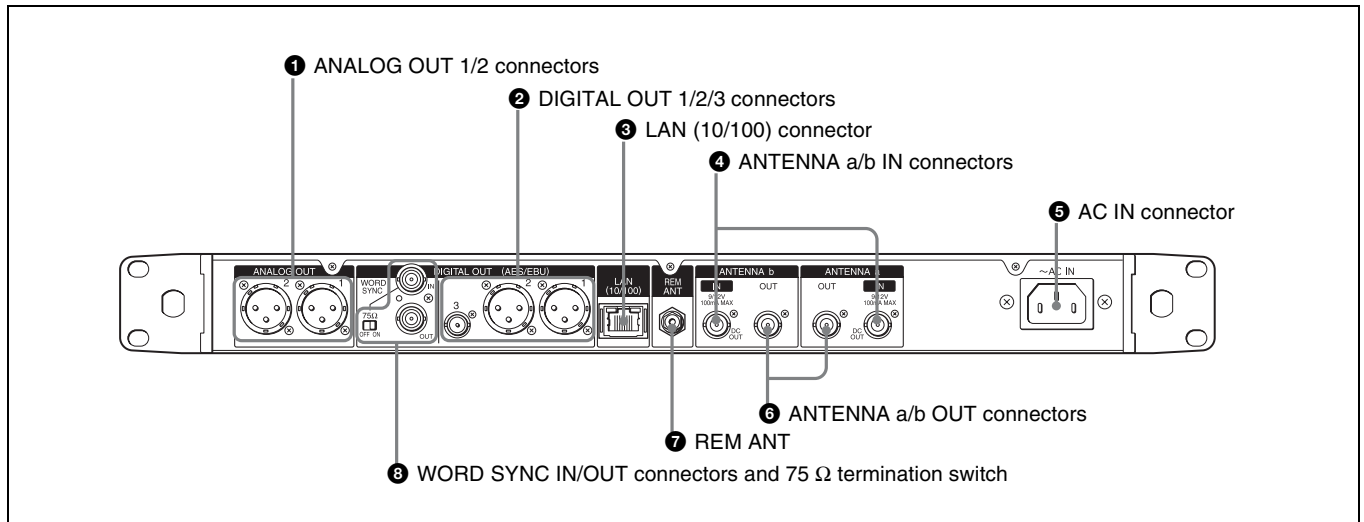

1 ANALOG OUT (analog output) 1/2 connectors (XLR type)

Connect the analog input connector of mixer, amplifier, or other equipment.

Analog audio output level can be set with menu operation.

For details, “Setting Analog Audio Output Level (OUTPUT LEVEL)” on page 27.

2 DIGITAL OUT (digital output) 1/2/3 connectors (1/2: XLR type, 3: BNC-R)

This connector outputs a digital audio signal in AES3 format. Connect the digital input connector of mixer, amplifier, or other equipment.

3 LAN (Ethernet) (10/100) connector (RJ-45)

This is a 100Base-TX connector for network connection. Connect to a Windows PC, in order to use the supplied Wireless Studio software for communications with the computer.

For connection to a computer, use a category 5 or superior LAN cable with a maximum length of 100 m (approx. 300 ft). If the connection requires a total cable length exceeding 100 m (approx. 300 ft), use a hub between the computer and the DWR-R01D.

Use the following type of cable when:

Directly connecting the computer and the DWR-R01D:

Cross cable

Using a hub between the computer and the DWR-R01D: Straight cable

CAUTION

- Do not touch the LAN connector directly with your hands. The transfer of static electricity may result in malfunction of the unit.
- For safety, do not connect the connector for peripheral device wiring that might have excessive voltage to this port. Follow the instructions for this port.

ATTENTION

- Ne touchez pas le connecteur LAN directement avec vos mains. Le transfert d'électricité statique peut entraîner un dysfonctionnement de l'appareil.
- Par mesure de sécurité, ne raccordez pas le connecteur pour le câblage de périphériques pouvant avoir une tension excessive à ce port. Suivez les instructions pour ce port.

VORSICHT

- Berühren Sie den LAN-Anschluss nicht direkt mit den Händen. Durch elektrostatische Entladungen können Fehlfunktionen des Geräts verursacht werden.
- Aus Sicherheitsgründen nicht mit einem Peripheriegerät-Anschluss verbinden, der zu starke Spannung für diese Buchse haben könnte. Folgen Sie den Anweisungen für diese Buchse.

ATTENZIONE

- Non toccare il connettore LAN direttamente con le mani. L'eventuale trasferimento di elettricità statica può causare il malfunzionamento dell'unità.
- Per ragioni di sicurezza, non collegare il connettore per il cablaggio del dispositivo periferico che potrebbe avere una tensione eccessiva in questa porta. Seguire le istruzioni per questa porta.

PRECAUCIÓN

- No toque el conector LAN directamente con las manos. La transferencia de electricidad estática puede provocar un fallo de funcionamiento de la unidad.
- Por razones de seguridad, no enchufe a este puerto un conector de cableado de dispositivo periférico que pueda tener una tensión excesiva. Siga las instrucciones de este puerto de conexión.

4 ANTENNA a/b IN (antenna a/b input) connectors (BNC-R)

Connect an optional UHF antenna (e.g., AN-820A) and the supplied whip antenna to these connectors.

When an antenna is connected, this connector supplies 9 V or 12 V DC power to the booster incorporated in the antenna. When using an antenna which does not require a power supply, you can turn off the power output by menu operation.

For details, see “DC power supply setting for antennas (ANT DC OUT)” on page 30.

Antenna attenuator can be also set with menu operation according connection methods of the antennas.

For details, see “Antenna attenuator setting (ANT ATT a/b)” on page 30.

Notes

- Do not short-circuit this connector.
- When connecting DWR-R01D units in cascade, set ANT ATT a/b to “0dB” and ANT DC OUT to “OFF” on any DWR-R01D unit that is not directly connected to the antenna.

About the antenna gain and the cable loss

When the antenna with the booster is connected to the DWR-R01D and the antenna gain exceeds the coaxial cable loss between the antenna and the DWR-R01D, the RF signal which exceeds the allowable level may be input to this unit.

To prevent this, set the cable loss and antenna attenuator (0dB, 5dB or 10dB) (*see page 30*) to meet the following equation.

The RF indicator on the receiver lights in orange when the input becomes 80 dBμ or higher, so you can use it as a rough guide.

Gain of antenna booster - Cable loss between antenna and this unit - Antenna attenuator setting (dB) = 0 dB or less

Reference: signal loss examples

Type of cable		RG-212/U		RG-213/U	
Frequency		600 MHz	800 MHz	600 MHz	800 MHz
Cable length	50 m (approx. 150 ft)	12 dB	14 dB	9 dB	11 dB
	100 m (approx. 300 ft)	24 dB	28 dB	18 dB	22 dB

For details on gain of antenna booster, refer to the operating instructions supplied with the antenna.

Notes

- The cable loss may differ depending on the manufacturer of the cables.
- The rated resistance of ANTENNA a/b IN connectors is 50 Ω. If the cable with 75 Ω resistance is used, actual signal loss is usually a few dB lower than the values on the table above.

5 AC IN connector

Connect to an AC power source with the supplied AC power cord.

6 ANTENNA a/b OUT (antenna a/b output) connectors (BNC-R)

These connectors output the signals input from the ANTENNA a/b IN connectors. Using these connectors, you can connect up to eight of DWR-R01D units in cascade.

7 REM ANT (ST remote system antenna)

This is an external antenna for the ST remote system.

8 WORD SYNC IN/OUT (sync signal input/output) connectors and 75 Ω termination switch

When you want to synchronize digital output with an external sync signal, input the external sync signal to the WORD SYNC IN connector.

The sync signal input from the IN connector is output from the OUT connector.


Set the 75 Ω termination switch of only the DWR-R01D unit at the end of the cascade connection to ON.

For details on connecting to the WORD SYNC connectors, see “Connection Example of Word Clock and Audio” on page 20.

Preparation


Rack Mounting

Use the EIA standard 19-inch rack (1U size) with a depth of 350 mm to install the DWR-R01D.

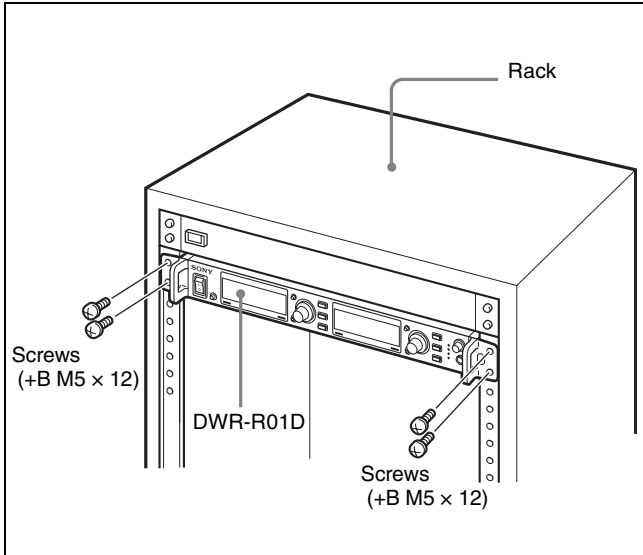

To use the DWR-R01D without installing in the rack

Attach the supplied four feet to the bottom of this unit, as illustrated below.

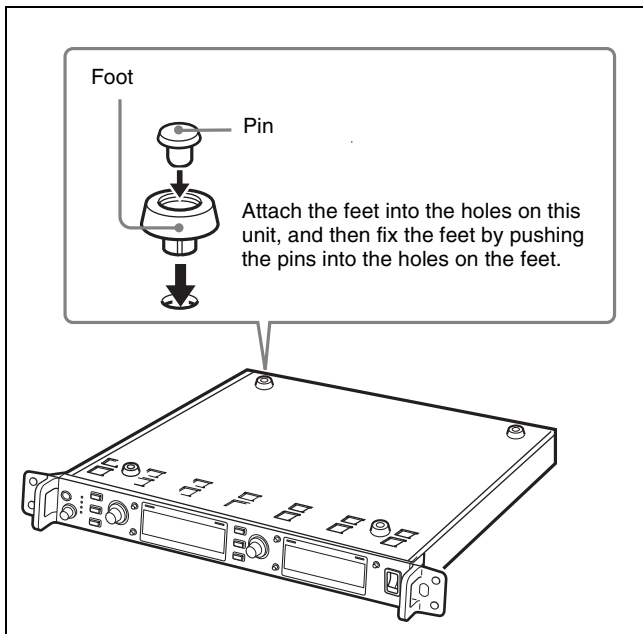

To install the DWR-R01D in the rack, be sure to remove the attached feet.

System Configuration Examples

You can build a multi-channel system, ST remote system (see page 9), or NT remote system (see page 9) shown below in accordance with the scale and purpose of the system you want to build.

You can improve user-friendliness by combining a multi-channel system with a remote system.

The type and maximum number of equipment that can be included in each system are described below.

Note

When any RMU-01 unit is detected in the Ethernet connection, the system automatically operates in NT remote system mode. When no RMU-01 unit is detected, ST remote system mode is applied.

The wireless remote control function receives a change command from the receiver or RMU-01 via a 2.4 GHz signal, and replies with the metadata in the audio packet. Therefore, use the wireless remote control function where it will be within range of the audio signal from the transmitter.

	Multi-channel system	ST remote system	NT remote system
DWR-R01D	1 to 41	1 to 3	1 to 41
Sony digital wireless transmitter	1 to 82	1 to 6	1 to 82
RMU-01	Not required	Not required	1 to 9
Wireless Studio	Can be used to monitor the status of receivers, transmitters, and RMUs		

Using the Supplied Antennas

To maximize the reception performance of this unit, we recommend using optional AN-820 or AN-01 UHF antennas.

For narrow service areas, however, you can also use the supplied whip antennas.


Note

When using the supplied whip antennas, be sure to verify your service area beforehand.

The supplied whip antennas can be attached to the front or rear panel of the unit.

Front panel attachment


- 1 Insert the supplied antenna mounts with BNC connectors into the front panel, and secure them with the supplied hexagon nuts (14 mm).

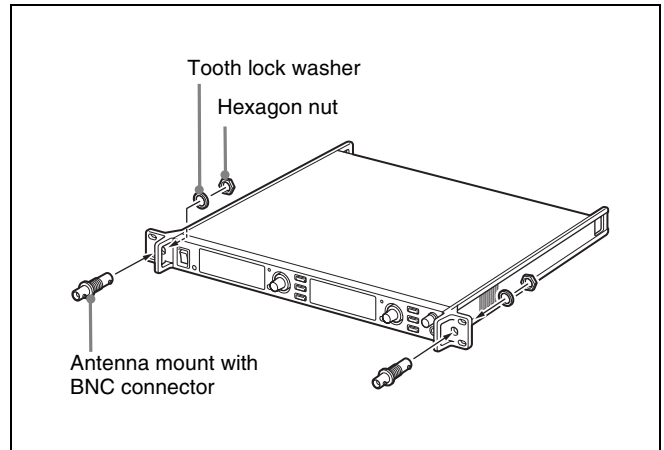


Note

You can also attach the antennas so that the hexagon nuts are located on the front side of the front panel. If you have trouble securing the hexagon nuts on the back side of the front panel, insert the antenna mounts with BNC connectors into the front panel from the back side, and secure the nuts on the front side.

- 2 Attach the supplied whip antennas.

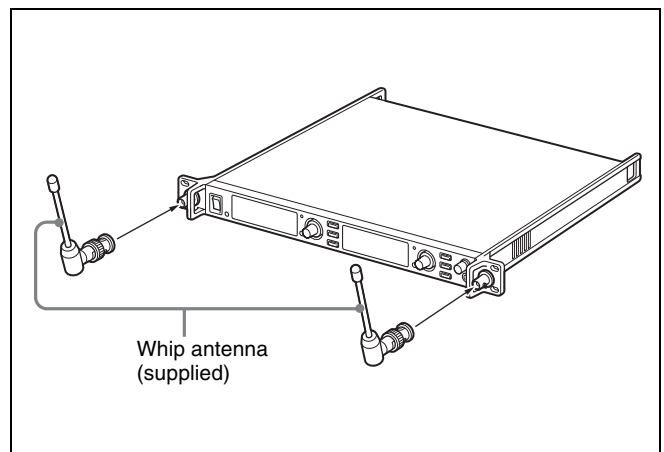


- 3** Use commercially available BNC cables (50 Ω , 60 cm or longer) to connect the antenna mounts with BNC connectors to the ANTENNA a/b IN connectors on the rear panel of the unit.

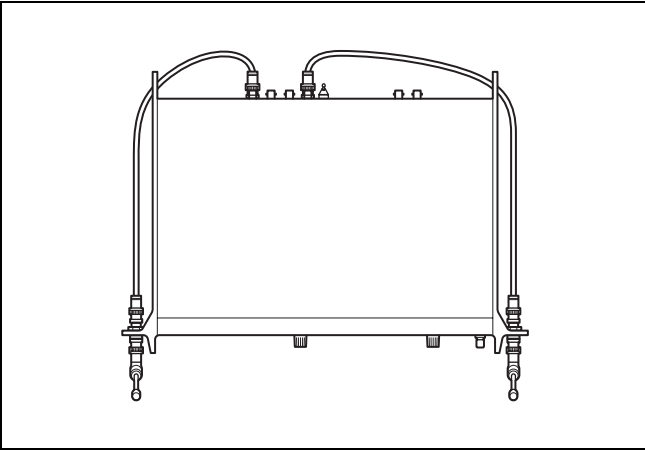


Rear panel attachment

Attach the supplied whip antennas to the ANTENNA a/b IN connectors on the rear panel.

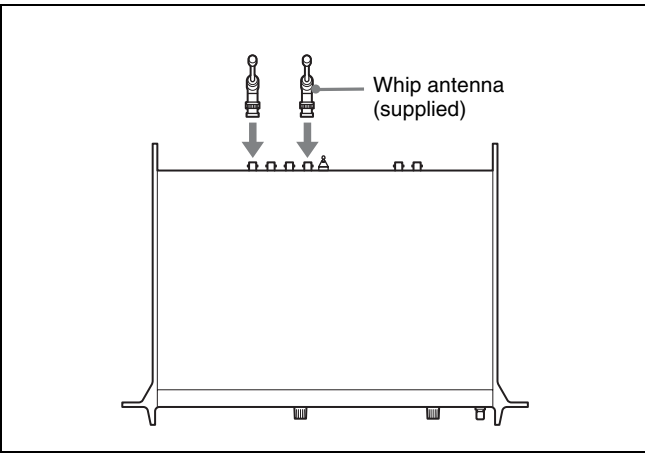


Configuration Example of Multi-Channel System

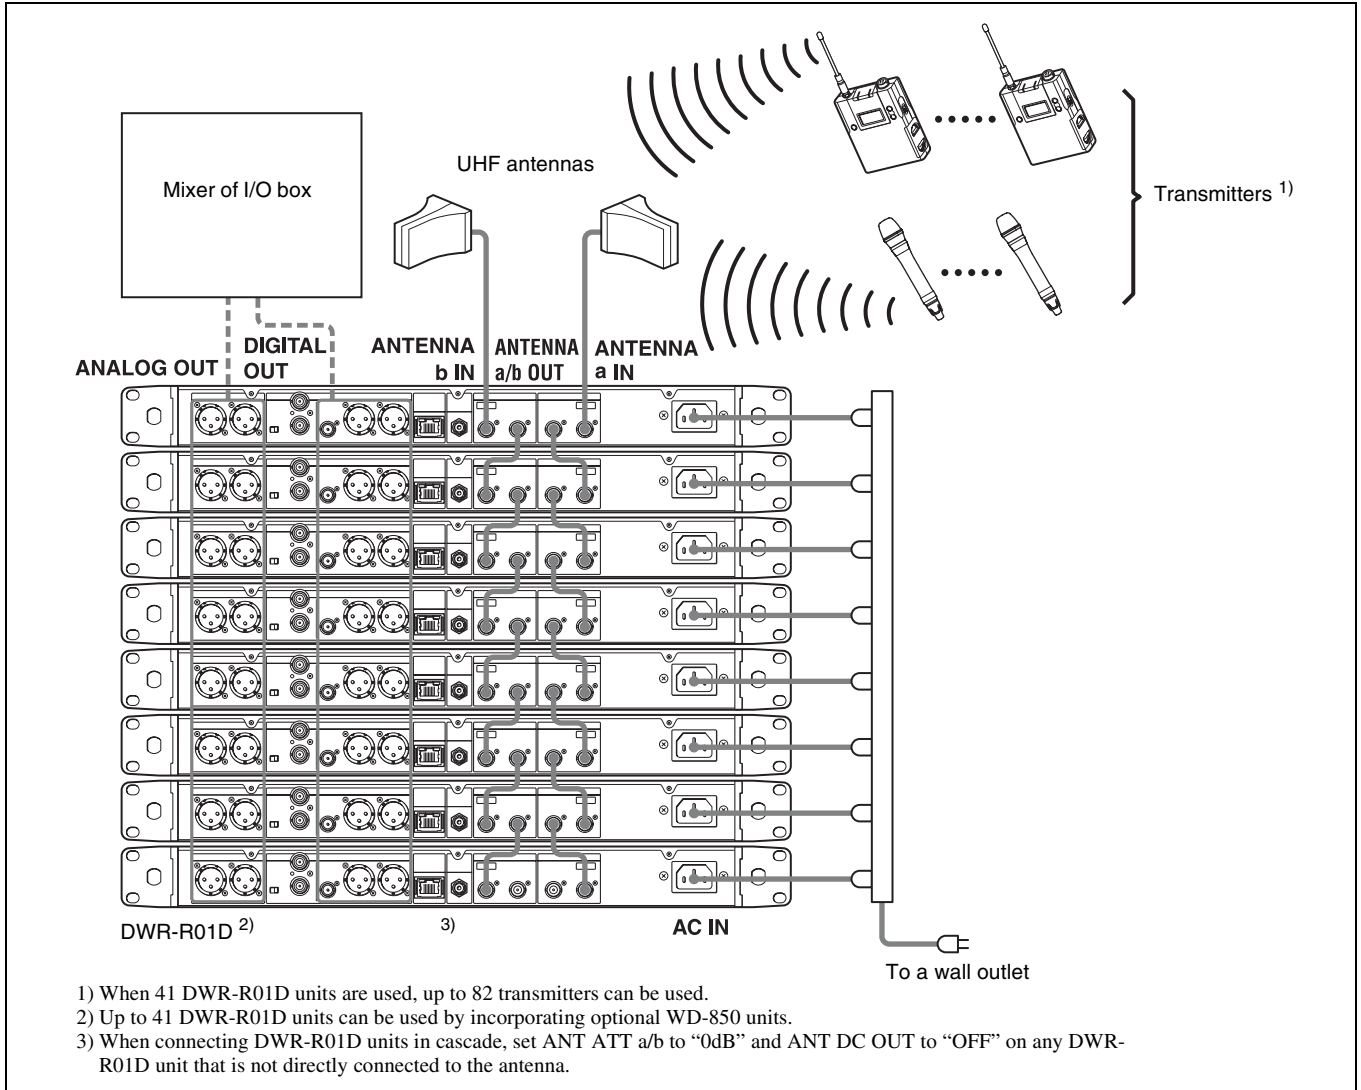

Usage Example of Antenna Divider

Example of a system that connects a total of 41 units (82 channels) in cascade via a separately sold WD-850

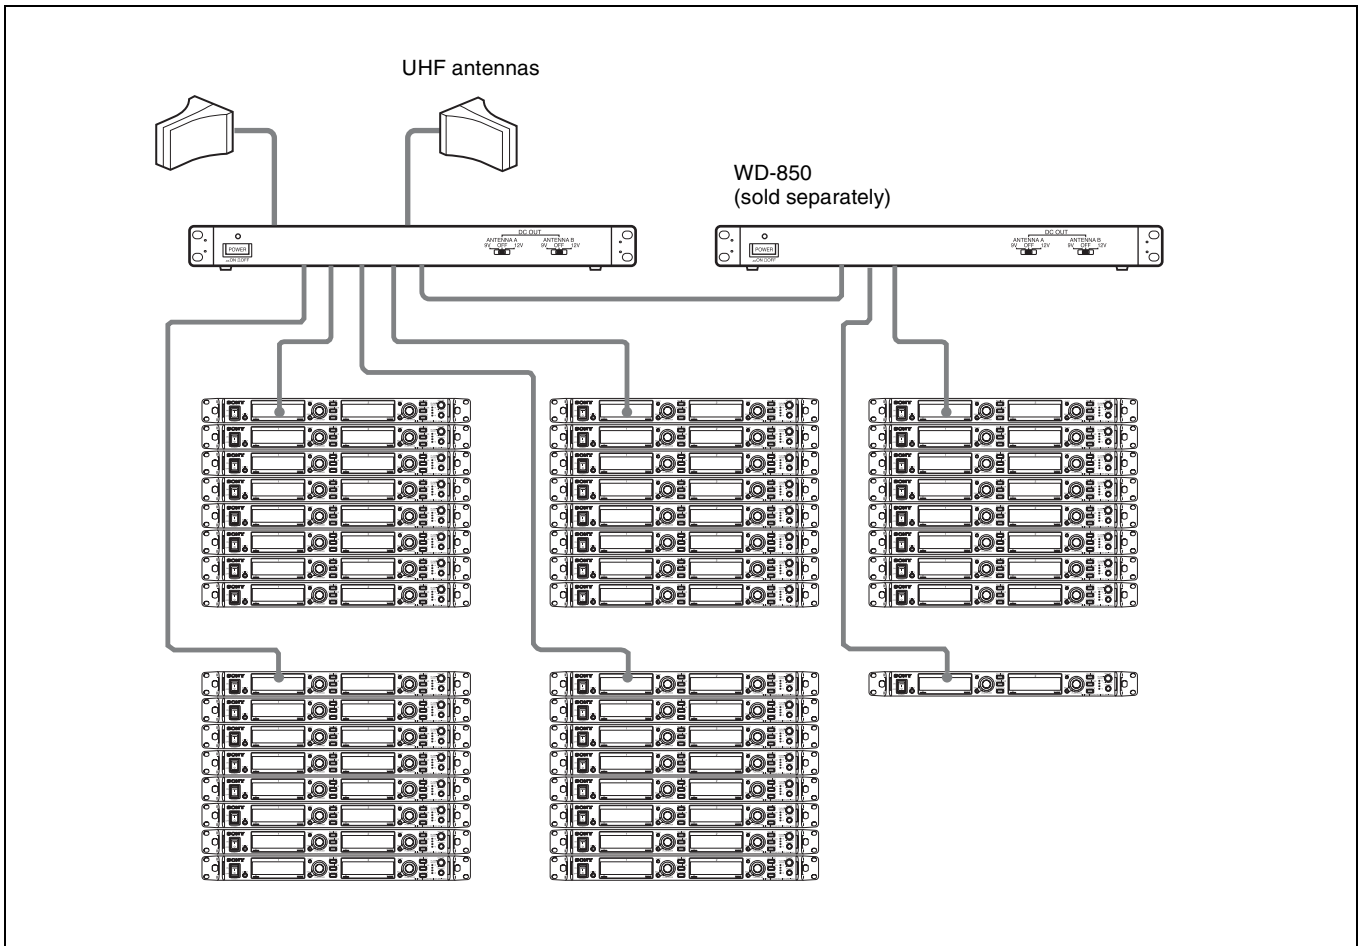

Connection Example of Word Clock and Audio

For digital audio output to be performed correctly, it is necessary to connect a device incorporating a sampling rate converter to the DIGITAL OUT 1/2/3 connector of the receiver or input a master word clock signal to the WORD SYNC IN connector of the receiver and perform synchronization.

There are the following two types of system for inputting a master word clock signal to perform synchronization.


Note

If the number of connected devices is high, we do not recommend cascade connections. We recommend using a word clock divider.

Synchronization system example 1


This system connects the master word clock signal in cascade via the WORD SYNC OUT connector of this device.

Set the 75 Ω termination switch of only the DWR-R01D unit at the end of the cascade connection to ON.

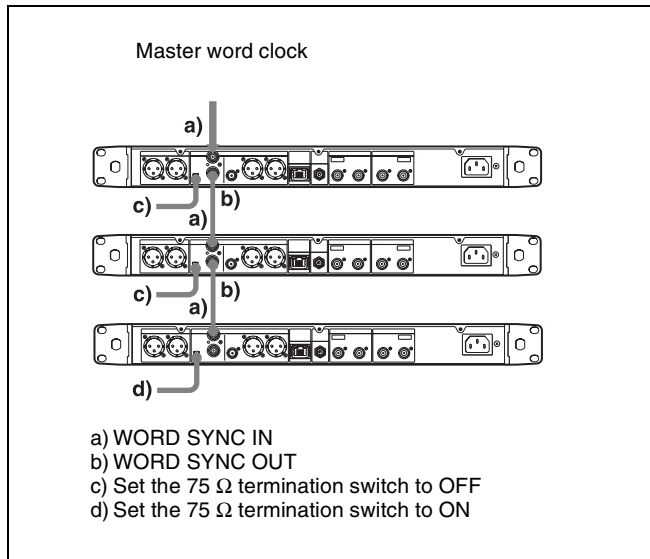

Synchronization system example 2

This system divides the master word clock signal with a divider, and then connects to each device. Set the 75 Ω termination switches of all DWR-R01D units to ON.

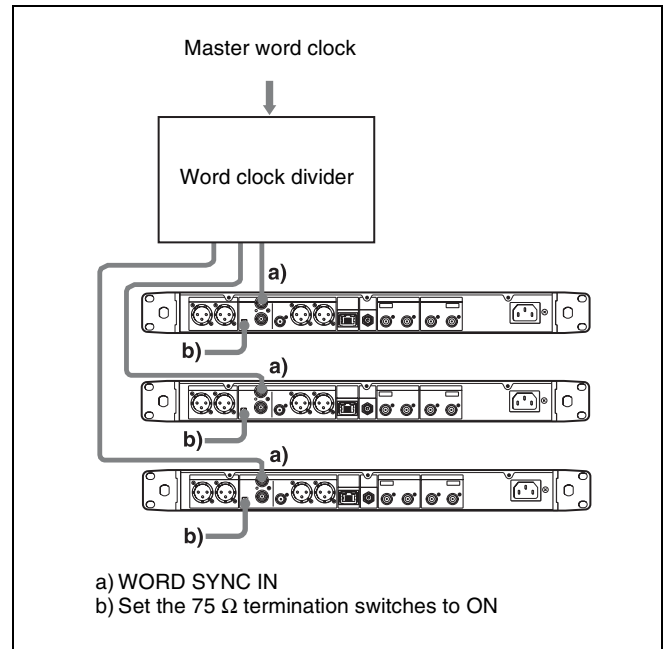


Configuration Example of ST Remote System

The DWR-R01D controls the system with the wireless remote control function, by using the antenna attached to the REM ANT connector on the rear panel.

Note


In the ST remote system, each DWR-R01D unit uses one channel of radio wave. When more transmitters are used in the system, communication congestion may occur, resulting in slow response on the controlled devices. If you plan to use six or more transmitters, operation in NT remote system using the optional RMU-01 is recommended.

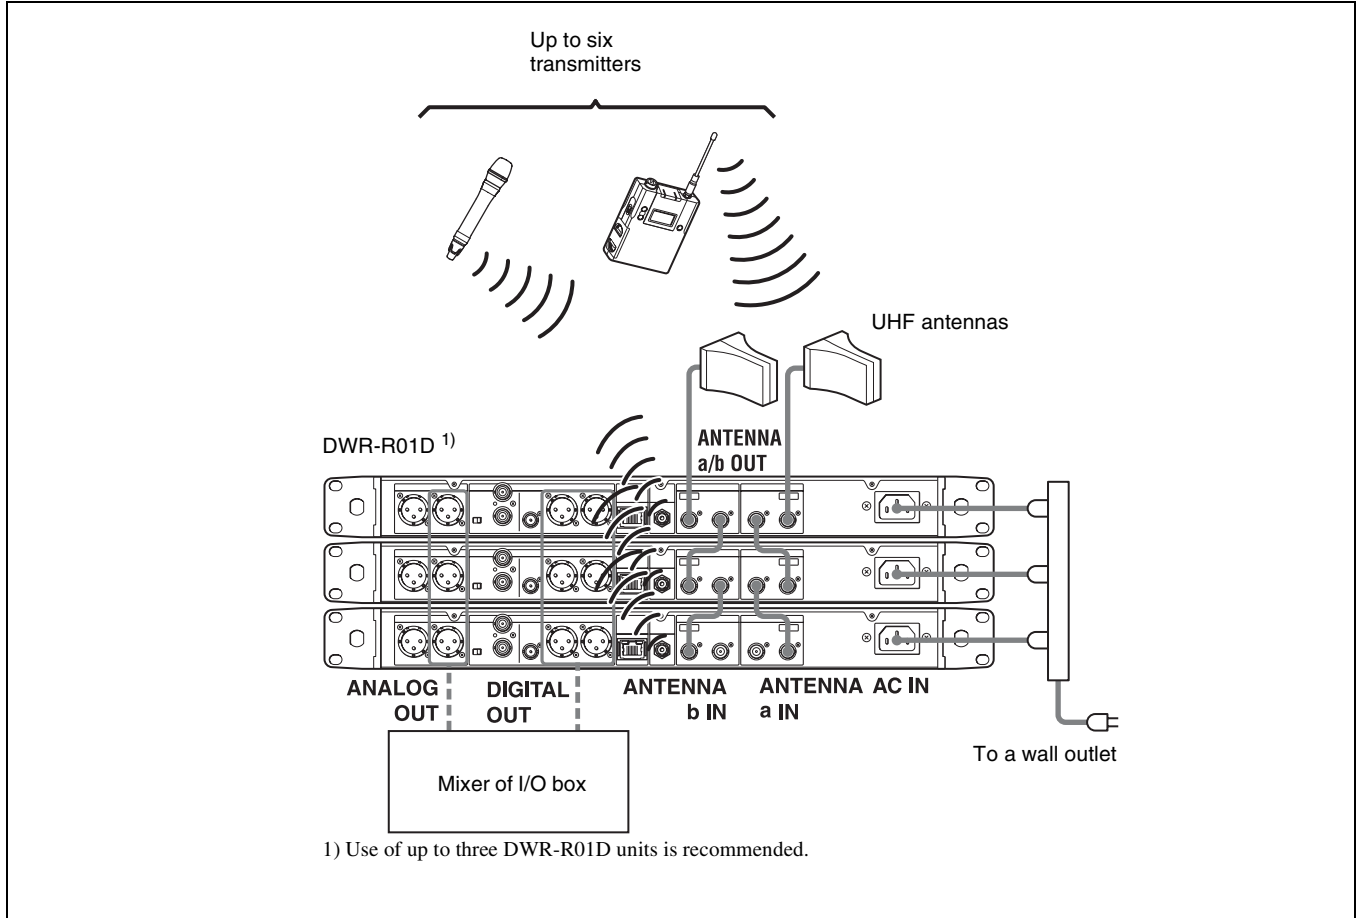

Configuration Example of NT Remote System

In the NT remote system, up to 82 transmitters can be controlled by using the one RMU-01 unit (not supplied). Up to nine RMU-01 units can be connected to the system to cover wider area.

For details on how to install the RMU-01, refer to the Operating Instructions supplied with the RMU-01.

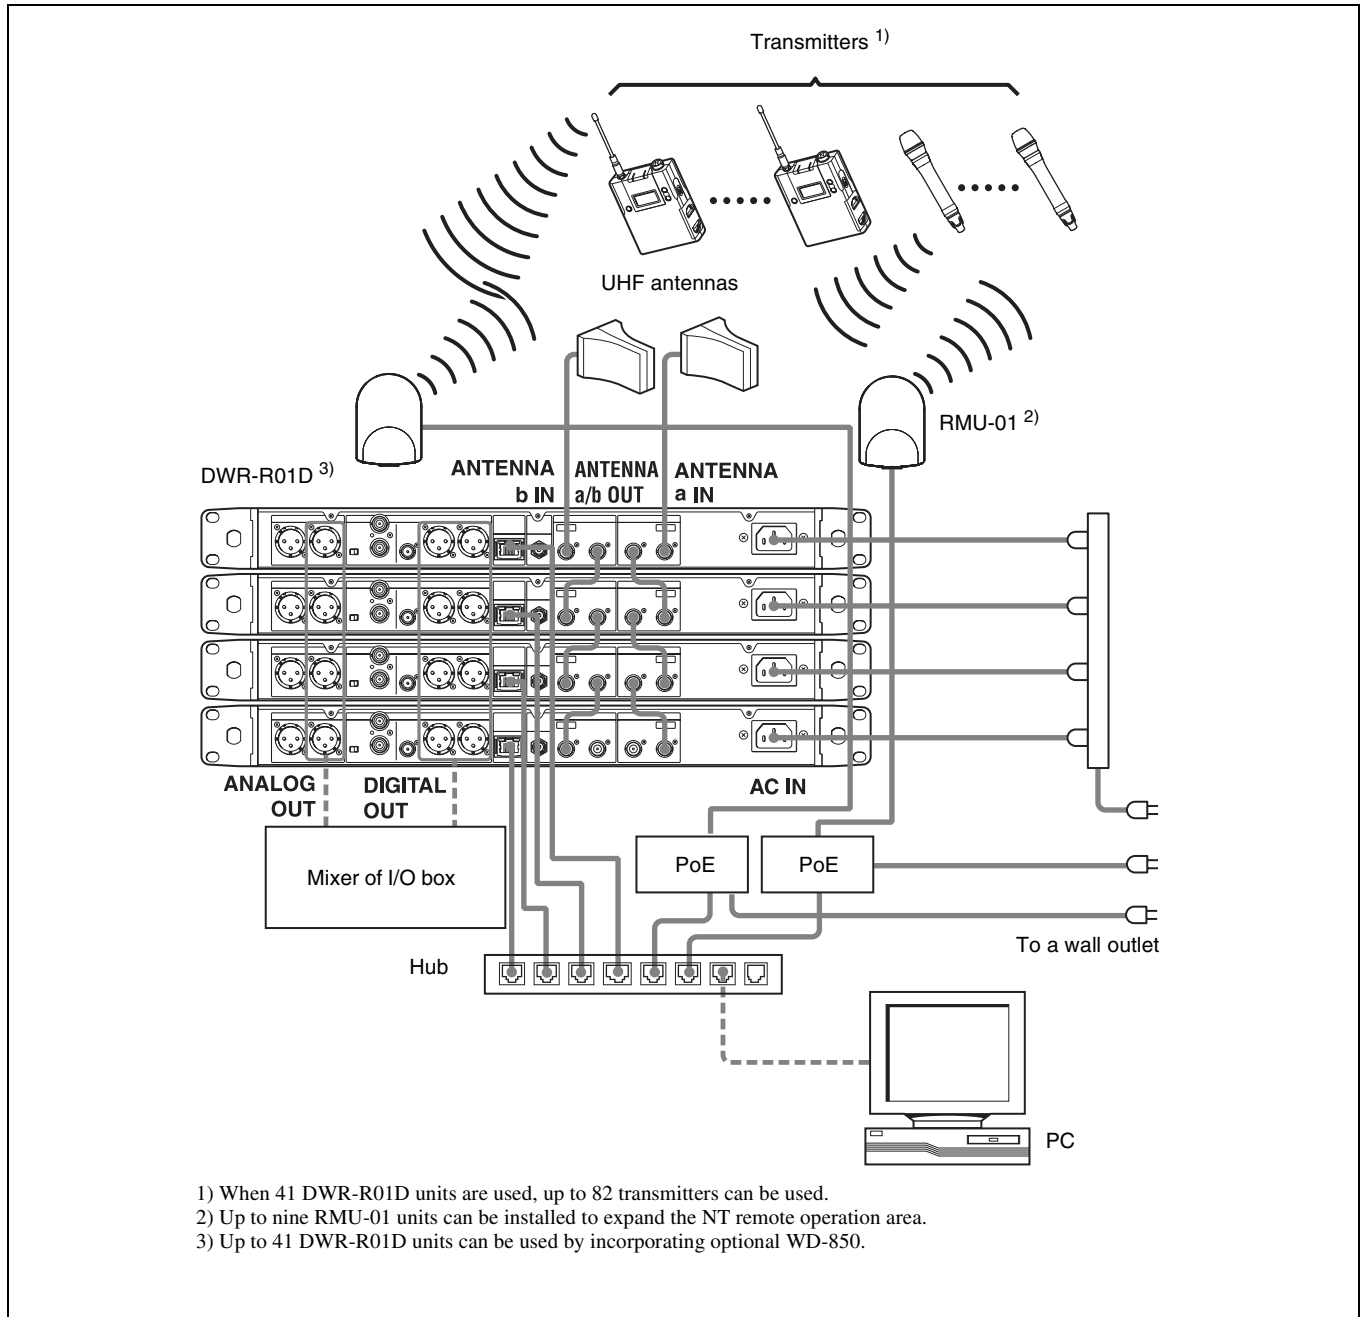

Setting the Receiving Channel

The receiver provides groups of channels for interference-free transmission. When using multiple wireless microphones and transmitters (simultaneous multi-channel operations) within the same area, selecting the same group and using a channel within that group can prevent signal interference.


For details on groups and channels, refer to “Sony Digital Wireless Microphone System Frequency Lists” on the supplied CD-ROM “Digital Wireless Receiver.”

For details on menu operations, see “Basic Menu Operations” on page 26.

Selecting the Group/Channel

Set the group (GP) and channel (CH) as follows:

In the procedure below, the controls for the receiver channel 1 are used for illustration purposes.

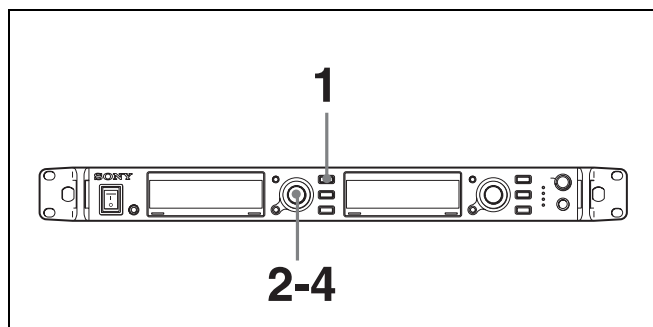

- 1** Press the RECEIVER button to select the RECEIVER menu.
- 2** Rotate the jog dial to move the cursor to GP/CH indication (the characters of the item selected with the cursor become highlighted), and then press the dial.
- 3** Rotate the jog dial to move the cursor to group indication that you want to select, and then press the dial.
- 4** Rotate the jog dial to move the cursor to channel indication that you want to select, and then press the dial.

When the wireless remote control function (see page 28) is operating:

When you change the channel setting on the receiver, the new channel setting is sent to the transmitter that is paired with that receiver.

About operation when using with dedicated digital channel plan

When performing multi-channel operation with a channel plan for digital only, make sure the RF indicator is always lit in green when in the operation area. The RF indicator lights in red or goes out when the reception signal input is weak, and lights in orange when it is strong.

If necessary, we recommend adjusting the gain of the connected antenna and configuring settings such as the antenna attenuator and antenna direction.

About use of the same group and channel by adjacent systems

When the same group and channel are being used by two or more systems that are within sight of each other and are separated without partitions or obstacles in wide open place, each system should be at least 100 meters away from the others to avoid interference.

Using the Active Channel Scan Function

This function scans for a Sony digital wireless frequency from the channel lists within the GP (group) selected during the GP/CH selection function.

Required condition for the detection:

- Sony digital wireless signal
- The setting of the encrypted transmission function is correct.

- 1** Press the RECEIVER button to select the RECEIVER menu.
- 2** Rotate the jog dial to move the cursor to ACTIVE CH SCAN indication, and then press the dial.
A message “START SCAN?” appears.
- 3** Rotate the jog dial to select YES, and then press the dial.

Scanning starts. When a Sony digital wireless frequency is detected, scanning stops and the frequency is displayed.

If you select NO in this step

The scanning function is cancelled.

- 4** If you decide to use that channel, rotate the jog dial to select SET, and then press the dial.

To search for another frequency

Rotate the jog dial to select CONTINUE, and then press the dial.

Note

If a Sony digital wireless frequency within the group is not found by the second try, scanning is cancelled.

Using the Clear Channel Scan Function

This function searches for a channel that is not being used by another wireless device or by a TV station. This function makes it easy to find an available channel to allow the wireless microphone to be used without interference. The function searches for empty channels among the registered channels within the channel group selected by the GP/CH selection function, and lists the detected channels in the order with less interference.

- 1** Press the RECEIVER button to select the RECEIVER menu.
- 2** Rotate the jog dial to move the cursor to CLEAR CH SCAN indication, and then press the dial.

A message “START SCAN?” appears.
- 3** Rotate the jog dial to select YES, and then press the dial.

Scanning starts. Empty channels within the specified channel group (GP) are searched. When scanning finishes, detected empty channels are listed in the order with less interference.
- 4** Rotate the jog dial to select the channel that you want to use, and then press the dial.

When the wireless remote control function (see page 28) is operating:

When the jog dial is pressed in Step 4 above, a message confirming to apply the selected channel to the transmitter that is paired with the DWR-R01D appears. When you rotate the jog dial and select OK and press the dial, the selected channel is applied to the transmitter.

Note

If an empty channel within the group is not found by the second try, scanning is cancelled.

Using the Encrypted Transmission Function

This receiver is capable of receiving scrambled signals from Sony digital wireless transmitters. This function prevents hacking of the signal.

To use this function, select one of the following encrypted transmission modes:

Secure key mode: A secure key that is automatically generated by the transmitter is used by both the transmitter and receiver in this one-to-one encrypted transmission method.

Password mode: You choose a password of up to eight characters that can be set for multiple transmitters and receivers. This enables encrypted transmission to be conducted within a group.

Notes

- Make sure the same mode is set on the transmitter and receiver.
- When using an encryption key method, pair the transmitter and receiver.

Using Secure Key Mode (SECURE KEY)

Use this mode for one-to-one encrypted transmission between one transmitter and one receiver.

An encryption key that cannot be read from the outside is automatically generated by the transmitter. This key is transmitted to the receiver through the wireless remote control function (see page 28), enabling encrypted transmission to take place.

The encryption key used by the transmitter and receiver is newly generated for each key transmission, resulting in highly secure communication.

The encryption key used between the transmitter and the receiver is saved when the power is turned off, so the encrypted transmission can be resumed the next time the power is turned on.

1 Preparing the transmitter

Set SECURE KEY on the transmitter that will transfer the encryption key.

For details on transmitter operations, refer to the operating instructions supplied with the transmitter.

2 Preparing the receiver (this unit)

- ① In the RECEIVER menu, rotate the jog dial to move the cursor to ENCRYPTION indication, and then press the dial.
- ② Rotate the jog dial to select SECURE KEY, and then press the dial.

3 Exchanging the encryption key

The receiver searches for a transmitter that it has been paired with. After the receiver detects the transmitter, the transmitter exchanges the encryption key with the receiver and encrypted transmission begins.

Note

When the RF REMOTE function (*see page 28*) is off, encryption key exchange cannot be carried out.

Using Password Mode (PASSWORD)

Set this mode when multiple transmitters are paired with multiple receivers for encrypted transmission.

If the transmitters and receivers are set with the same user-designated password, the audio signal can be decoded. This mode is useful when multiple transmitters and receivers are used as a single group, or when the audio signal from one transmitter is received by multiple receivers at the same time.

- 1 In the RECEIVER menu, rotate the jog dial to move the cursor to ENCRYPTION indication, and then press the dial.
- 2 Rotate the jog dial to select PASSWORD, and then press the dial.
- 3 Enter a password of up to 8 characters on the receiver.

Rotate the jog dial to move the cursor to select the character that you want to enter. And then, press the dial to add the selected character to the end of the current name.

To delete the last character in the current name

Rotate the jog dial to select BS, and then press the dial. Note that the adding or deleting a character in the middle of the name cannot be done.

To cancel entering the password

Rotate the jog dial to select CANCEL, and then press the dial.

- 4 After entering the characters, rotate the jog dial to move the cursor to select OK, and then press the dial.
- 5 Set the encrypted transmission function on the transmitter to PASSWORD.
- 6 On the transmitter, set the same password that was set on the receiver.

For details on transmitter operations, refer to the operating instructions supplied with the transmitter.

Note

It is recommended that you change the password periodically.

Menu Displays and Detailed Settings

Menu Structure and Hierarchy

Menu structure

The receiver has four kinds of menu, as follows:

RECEIVER menu

A menu that includes receiver setting functions.

TRANSMITTER menu

A menu that allows you to check the settings on the transmitter currently in communication with the receiver channel 1/2.

RF REMOTE menu

A menu that allows you to perform pairing and to make the basic setting for the wireless remote control function.

UTILITY menu

A menu that includes meter indications, network settings, and settings for the organic light-emitting diode display. The UTILITY menu settings apply to receiver channel 1 and 2.

Menu hierarchy

RECEIVER menu

- GP/CH
- ACTIVE CH SCAN
- CLEAR CH SCAN
- ENCRYPTION
- OUTPUT LEVEL


TRANSMITTER menu

- POWER SAVE
- RF POWER
- INPUT LEVEL
- LCF
- +48V
- TIME

RF REMOTE menu


- RF REMOTE
- PAIRING
- MODE

UTILITY menu

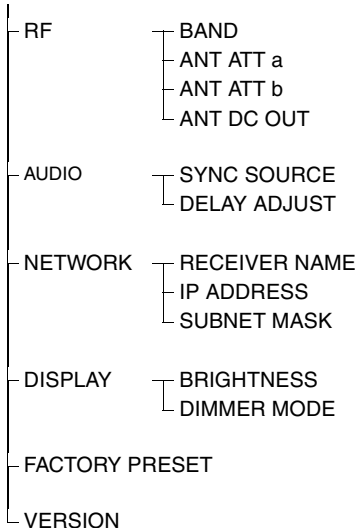

Basic Menu Operations

In the procedure below, the controls for the receiver channel 1 are used for illustration purposes.

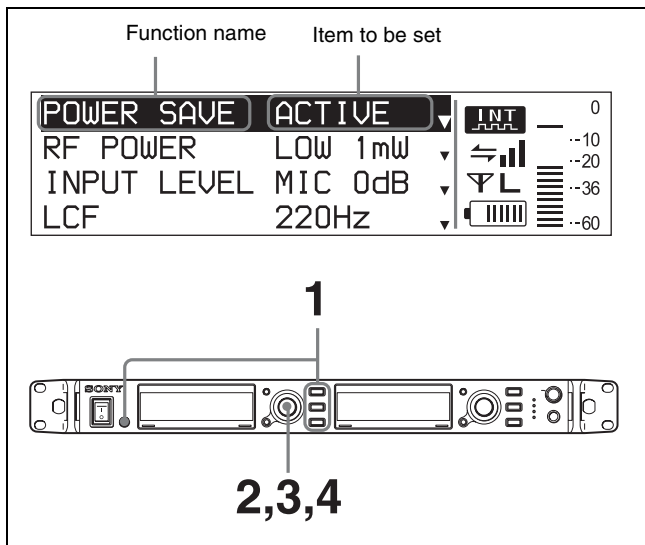

1 Press one of the menu buttons (RECEIVER, TRANSMITTER, RF REMOTE, or UTILITY button) to select the menu.

2 Rotate the jog dial to select the item to be set, and then press the dial.

For details on items contained in each menu, see “Menu hierarchy” on page 25.

3 Rotate the jog dial to change the setting.


4 Press the jog dial to enter the setting.

RECEIVER Menu

For details on menu operation, see “Basic Menu Operations” on page 26.

Use this menu to set the digital wireless receiver functions (the main functions of this receiver).

The following shows the US model display.

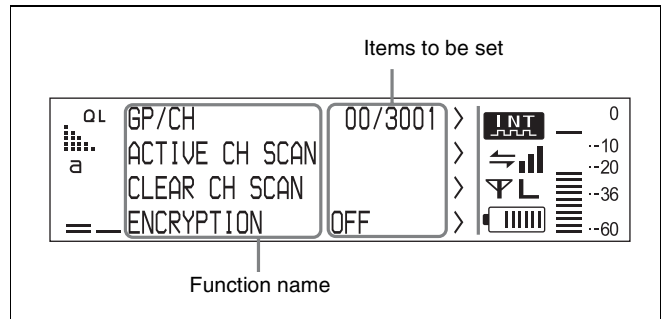

In this section, the functions included in the menu and their parameters are explained.

Underlined items are the factory settings.

Group/channel Selection (GP/CH)

Set the group and channel to receive. The factory settings are the following:

US models

DWR-R01D/30: 00 3001 566.125 MHz

DWR-R01D/42: 00 4201 638.125 MHz

European model

DWR-R01D/62: 00 6201 798.125 MHz

For details, see “Selecting the Group/Channel” on page 23.

Active Channel Scanning Function (ACTIVE CH SCAN)

The active channel scan function operates.

For details, see “Using the Active Channel Scan Function” on page 23.

Clear Channel Scan Function (CLEAR CH SCAN)

The clear channel scan function operates.

For details, see “Using the Clear Channel Scan Function” on page 24.

Encrypted Transmission Function (ENCRYPTION)

Set the parameters for the encrypted transmission function.

- SECUREKEY:** Sets the encryption key method.
- PASSWORD:** Sets the password method.
- OFF:** The encrypted transmission function is not used.

For details, see “Using the Encrypted Transmission Function” on page 24.

Setting Analog Audio Output Level (OUTPUT LEVEL)

Selects analog audio output level for the ANALOG OUT 1/2 connectors.

- MIC:** Selects the microphone level (reference level: -58 dBu).
- LINE:** Select the line level (reference level: -12 dBu).



TRANSMITTER (Transmitter Virtual) Menu

You can view the status of the transmitter by using the transmitter virtual menu and displaying metadata received from the transmitter in the display.

For details on menu operation, see “Basic Menu Operations” on page 26.

For details on how to change the setting information of the transmitter, see “Changing the Settings on the Transmitter” on page 32.

The Sony digital wireless transmitter sends not only digital audio signals, but also various other information (metadata) related to transmitter settings.

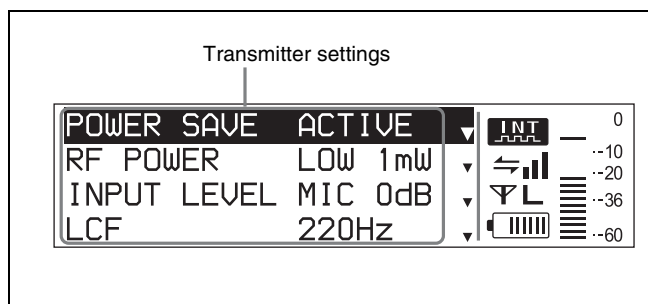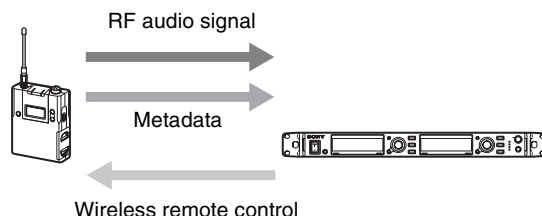

Note

“NO DATA” appears when the transmitter is turned off or located outside the service area. “NO FUNCTION” appears when the transmitter does not have the metadata transmission function.

In this section, displayed transmitter settings are explained.

Display of the Power Save Setting (POWER SAVE)

The power save setting of the transmitter is displayed.

Display of the Transmission Power Setting (RF POWER)

The transmission power setting of the transmitter from which transmission is currently being received is displayed.

Display of Audio Input Level (INPUT LEVEL)

The audio input level setting of the transmitter from which transmission is currently being received is displayed.

Display of the Low-cut Filter Setting (LCF)

The low-cut filter setting of the transmitter is displayed.

Display of the +48 V Power Setting (+48V)

The +48 V power setting of the transmitter is displayed.

Display of Accumulated Transmitter Use Time (TIME)

The accumulated use time of the transmitter is displayed.

RF REMOTE Menu

For details on menu operation, see “Basic Menu Operations” on page 26.

This receiver is equipped with the wireless remote control function that can be used to set the parameters (low-cut filter, attenuation operation, power save mode, etc.) of the transmitter through the TRANSMITTER menu. This function makes it easier to operate and manage the microphone system while in the field.

This wireless remote control is 2.4 GHz IEEE802.15.4 compliant and has no effect on the RF band of digital wireless audio.

This function is activated when pairing is established between the transmitter and the receiver using the RF REMOTE menu.

Using the Wireless Remote Control Function (RF REMOTE)

This function must be set to allow the wireless remote control function to be used between the transmitter and receiver.

OFF: Stops the wireless remote control function.

ON: Starts the wireless remote control function with the previously paired receiver.

Pairing With a Transmitter (PAIRING)

Pairing links the receiver with the transmitter which the wireless remote control function is to be used.

Set pairing configurations as follows:

- 1** In the RF REMOTE menu, rotate the jog dial to select PAIRING, and then press the dial.

A message “START PAIRING?” appears.

- 2** Set the transmitter to be controlled to pairing mode.


For details on how to operate the transmitter, refer to the operating instructions supplied with the transmitter.


- 3** Rotate the jog dial to select YES, and then press the dial.

The receiver starts searching for transmitters and then displays the names of transmitters with which pairing is possible.




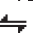

During the search, pressing any operation key on the receiver will cancel pairing mode.

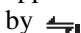- 4 Rotate the jog dial to select the transmitter to be paired with from among those indicated, and then press the dial to enter the setting.

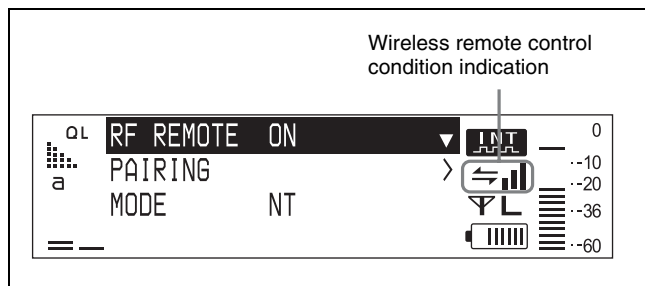The receiver starts to communicate with the selected transmitter and the wireless remote control condition appears in the display. The condition level (indicated by ) goes up and the remote control function becomes operative.



On wireless remote control condition indication
Indicates the signal transmission condition of the wireless remote control function (four levels).

-  : Good transmission
-  : Somewhat good transmission
-  : Somewhat poor transmission
-  : Poor transmission
-  : Unable to communicate with paired transmitter

When the wireless remote control function (*see page 28*) is off, this indication does not appear.

Using the wireless remote control function with a previous pairing

If the wireless remote control condition icon is displayed on the top display of the receiver when the power of the transmitter is ON, use is possible as is.

If the icon is not displayed, check whether the RF REMOTE setting of the transmitter or receiver is set to ON.

Notes

- When you set the wireless remote control function to ON, the transmitter will communicate with the receiver to which it was previously paired. To use the RF REMOTE function with another transmitter, you must perform the pairing procedure again for that transmitter.
- Pairing with multiple transmitters is not possible.
- Even if pairing was performed in an ST remote system, pairing needs to be performed again to use the wireless remote control in an NT remote system.

The following transmitter settings can be performed when pairing is established:

- Group/channel setting
- RF transmission power setting
- Audio input attenuation setting

- Low-cut filter setting
- Power save setting
- +48V setting

For details on the transmitter settings, see “Changing the Settings on the Transmitter” on page 32.

Cancelling the wireless remote control function

In the RF REMOTE menu, select RF REMOTE, and then select OFF.

Notes on the wireless remote control function

The wireless remote control function on the receiver uses the 2.4 GHz band and may thus be subject to interference from other devices.

- When pairing fails (“Pairing fail” is displayed), carry out pairing again. Successful communication between the transmitter and the receiver has not occurred within a given amount of time. Pairing may be harder to do when another receiver is engaged in pairing nearby.
- When it becomes hard to use the remote control, the remote control may be improved by switching the RF REMOTE function off, then on again, and then re-pairing with the transmitter (change to a channel with less interference).

Displaying the Remote Mode (MODE)

Display whether the receiver is operating in the ST remote or NT remote mode. (The mode can only be displayed.)

NT: The receiver has recognized the RMU-01 unit and is operating in NT remote mode.

ST: The receiver is operating in ST remote mode.

SEARCH: The receiver is searching for the remote mode state.

UTILITY Menu


For details on menu operation, see “Basic Menu Operations” on page 26.

The UTILITY menu includes items related to the basic receiver settings, including displays.

In this section, the functions included in the menu and their parameters are explained.

Underlined items are the factory settings.

The following shows the US model display.

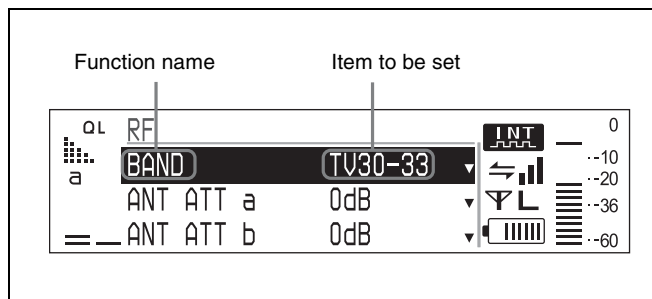

Note

All the items in the UTILITY menu can be set by using the controls on the receiver channel 1. The UTILITY menu settings are applied to both receiver channels.

Items Related to Signal Reception (RF submenu)

Frequency band setting (BAND)

Selects the frequency band that the transmitter uses.

US models

DWR-R01D/30: TV30-33/TV34-36/TV38-41

DWR-R01D/42: TV42-45/TV46-49/TV50-51

European model

DWR-R01D/62: TV62-64/TV67-69

Antenna attenuator setting (ANT ATT a/b)

Sets the attenuator for the antenna input.

This item can be set independently for each of the ANTENNA IN connectors.

0dB/5dB/10dB

Note

When connecting DWR-R01D units in cascade, set ANT ATT a/b to “0dB” on any DWR-R01D unit that is not directly connected to the antenna.

DC power supply setting for antennas (ANT DC OUT)

Sets the power supply for the antennas connected to the ANTENNA a/b IN connectors.

This setting applies to both of the ANTENNA IN connectors.

OFF/9V/12V

Note

When connecting DWR-R01D units in cascade, set ANT DC OUT to “OFF” on any DWR-R01D unit that is not directly connected to the antenna.

Items Related to Audio (AUDIO submenu)

Sync signal setting (SYNC SOURCE)

Selects the sync signal source for the receiver.

The receiver supports an external sync signal (word clock) of 32 kHz to 96 kHz.

The synchronization status is indicated by “INT” or “EXT” in the digital output sync indication on the top display. When “EXT” is indicated and synchronization is unlocked, the indication flashes.

INTERNAL: The internal sync signal (48 kHz) is used.

EXTERNAL: Synchronization with an external word clock signal.

AUTO: The external sync signal is used on a priority basis. When there is no external sync signal input, the internal sync signal is used automatically.

Display and adjustment of audio signal delay times between channels (DELAY ADJUST)

During communications between the digital wireless transmitter and digital wireless receiver, an audio signal delay will occur as a result of audio signal processing on both devices.

Display of audio signal delay times

The DWR-R01D unit can display the total audio signal delay time of the transmitter and the receiver for each channel using the metadata sent from the transmitter. Refer to this display when adjusting the delay time using a device such as mixer or delay processor.

Display example

1CH D : 3.4ms , A : 3.4ms

2CH D : 3.4ms , A : 3.4ms

D: DIGITAL OUT

A: ANALOG OUT

Compensating delay times for receiver channels 1 and 2

The delay times for receiver channels 1 and 2 may be different when the DWR-R01D is used with two digital wireless transmitters of differing models. By setting this compensation function to ON in such cases, you can automatically adjust the receiver channel with the shorter audio signal delay time to match the channel with the longer delay.

When adjusting the delay time manually using a device such as mixer or delay processor, set this function to OFF.

Items Related to Network (NETWORK submenu)

Naming the receiver (RECEIVER NAME)

Enter a receiver name of up to 16 characters in the same manner described in “Using Password Mode (PASSWORD)” on page 25.

When the receiver is already named, selecting this item displays the receiver name.

IP address setting (IP ADDRESS)

Enter the IP address of the receiver.

Subnet mask setting (SUBNET MASK)

Enter the subnet mask for the receiver.

Note

IP addresses and subnet masks

- If you are not using a standard network line connection, configure the following private address. Configure values that are unique within the network for the “x” values.
IP Address: 192.168.0.xxx
Subnet Mask: 255.255.255.0 (fixed length)
- If you are using a standard line connection, consult your network administrator.
- If IP address settings are changed, pairings with NT remote systems will be disabled. Be sure to perform the pairings again.

Items Related to Display (DISPLAY submenu)

Setting the brightness of the display (BRIGHTNESS)

Ten levels of brightness can be selected for the organic light-emitting diode display.

The selectable settings are the following:

(Dark) **1 2 3 4 5 6 7 8 9 10** (Bright)

Automatic dimming of the display (DIMMER MODE)

The organic light-emitting diode display can be set to dim or turn off after a certain amount of time.

AUTO OFF: The display turns off after 30 seconds. The display goes on again when you use any button/control.

AUTO DIMMER: The display dims after 30 seconds. The display becomes bright again when you use any button/control.

ALWAYS ON: The display stays on at the brightness level set with the BRIGHTNESS function.

Resetting Parameters to Their Factory Settings (FACTORY PRESET)

All parameter settings can be returned to their factory settings.

A message appears asking for confirmation. Rotate the jog dial to select YES.

The receiver parameters are reset to their factory settings.

Displaying the Software Version (VERSION)

The version of receiver software can be displayed.


Changing the Settings on the Transmitter

For details on menu operation, see “Basic Menu Operations” on page 26.

You can change the settings on the transmitter that is paired with this receiver using the GP/CH indication (see page 26) of the RECEIVER menu or TRANSMITTER menu (see page 27).

Before changing the settings, be sure to set pairing configurations in the RF REMOTE menu and enable the wireless remote control function by setting RF REMOTE to ON.

The following shows the US model display.

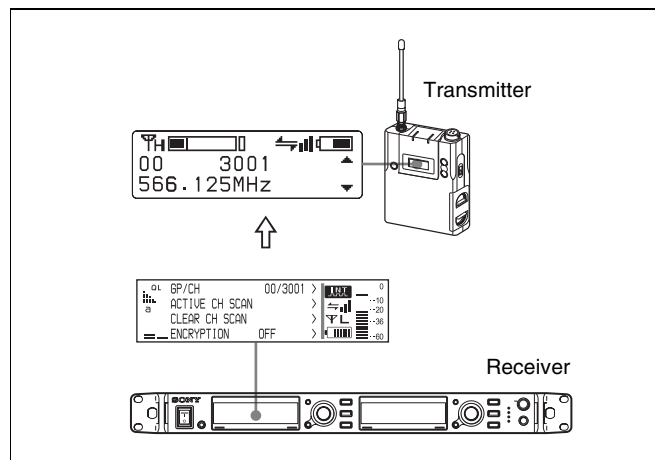

Group/channel Setting (GP/CH)

Only this setting is set through the GP/CH indication of the RECEIVER menu.

For details, see “Selecting the Group/Channel” on page 23.

Power-saving Setting (POWER SAVE)

To conserve power, this setting allows you to change the transmitter to sleep mode using the wireless remote control function.

Note

When the setting of the transmitter is changed to sleep mode, the signal for audio transmission is stopped and the metadata is also no longer transmitted. For this reason, “NO DATA” appears for all items in the TRANSMITTER menu, except for “SLEEP” in the POWER SAVE indication.

Transmission Power Setting (RF POWER)

You can change the transmission power of the transmitter.

Audio Input Level Setting (INPUT LEVEL)

When the input of the transmitter is set to MIC, the value of the attenuator can be changed.

The attenuator values that can be selected depend on the transmitter function.

Low-cut Filter Setting (LCF)

The low-cut filter setting of the transmitter can be changed.

Note

The frequency selection depends on the transmitter function.


+48 V Power Setting (+48V)

The +48 V power on the transmitter can be turned on or off.

Note

This function may not be supported depending on the transmitter.

Block Diagram

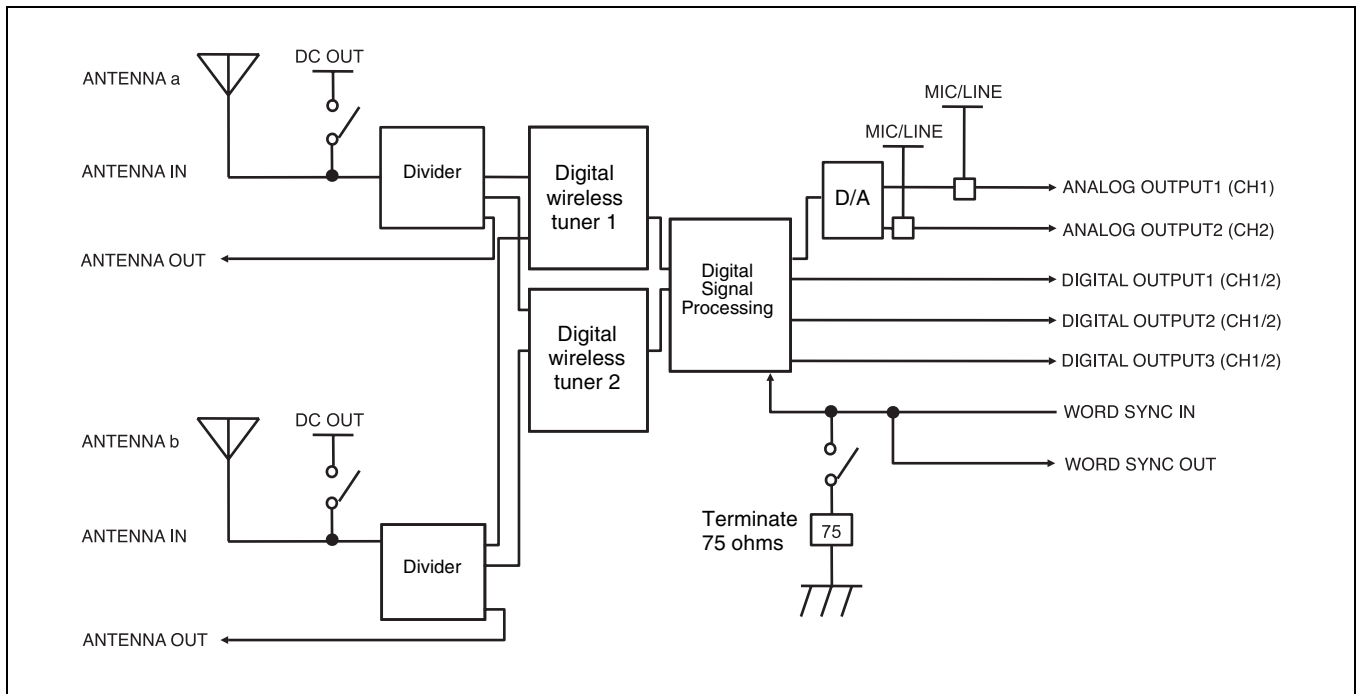

When the Alert Indicator Lights

Indication of Other Indicators	Cause of Alert	Remedy
The AF/PEAK indicator is lit in red.	The audio input of the transmitter has exceeded the peak level.	Change the audio input attenuator of the transmitter so that the input level does not exceed the peak. The wireless remote function can be used to change the setting from the receiver (<i>see page 28</i>).
The battery indication is flashing.	The batteries of the transmitter will run out of power soon.	Replace the batteries of the transmitter.
The number of lit indications of the QL meter has reduced.	The signal input level of the antenna has become low or the quality of the reception signal has become low because of interfering radio waves (interference).	<p>(1) If the RF indicator is lit in red or off, the signal input to the antenna may be insufficient.</p> <ul style="list-style-type: none"> • Check the transmission power setting of the transmitter. • Check the receiving antenna, each device between the receiver, cable connections, and settings. • Reduce the distance between which the transmitter and receiving antenna are used. <p>(2) If the number of lit indications of the QL meter has reduced even though the RF indicator is lit green, there may be interference.</p> <ul style="list-style-type: none"> • Check whether there is a problem with the operation channel plan. • Check whether another external signal is in use.
The RF indicator is lit in orange.	The signal input level of the antenna is 80 dB μ or higher.	Multi-channel synchronous operation may be affected. Try one of the following. <ul style="list-style-type: none"> • Try using the transmitter located away from the antenna. • Increase the ANT ATT a/b setting value of the receiver. If the ANT ATT a/b setting value is increased, be sure to also check the transmission distance limit between the transmitter and receiver.
The RF indicator is lit in red or off.	The signal input level of the antenna is barely enough for reception or reception is not possible.	<ul style="list-style-type: none"> • Check the transmission power setting of the transmitter. • Check the receiving antenna, each device between the receiver, cable connections, and settings. • Reduce the distance between which the transmitter and receiving antenna are used.
The key icon is flashing on the audio input level meter.	The encrypted transmission settings on the transmitter and receiver do not match.	Set the encrypted transmission settings on the transmitter and receiver so that they match (<i>see page 24</i>).
“EXT” flashes on the digital output sync indication.	The output signal from the DIGITAL OUT connector is not synchronized to the external synchronization word clock.	<ul style="list-style-type: none"> • Check whether the synchronization signal input is connected properly. • Check whether the synchronization signal conforms to the specifications of the receiver.

Error Messages

Message	Meaning
PLL UNLOCK	PLL is unlocked.
FAN STOP	Cooling fan does not work.
PHONES OVER CURRENT	Audio output from the PHONES terminal exceeds the maximum allowable current, or the terminal has short-circuited.
ANTENNA OVER CURRENT	DC outputs from the ANTENNA IN connectors exceed the maximum allowable current, or the connectors have short-circuited.
CPU EEP ROM NG	The data of the CPU EEP ROM is not correct.
RF EEP ROM NG	The data of the RF EEP ROM is not correct.

Troubleshooting

If you encounter a problem using this receiver, use the following checklist to find a solution. For any problems with the transmitter or adapter, refer to the operating instructions supplied with the respective device. If the problem persists, consult your Sony dealer.

Symptom	Meanings	Remedy
There is no sound.	The channel setting on the transmitter is different from that on the receiver.	Use the same channel setting on both the transmitter and receiver.
	The transmitter is turned off.	Check the power supply or battery of the transmitter.
	The setting of the encrypted transmission function on the receiver is different from that on the transmitter.	Confirm that the setting of the encrypted transmission function is the same on both the transmitter and the receiver.
	The input/output status of sync signals for the WORD SYNC IN/OUT connectors do not match the 75 Ω termination switch setting.	See "Connection Example of Word Clock and Audio" on page 20, and check the connections and the 75 Ω termination switch settings.
The sound is weak.	The attenuation level on the transmitter is too high.	Set the attenuator on the transmitter to an appropriate level.
There is distortion in the sound.	The attenuation level of the transmitter is zero or too low.	The input level of the transmitter is extremely high. Adjust the attenuation level on the transmitter so that there is no distortion to the sound.
	A LINE level signal is being input while the input level of the transmitter set to MIC.	Refer to the Operating Instructions supplied with the transmitter and set the input level to LINE.
There is sound interruption or noise.	The RF indicator lights up even when the transmitter is turned off.	Jamming radio waves are being received. Set the channel whose RF indicator on the receiver does not light up, and then set that same channel on the transmitter. When two or more transmitters are being used, change to another channel group that is unaffected by jamming radio waves. When doing this, the clear channel scan function is useful (see page 24).
	Two or more transmitters are set to the same channel.	It is not possible to use two or more transmitters that are set to the same channel. Refer to the Sony digital wireless frequency lists included in the supplied CD-ROM "Digital Wireless Receiver" and reset the transmitter channel.
	The channel is not set within the same channel group.	The channel plan of the receiver use is set so that no signal interference occurs when two or more transmitters are used simultaneously. Set each transmitter to a different channel within the same channel group.
Wireless remote control is not possible.	Pairing has not been established between the transmitter and receiver.	Carry out pairing (see page 28).
	The receiver is too far from the transmitter for communication to occur.	Check the wireless remote control condition indication (see page 11). If it is low, decrease the distance between the transmitter and the receiver.
	The transmitter that was paired with the receiver has been paired with another receiver.	Carry out pairing again with the transmitter that you want to control (see page 28).
The display is too dark.	The display brightness is set to low.	Adjust the brightness of the display (see page 31).

Important Notes on Operation

Notes on Using the Receiver

- The digital wireless microphone system product must be used within a temperature range of 0 °C to 50 °C (32 °F to 122 °F).
- Operating the receiver near electrical equipment (motors, transformers, or dimmers) may cause it to be affected by electromagnetic induction. Keep the receiver as far from such equipment as possible.
- The presence of the lighting equipment may produce electrical interference over the entire frequency range. Position the receiver so that interference is minimized.
- To avoid degradation of the signal-to-noise ratio, do not use the receiver in noisy places or in locations subject to vibration, such as the following:
 - near electrical equipment, such as motors, transformers or dimmers
 - near air conditioning equipment or places subject to direct air flow from an air conditioner
 - near public address loudspeakers
 - where adjacent equipment might knock against the tuner

Keep the receiver as far from such equipment as possible or use buffering material.

On cleaning

- If the receiver is used in a very humid or dusty place or in a place subject to an active gas, clean its surface as well as the connectors with a dry, soft cloth soon after use. Lengthy use of the receiver in such places or not cleaning it after its use in such places may shorten its life.
- Clean the surface and the connectors of the receiver with a dry, soft cloth. Never use thinner, benzene, alcohol or any other chemicals, since these may mar the finish.

Audio degradation due to weak reception

In a digital wireless system, sound quality is maintained up to the maximum transmission range. Beyond this point, as the radio wave becomes weaker, data synchronization is lost and the connection finally breaks. Sony digital wireless systems suppress the occurrence of large noise between these two points as the signal weakens. As a result, digital processing is conducted in a way that allows the signal to degrade in a very natural way.

To prevent electromagnetic interference from portable communication devices

The use of portable telephones and other communication devices near the DWR-R01D may result in malfunction and interference with audio signals. It is recommended that portable communication devices near the DWR-R01D be turned off.

Specifications

Tuner section

Type of reception	Space diversity
Circuit system	Double superheterodyne
Receiving frequency range	US models: DWR-R01D/30: 566.125 MHz to 637.875 MHz (TV-30 to TV-41 channels, except TV-37 channel) DWR-R01D/42: 638.125 MHz to 697.875 MHz (TV-42 to TV-51 channels) European model: DWR-R01D/62: 798.025 MHz to 862.000 MHz (TV-62 to TV-69 channels, except TV-65, and TV-66 channels)
Channel step	US models: 125 kHz European model: 25 kHz
Local oscillators	Crystal-controlled PLL synthesizer
ANTENNA a/b IN connectors	BNC-R, 50 ohms (2)
ANTENNA a/b OUT connectors	BNC-R, 50 ohms (2)
Sensitivity	20 dB μ or less (at bit error rate = 1×10^{-5} , no decline in S/N ratio)


Audio section

ANALOG OUT 1/2 connectors	XLR-3-32 type, 47 Ω or less (2)
DIGITAL OUT 1/2/3 connectors	XLR-3-32 type, 110 Ω (2) BNC-R, 75 Ω (1)
WORD SYNC IN/OUT connectors	BNC-R (input: 1, output: 1) with a 75 Ω termination switch
Reference output level (0 dBu = 0.775 Vrms)	Analog: -58 dBu (when MIC output) -12 dBu (when LINE output) Digital: -36 dBFS
Dynamic range	106 dB or more (A-weighted)
T.H.D	0.03% or less
Audio delay	1.9 ms (analog output) 1.9 ms (digital output)

General

Operating voltage	US models: 120 V AC European model: 230 V AC
-------------------	---

Power consumption	22 W
Operating temperature	0 to 50 °C (32 to 122 °F)
Storage temperature	-20 to +60 °C (-4 to +140 °F)
Dimensions (unit: mm (inches))	

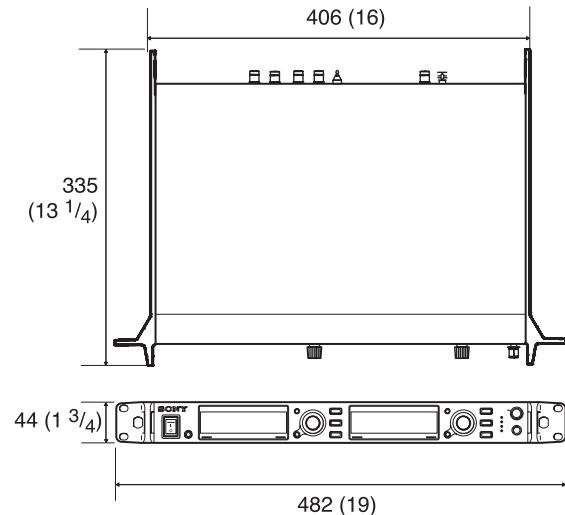

Mass	Approx. 4.1 kg (9 lb 1 oz) (including the attached antenna)
Wireless remote control	2.4 GHz IEEE802.15.4 compliant
LAN (10/100) connector	RJ-45 modular jack (1)
Supplied accessories	Whip antenna (2) Antenna mount with BNC connector (2) AC power cord (1) Foot (4) Operating Instructions (1) Operating Instructions (CD-ROM) (1) PC control software (CD-ROM) (1) Warranty card (US models only) (1)

Design and specifications are subject to change without notice.

Note

Always verify that the unit is operating properly before use. SONY WILL NOT BE LIABLE FOR DAMAGES OF ANY KIND INCLUDING, BUT NOT LIMITED TO, COMPENSATION OR REIMBURSEMENT ON ACCOUNT OF THE LOSS OF PRESENT OR PROSPECTIVE PROFITS DUE TO FAILURE OF THIS UNIT, EITHER DURING THE WARRANTY PERIOD OR AFTER EXPIRATION OF THE WARRANTY, OR FOR ANY OTHER REASON WHATSOEVER.

<http://www.sony.net/>

Sony Corporation