

## USER MANUAL



**PMX630I**



**PMX830I**

## PROFESSIONAL MIXER

- ◆ 4/6/8 Channel balanced microphone and line inputs.
- ◆ Treble, bass, reverb level control on each channel.
- ◆ Support USB/SD memory card MP3 / WMA music format player.
- ◆ Return , CD (TAPE) input.
- ◆ Send , earphones, REC output.
- ◆ 5 band graphic Equalizer.

## IMPORTANT SAFETY SYMBOLS



The symbol is used to indicate that some hazardous live terminals are involved within this apparatus, even under the normal operating conditions, which may be sufficient to constitute the risk of electric shock or death.



The symbol is used in the service documentation to indicate that specific component shall be replaced only by the component specified in that documentation for safety reasons.



Protective grounding terminal.



Alternating current/voltage.



Hazardous live terminal.

**ON:** Denotes the apparatus is turned on.

**OFF:** Denotes the apparatus is turned off.

**WARNING:** Describes precautions that should be observed to prevent the danger of injury or death to the operator.

**CAUTION:** Describes precautions that should be observed to prevent danger of the apparatus.

## IMPORTANT SAFETY INSTRUCTIONS

- Read these instructions.
- Keep these instructions.
- Heed all warning.
- Follow all instructions.
- Water & Moisture

### • Water & Moisture

The apparatus should be protected from moisture and rain, can not used near water, for example: near bathtub, kitchensink or a swimming pool, etc.

### • Heat

The apparatus should be located away from the heat source such as radiators, stoves or other appliances that produce heat.

### • Ventilation

Do not block areas of ventilation opening. Failure to do could result in fire. Always install accordance with the manufacturer' s instructions.

- **Object and Liquid Entry**

Objects do not fall into and liquids are not spilled into the inside of the apparatus for safety.

- **Power Cord and Plug**

Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus. Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong is provided for your safety. If the provided plug does not fit into your outlet, refer to electrician for replacement.

- **Power Supply**

The apparatus should be connected to the power supply only of the type as marked on the apparatus or described in the manual. Failure to do could result in damage to the product and possibly the user.

Unplug this apparatus during lightning storms or when unused for long periods of time.

- **Fuse**

To prevent the risk of fire and damaging the unit, please use only of the recommended fuse type as described in the manual. Before replacing the fuse, make sure the unit turned off and disconnected from the AC outlet.

- **Electrical Connection**

Improper electrical wiring may invalidate the product warranty.

- **Cleaning**

Clean only with a dry cloth. Do not use any solvents such as benzol or alcohol.

- **Servicing**

Do not implement any servicing other than those means described in the manual.

Refer all servicing to qualified service personnel only. Only use accessories/attachments or parts recommended by the manufacturer.

- **Warning**

Please remember the high sound pressure do not only temporarily damage your sense of hearing, but can also cause permanent damage. Be careful to select a suitable volume




## CAUTION!

We should like to draw your attention to the fact that extreme volumes may damage your hearing and/or your headphones or loudspeakers. Turn the MAIN MIX control and phones control in the main section fully down before you switch on the unit. Always be careful to set appropriate volume levels.


## 1. CONTROL ELEMENTS AND CONNECTORS

### 1.1 FRONT PANEL

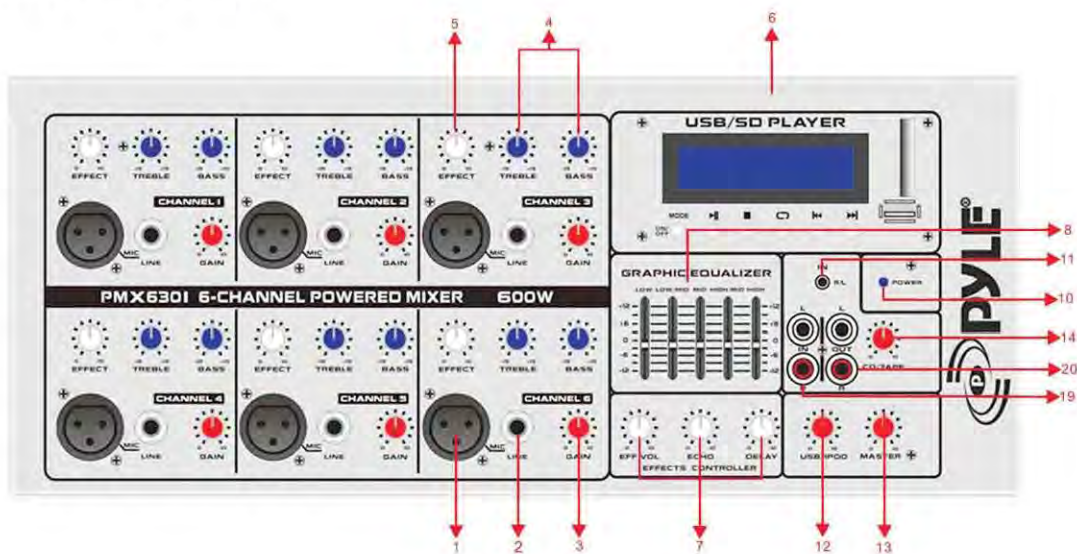


- 1) 3 Pin Low impedance Microphone input–This input is for balanced low impedance microphone input. It is always on and available, It has an input impedance of 1K ohm. The connector is wired as: Pin 1 + shield : Pin 3+negative (cold)
- 2) 1/4 Line/High Impedance balanced input this may be used as either a high impedance microphone input or a line level device such as : tape players , CD Player , returns or radios. It will also allow connection from an electric guitar , Bass , or keyboard It is a 2-conductor input with an impedance of 10k ohms. Both the high and low impedance input may be used simultaneously.
- 3) Gain this is the volume control for each channel . It sends the signal to the master mix buss . Typical operation is between 4 and 8 , dependent upon the device (s) on that channel , please remember that it acts like a pre amp , So if you are using a device that has a volume output control (i, e, : a tape or CD

Player ) you will need to do some level matching by adjusting the level controls on Each unit .

- 4) EQ Control This is to adjust the overall tone of the individual inputs .  
It is set at 60Hz/10k Hz. Since it is a cut or boost control, (+/-15dB) it will add or Diminish presence frequencies in the sound .
  - 5) EFX Control This is a send control to the reverb buss . It controls the amount of Reverberation added to the input signals.
  - 6) USB/SD player, this is a support USB/SD memory card MP3 / WMA music format player.  
By USB/SD to control the volume, Typical operation is between 4 and 8 .
  - 7) Master EFX This controls the level , I echo and time of internal reverberation added Back to the mix.
  - 8) Master EQ This controls the overall amount of EQ frequencies (63 250 1K 4k 12k Hz) . This controls allows +/-12 dB of boost or cut .
  - 9) This is a switch power switch, control of the machine on or off, will this machine start, you will see the blue LED indicator emit light.
  - 10) Power LED Indicator .
  - 11) 3.5mm input jack for use with personal music players
  - 12) Volume control for USB/SD
-  **Please do not connect microphones to the mixer (or the stagebox/wallbox) as long as the phantom power supply is switched on. Connect the micro-Phones before you switch on the power supply. IN addition, the monitor/PA loudspeakers should be muted before you activate the phantom power supply. After switching on, wait approx. one minute in order to allow system stabilization.**
- 13) Master Volume This controls the overall volume level of the entire amplifier.  
Typical operation is between 4 and 8 .
  - 14) Tape Volume This controls the level , of the playback inputs (RCA jack on rear Panel) .

## 1. 2BACK PANEL

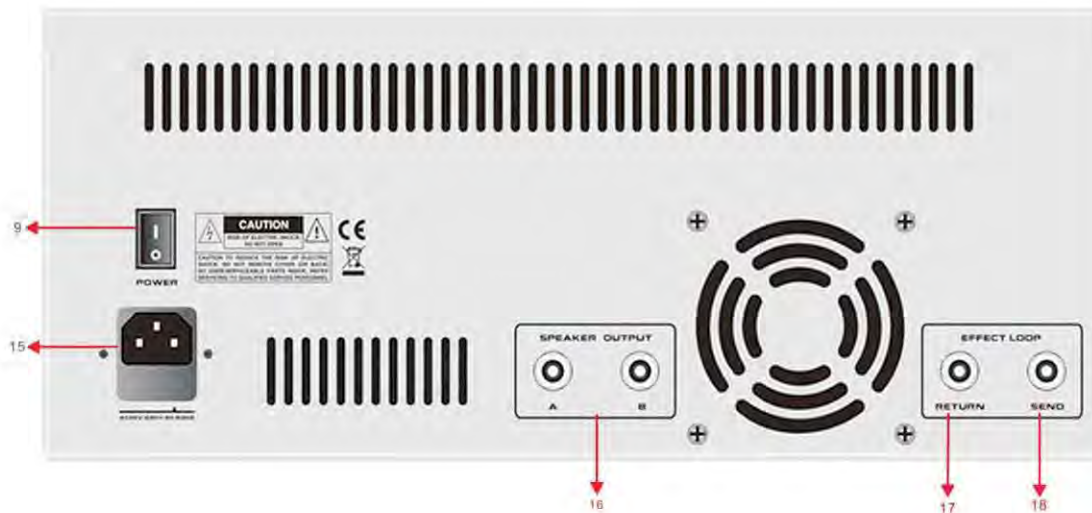

15) AC Cable this is a standard cable for use with standard voltages from A. C. Wall Outlets. It is grounded and should NFVFR have the ground pin removed for any Reason.

16) Speaker output, each channel impedance is 8.Ohm

17) RETURN These 1/4 jack are for bringing in a effects return effect or other Line level source . the impedance is 10K ohms@-10dBv.

18) SEND Out-this is a 1/4 2-conductor line output . The impedance is 1k ohm @-10 dBv . It is used to connect the either additional power or as an additional Recording device . This line level signal is a mirror image of the main outputs.

19) Tape play (L/R) These RCA jacks are for bringing in a deck , CD play or other line Level source. The impedance is 10K ohm @-10dBv.

20) Tape Record (L/R) These RCA jack are for hooking up a tape desk to record from The mixer . Both channels are summed into mono for compatibility. The signals are Taken pre-master section , meaning that they are without reverb or the master tone Section and does not include the tape in signal , the impedance is 1k ohm @- 10dBv.

## 2. INSTALLTION


### 2.1 Mains connection

#### AC POWER IN

Connect the power supply to the 3-pin mains connector on the rear of the console. Use the AC adapter supplied to connect the console to the mains. The adapter complies with all applicable safety standards.



**Please use only the power supply unit provided with the console.**


 **Never connect the ME to the power supply unit while the latter is connected to the mains! First connect the console to the power supply unit, then connect the power supply unit to the mains.**


## 2.2 Audio connections

You will need a larger number of cable for the various connections to and from the console. The illustrations below show. Thewing of these cables. Be sure to use only high-grade cable.


Please use commercial RCA cables to wire the 2-track inputs and outputs.

You can, of course, also connect unbalanced devices to the balanced input/outputs. Use either mono plugs, or ensure that ring and sleeve are bridged inside the stereo plug (or pins 1 & 3 in the case of XLR connectors).


 **Caution! Never use unbalanced XLR connectors (PIN 1 and 3 connected) on the MIC input connectors when using the phantom power supply.**

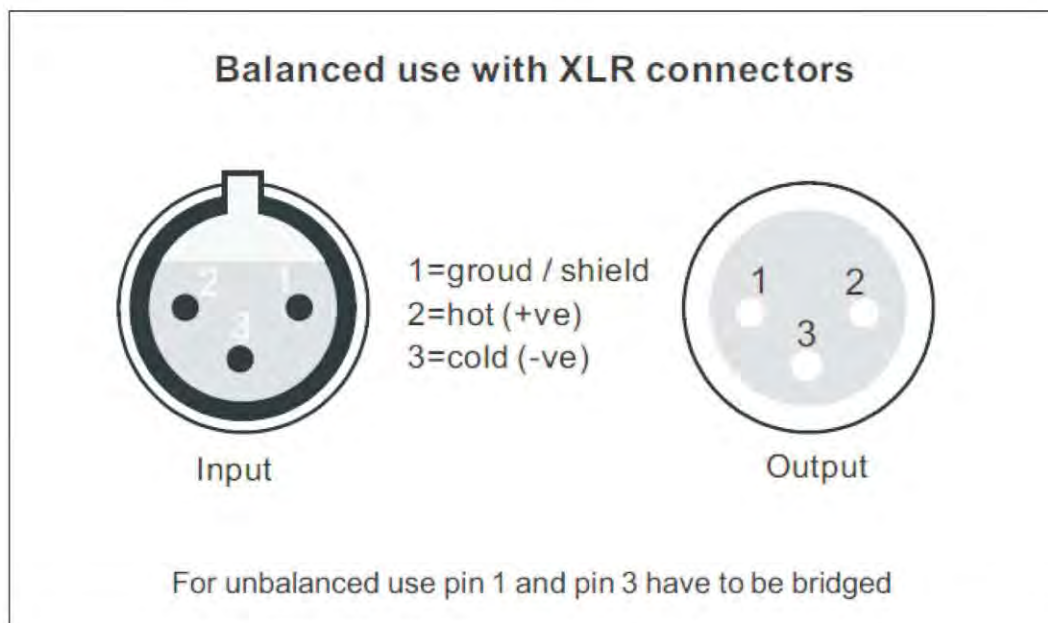

*Fig. 2. 1: XLR connections*

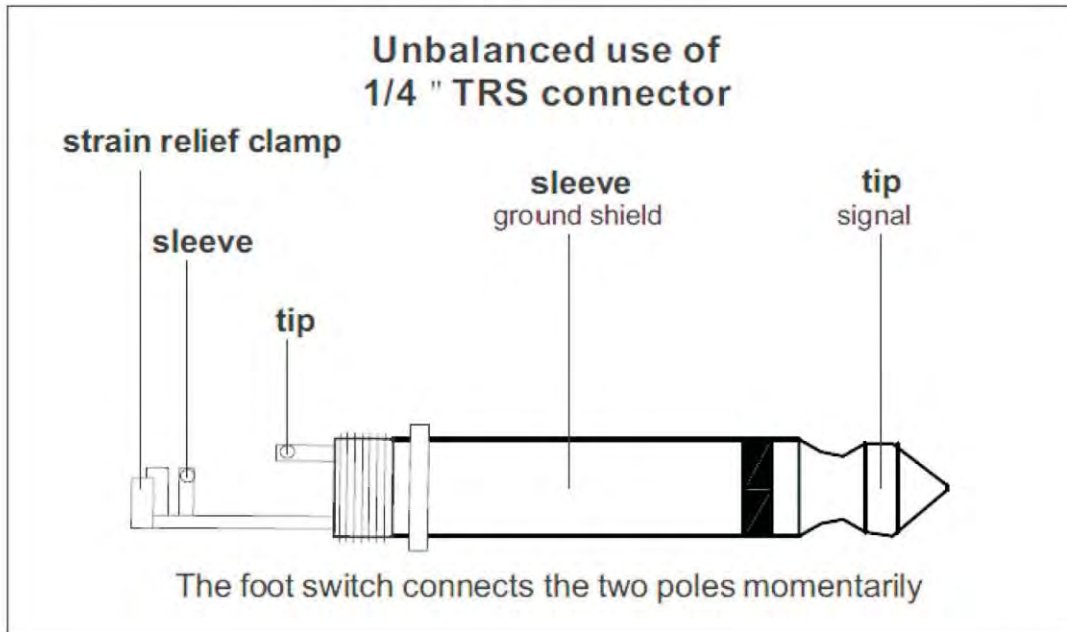


*Fig. . 2: 1/4 mono plug*

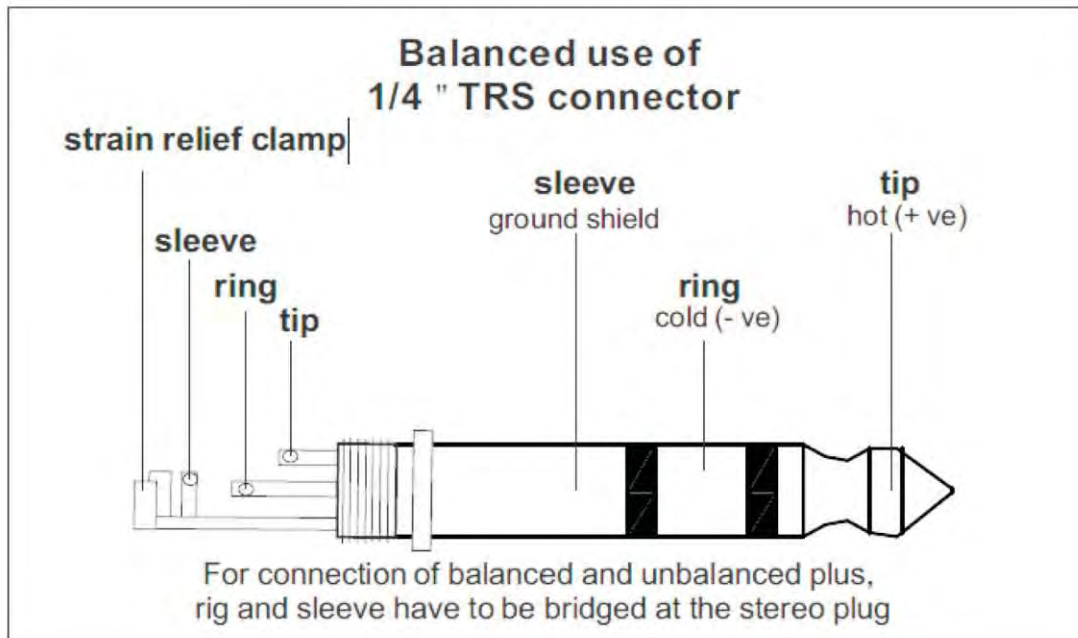

*Fig. 2. 3: 1/4 stereo plug*



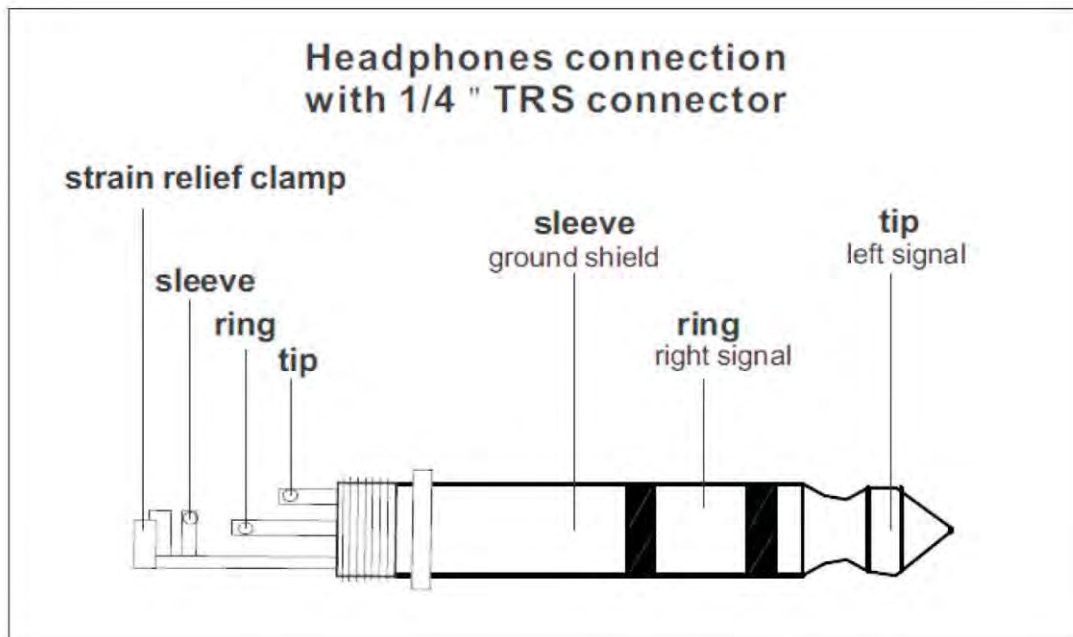

*Fig. 2. 4: Stereo plug for headphones connection*

### 3. SPECIFICATIONS

#### **Mono inputs**

#### **Microphone inputs (XENYX Mic Preamp)**

Type	XLR, electronically balanced, discrete input circuit
Mic E. I. N. (20 Hz – 20 kHz)	
@ 0 $\Omega$ source resistance	-134 dB / 135.7 dB A-weighted
@ 50 $\Omega$ source resistance	-131 dB / 133.3 dB A-weighted
@ 150 $\Omega$ source resistance	-129 dB / 130.5 dB A-weighted
Frequency response	<10 Hz –150 kHz (-1 dB), <10 Hz – 200 kHz (-3 dB),
Gain range	+10 to +60 dB
Max. Input level	+12 dBu @ +10 dB gain
Impedance	approx. 2.6 k $\Omega$ balanced
Signal-to noise ratio	110 dB / 112 dB A-weighted (0 dBu In @ +22 dB gain)
<b>Distortion (THD+ N)</b>	0.005% / 0.004% A-weighted
<b>Line input</b>	
Type	1/4" TRS connector, Electronically balanced
Impedance	approx. 20 $\Omega$ balanced

Gain range 10 k $\Omega$  unbalanced  
-10 to +40 dB  
Max. Input level +22 dBu @ 0 dB Gain

### Channel Equalization

Frequency: Hz control range  
High: @10K +/-15dB  
Low: @60 +/-15dB

### Master 5-band graphic equalizer

Frequency: Hz control range  
60 +/- 12dB  
250 +/- 12dB  
1K +/- 12dB  
4K +/- 12dB  
12K +/- 12dB

### Effects Loop

Effects send  
Type 1/4" TS connector, unbalanced  
Impedance approx. 1k ohm  
Max. output level -10dBv  
Effects return  
Type 1/4" TS connector, unbalanced  
Impedance approx. 10k ohm  
Max. output level -10dBv

### Control room outputs


Type RCA, unbalanced  
Impedance approx. 1k ohm  
Max. output level -10dBv

### Headphones output

Type 1/4" TRS connector, Stereo  
Max. output level +19 dBu / 150 $\Omega$ (+25 dBu)

### Parallel output

Power output 200Watts PMS 4ohms

 **you can connect two or a 8 Ohm speakers or a 40hm speakers, but did not allow connect two 40hm horns.**

### Protection Circuit

Power on Mute 2 seconds