

THE
X PUCK™ CSI
xtreme

WIRELESS DMX
WICICLE®
ENABLED



Blizzard Lighting, LLC
www.blizzardlighting.com
Waukesha, WI USA
Copyright (c) 2013

TABLE OF CONTENTS

| | |
|---|-----------|
| The Puck CSI™ Xtreme LED PAR Can | 1 |
| 1. Getting Started | 3 |
| What's In The Box? | 3 |
| Getting It Out Of The Box | 3 |
| Powering Up! | 3 |
| Getting A Hold Of Us | 3 |
| Safety Instructions (Don't Stick Your Hand In The Toaster!) | 4 |
| 2. Meet The Puck CSI™ Xtreme LED PAR Can | 5 |
| Features | 5 |
| DMX Quick Reference | 5 |
| The Puck CSI™ Xtreme Pin-up Picture | 6 |
| 3. Setup | 7 |
| Fuse Replacement | 7 |
| Connecting A Bunch Of Puck CSI™ Xtreme LED PAR Cans | 7 |
| Data/DMX Cables | 7 |
| Cable Connectors | 8 |
| 3-Pin??? 5-Pin??? Huh? | 8 |
| Take It To The Next Level: Setting up DMX Control | 8 |
| Fixture Linking (Master/Slave Mode) | 9 |
| Mounting/Rigging | 9 |
| Using this fixture with the wiCICLE® Wireless DMX System | 10 |
| 4. Operating Adjustments | 12 |
| Control Panel | 12 |
| Control Panel Menu Structure | 12 |
| DMX Mode | 13 |
| Master/Slave Mode | 13 |
| Sound Active Mode | 13 |
| Fade Mode | 13 |
| Jump Mode | 13 |
| Set Custom Intensity Levels | 13 |
| 5. Appendix | 14 |
| Keeping The Puck CSI™ Xtreme As Good As New | 14 |
| Returns (Gasp!) | 14 |
| Shipping Issues | 14 |
| Tech Specs | 15 |
| Troubleshooting | 15 |

1. GETTING STARTED

What's In The Box?

- 1 x Puck CSI™ Xtreme UV LED PAR Fixture
- 1x IEC Power Cord
- This Lovely User Manual

Getting It Out Of The Box

Congratulations, aspiring crime fighter and/or psychedelic music aficionado! Now that you've got The Puck CSI™ Xtreme (or hopefully, Xtreme's!), you should carefully unpack the box and check the contents to ensure that all parts are present and in good condition. If anything looks as if it has been damaged in transit, notify the shipper immediately and keep the packing material for inspection. Again, please save the carton and all packing materials. If a fixture must be returned to the factory, it is important that the fixture be returned in the original factory box and packing.

Powering Up!

All fixtures must be powered directly off a switched circuit and **cannot be run off a rheostat (variable resistor) or dimmer circuit, even if the rheostat or dimmer channel is used solely for a 0% to 100% switch.**

AC Voltage Switch - Not all fixtures have a voltage select switch, so please verify that the fixture you receive is suitable for your local power supply. See the label on the fixture or refer to the fixture's specifications chart for more information. A fixture's listed current rating is its average current draw under normal conditions. Check the fixture or device carefully to make sure that if a voltage selection switch exists that it is set to the correct line voltage you will use.

Warning! Verify that the voltage select switch on your unit matches the line voltage applied. Damage to your fixture may result if the line voltage applied does not match the voltage indicated on the voltage selector switch. All fixtures must be connected to circuits with a suitable Ground (Earthing).

Getting A Hold Of Us

If something is wrong, just give us a call or send an email. We'll be happy to help, honest.

Blizzard Lighting
N16 W23390 Stoneridge Dr. Suite E
Waukesha, WI 53188 USA
www.blizzardlighting.com
414-395-8365
Email: support@blizzardlighting.com

Disclaimer: The information and specifications contained in this document are subject to change without notice. Blizzard Lighting™ assumes no responsibility or liability for any errors or omissions that may appear in this user manual. Blizzard Lighting™ reserves the right to update the existing document or to create a new document to correct any errors or omissions at any time. You can download the latest version of this document from www.blizzardlighting.com.

| Author: | Date: | Last Edited: | Date: |
|-----------|-----------|--------------|-----------|
| J. Thomas | 6/13/2013 | J. Thomas | 6/14/2013 |

SAFETY INSTRUCTIONS



Please read these instructions carefully. They include important information about the installation, usage and maintenance of this product.

- Please keep this User Guide for future use. If you sell the unit to someone else, be sure that they also receive this User Guide.
- ALWAYS make sure that you are connecting to the proper voltage, and that the line voltage you are connecting to is not higher than that stated on the decal or rear panel of the fixture.
- This product is intended for indoor use only.
- To prevent risk of fire or shock, do not expose fixture to rain or moisture.
- Make sure there are no flammable materials close to the unit while operating.
- The unit must be installed in a location with adequate ventilation, at least 20in (50cm) from adjacent surfaces. Be sure that no ventilation slots are blocked.
- ALWAYS disconnect from the power source before servicing or replacing fuse and be sure to replace with same fuse size and type.
- ALWAYS secure fixture using a safety chain. NEVER carry the fixture by its cord. Use its carrying handles.
- DO NOT operate at ambient temperatures higher than 104°F (40°C).
- In the event of a serious operating problem, stop using the unit immediately. NEVER try to repair the unit by yourself. Repairs carried out by unskilled people can lead to damage or malfunction. Please contact the nearest authorized technical assistance center. Always use the same type spare parts.
- NEVER connect the device to a dimmer pack.
- Make sure the power cord is never crimped or damaged.
- Never disconnect the power cord by pulling or tugging on the cord.
- Avoid direct eye exposure to the light source while it is on.

Caution! There are no user serviceable parts inside the unit. Do not open the housing or attempt any repairs yourself. In the unlikely event your unit may require service, please contact Blizzard Lighting at support@blizzardlighting.com.

2. MEET THE PUCK CSI™ XTREME FLAT PAR CAN

CONTROL FEATURES

- High output UV via 36x 3w 390-410nm UV LEDs
- Full on UV LED intensity + 4 separate LED pixel patterns
- Variable electronic strobe
- Variable electronic dimmer
- Built-in automated programs via DMX and master/slave
- Built-in sound active programs

ADDITIONAL FEATURES

- Lightweight and compact (It kept its New Years' resolution!)
- 4-Button LED control panel for easy programming
- Dual bracket for flexibility in mounting
- Power outlet for fixture linking

DMX Quick Reference (8-Channel Mode)

| Channel | Channel Value | What It Does |
|---------|---|--|
| 1 | 000 <-> 255 | Master Dimmer (0% <--> 100%) |
| 2 | 000 <-> 255 | Pattern 1 Intensity (0% <--> 100%) |
| 3 | 000 <-> 255 | Pattern 2 Intensity (0% <--> 100%) |
| 4 | 000 <-> 255 | Pattern 3 Intensity (0% <--> 100%) |
| 5 | 000 <-> 255 | Pattern 4 Intensity (0% <--> 100%) |
| 6 | 000 <-> 255 | Strobe (slow <--> fast) |
| 7 | 000 <-> 255 | Speed (slow <--> fast) |
| 8 | 000 <-> 002 003 <-> 049 050 <-> 100 101 <-> 150 151 <-> 200 201 <-> 250 251 <-> 255 | Enable Auto (Ch. 7 controls speed) Strobe Auto Color Fade Mode Jump Mode Built-in Programs Sound Active Mode |


DMX Quick Reference (4-Channel Mode)

| Channel | Channel Value | What It Does |
|---------|---------------|------------------------------------|
| 1 | 000 <-> 255 | Pattern 1 Intensity (0% <--> 100%) |
| 2 | 000 <-> 255 | Pattern 2 Intensity (0% <--> 100%) |
| 3 | 000 <-> 255 | Pattern 3 Intensity (0% <--> 100%) |
| 4 | 000 <-> 255 | Pattern 4 Intensity (0% <--> 100%) |

Figure 1: The Puck CSI™ Pin-Up Picture



Figure 2: The Rear Connections

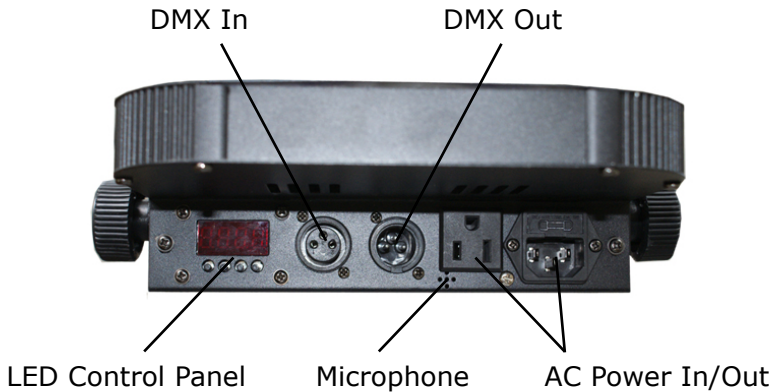


3. SETUP



Before replacing a fuse, disconnect power cord. ALWAYS replace with the same type and rating of fuse.

Fuse Replacement

With a flat head screwdriver, wedge the fuse holder out of its housing. Remove the damaged fuse from its holder and replace with exact same type fuse. Insert the fuse holder back in its place and reconnect power.

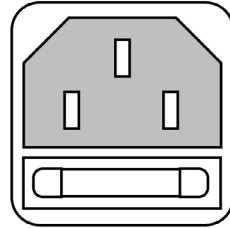

Connecting A Bunch of Puck CSI™ Xtreme Flat LED PAR Cans

You will need a serial data link to run light shows using a DMX-512 controller or to run shows on two or more fixtures set to sync in master/slave operating mode. The combined number of channels required by all the fixtures on a serial data link determines the number of fixtures the data link can support.

Fixtures on a serial data link must be daisy chained in one single line. Also, connecting more than 32 fixtures on one serial data link without the use of a DMX optically-isolated splitter may result in deterioration of the digital DMX signal.

The maximum recommended cable-run distance is 500 meters (1640 ft). The maximum recommended number of fixtures on a serial data link is 32 fixtures.

Data/DMX Cabling

To link fixtures together you'll need data cables. You should use data-grade cables that can carry a high quality signal and are less prone to electromagnetic interference.

For instance, Belden© 9841 meets the specifications for EIA RS-485 applications. Standard microphone cables will "probably" be OK, but note that they cannot transmit DMX data as reliably over long distances. In any event, the cable should have the following characteristics:

2-conductor twisted pair plus a shield

Maximum capacitance between conductors – 30 pF/ft.

Maximum capacitance between conductor & shield – 55 pF/ft.

Maximum resistance of 20 ohms / 1000 ft.

Nominal impedance 100 – 140 ohms


Cable Connectors

Cables must have a male XLR connector on one end and a female XLR connector on the other end. (Duh!)



A Word on Termination: DMX is a resilient communication protocol, however errors still occasionally occur. Termination reduces signal errors, and therefore best practices include use of a terminator in all circumstances. If you are experiencing problems with erratic fixture behavior, especially over long signal cable runs, a terminator may help improve performance.

To build your own DMX Terminator:
Obtain a 120-ohm, 1/4-watt resistor, and wire it between pins 2 & 3 of the last fixture. They are also readily available from specialty retailers.

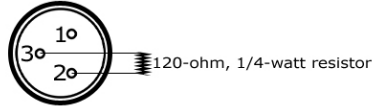

CAUTION: Do not allow contact between the common and the fixture's chassis ground. Grounding the common can cause a ground loop, and your fixture may perform erratically. Test cables with an ohm meter to verify correct polarity and to make sure the pins are not grounded or shorted to the shield or each other.

3-Pin??? 5-Pin??? Huh?!?

If you use a controller with a 5 pin DMX output connector, you will need to use a 5 pin to 3 pin adapter. They are widely available over the internet and from specialty retailers. If you'd like to build your own, the chart below details a proper cable conversion:


| Conductor | 3-Pin Female (Output) | 5-Pin Male (Input) |
|---------------|-----------------------|--------------------|
| Ground/Shield | Pin 1 | Pin 1 |
| DMX Data (-) | Pin 2 | Pin 2 |
| DMX Data (+) | Pin 3 | Pin 3 |
| Not Used. | No Connection. | No Connection. |
| Not Used. | No Connection. | No Connection. |

Take It To The Next Level: Setting Up DMX Control

Step 1: Connect the male connector of the DMX cable to the female connector (output) on the controller.




Step 2: Connect the female connector of the DMX cable to the first fixture's male connector (input). *Note:* It doesn't matter which fixture address is the first one connected. We recommend connecting the fixtures in terms of their proximity to the controller, rather than connecting the lowest fixture number first, and so on.

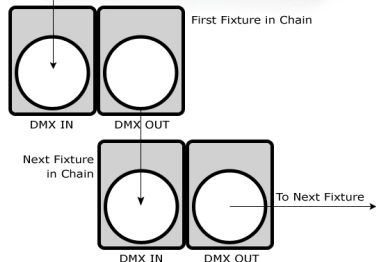

Step 3: Connect other fixtures in the chain from output to input as above. Place a DMX terminator on the output of the final fixture to ensure best communication.

Fixture Linking (Master/Slave Mode)

1. Connect the (male) 3 pin connector side of the DMX cable to the output (female) 3 pin connector of the first fixture.
2. Connect the end of the cable coming from the first fixture which will have a (female) 3 pin connector to the input connector of the next fixture consisting of a (male) 3 pin connector. Then, proceed to connect from the output as stated above to the input of the following fixture and so on.

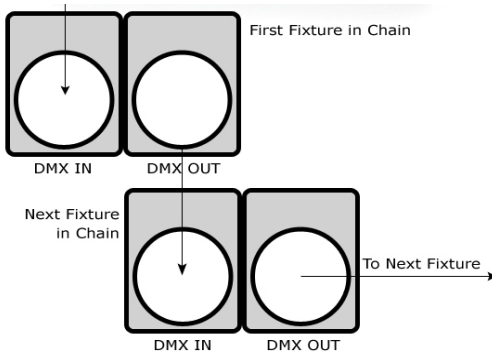

A quick note: Often, the setup for Master-Slave and Standalone operation requires that the first fixture in the chain be initialized for this purpose via either settings in the control panel or DIP-switches. Secondly, the fixtures that follow may also require a slave setting.

Check the **"Operating Adjustments"** section in this manual for complete instructions for this type of setup and configuration.

Mounting & Rigging

This fixture may be mounted in any SAFE position provided there is enough room for ventilation.

It is important never to obstruct the fan or vents pathway. Mount the fixture using a suitable "C" or "O" type clamp. The clamp should be rated to hold at least 10x the fixture's weight to ensure structural stability. Do not mount to surfaces with unknown strength, and ensure properly "rated" rigging is used when mounting fixtures overhead.

Adjust the angle of the fixture by loosening both knobs and tilting the fixture. After finding the desired position, retighten both knobs.

- When selecting installation location, take into consideration lamp replacement access (if applicable) and routine maintenance.
- Safety cables **MUST ALWAYS** be used.
- Never mount in places where the fixture will be exposed to rain, high humidity, extreme temperature changes or restricted ventilation.

USING THIS FIXTURE WITH THE wiCICLE® WIRELESS DMX SYSTEM

In addition to the unbridled thrill you already received the first time you plugged in your fixture, you'll be delighted to know that This fixture also works seamlessly with our wiCICLE® Wireless DMX system, **without additional power.**




- ONLY fixtures bearing this logo are certified for use with the wiCICLE® without external power.

- **Unauthorized modification and/or using the wiCICLE® with unapproved fixtures may cause damage to the wiCICLE® or fixture. UNDER NO CIRCUMSTANCES IS BLIZZARD LIGHTING RESPONSIBLE FOR ANY DAMAGE FROM SUCH OPERATION.**

- Fixtures bearing the above logo **MUST** only use cable and connectors which separate chassis/case ground from cable shielding. Cabling with the shield connected to the connector's case/chassis may cause malfunction and damage to the wiCICLE® or fixture.

- wiCICLE® transmitters have additional power requirements and therefore cannot be powered directly from the fixture. You will need to utilize the supplied AC/DC adaptor to drive wiCICLE® transmitters in your system.

WE HAD THIS SPACE, SO WE FIGURED WE'D DRAW YOU A PICTURE:

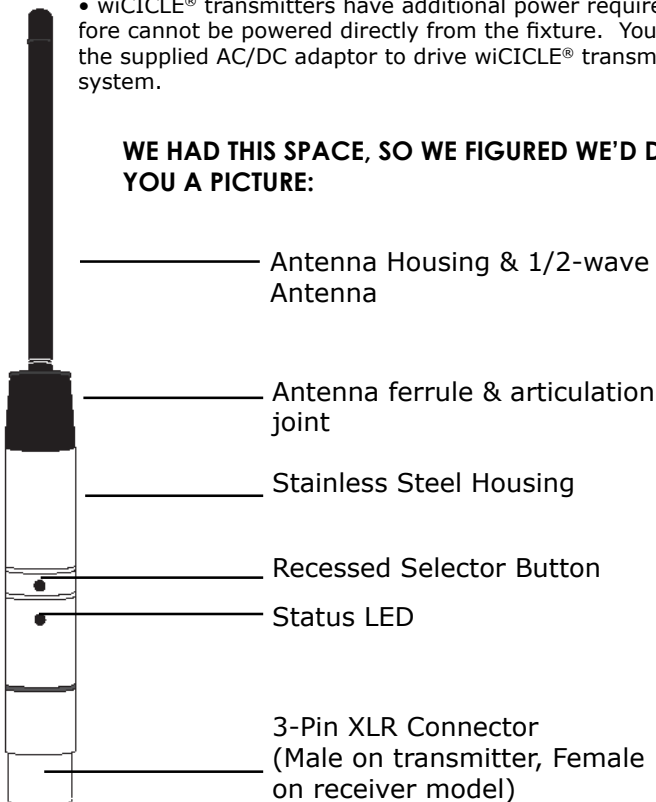

Each wiCICLE® acts as both a transmitter and a receiver, depending on whether a DMX source is applied to the integral XLR connector. This is an extremely powerful feature of the system, however, it also requires 1 piece of due diligence, and that is the removal of extraneous DMX signals from your lighting rig BEFORE proceeding.

SO: BEFORE DOING ANYTHING ELSE, YOU SHOULD DISABLE ANY BUILT-IN PROGRAMS IN THE FIXTURES YOU WISH TO CONNECT AND/OR SET THEM AS SLAVES PRIOR TO RETURNING THEM TO DMX MODE (IF APPLICABLE). Most fixtures contain a built-in automatic, sound active or custom program which is designed to operate with the fixture NOT connected to a DMX chain.

Some of these programs will automatically run unless the fixture is set to slave mode. These fixtures typically sense DMX automatically and switch to DMX mode upon receiving DMX signal (our Pucks do that!)

If you plug a wiCICLE® “receiver” into an autosensing fixture set as a “master, “chances are good that the wiCICLE® “receiver” will begin transmitting the master program. Most times, this is undesirable, and taking the two seconds to switch these programs off will solve a lot of ails.

Got that done? Good! Then let’s proceed!

1. Plug the wiCICLE® Receiver into the “DMX IN” connector of the fixture and verify it is receiving power (the **STATUS LED** should illuminate.)
2. Connect the AC/DC adaptor to the wiCICLE® Transmitter and verify it is receiving power (the **STATUS LED** should illuminate.)
3. Press the **RECESSED SELECTOR BUTTON** on the Transmitter to select the operating channel group. (The system will store this setting for future use)

The 7-Color Status LED will change color to indicate the current channel group:

- GROUP 1: **RED**
- GROUP 2: **GREEN**
- GROUP 3: **YELLOW**
- GROUP 4: **BLUE**
- GROUP 5: **VIOLET**
- GROUP 6: **CYAN**
- GROUP 7: **WHITE**

NOTE: “GROUP” number also corresponds to the “GROUP” setting on our LightCaster™ wireless DMX Transceiver.

4. Follow the same procedure on the Receiver to select the channel group.
5. Once both the transmitter and receiver(s) are both set to the same channel group, connect the transmitter to the DMX controller or the DMX out of a fixture on your DMX chain.
6. Once a DMX signal is provided to the transmitter, the status LED will blink **RED** slowly until communication is established with the receiver. The status LED on the receiver(s) will flash **GREEN** slowly until communication is established.
7. Once the clearest channel is auto-selected, the status LEDs will blink quickly on both the transmitter and receiver. NOTE: The color of the LED DURING operation does not indicate channel group, instead it indicates whether the unit is transmitting or receiving. **That’s It!**

4. OPERATING ADJUSTMENTS

The Control Panel

All the goodies and different modes possible with the Puck™ CSI Xtreme are accessed by using the control panel on the rear of the fixture. There are 4 control buttons below the LED display which allow you to navigate through the various control panel menus.

<MENU>

Is used to navigate to the previous higher-level menu item.

<UP>


Scrolls through menu items and numbers in ascending order.

<DOWN>

Scrolls through menu items and numbers in descending order.

<ENTER>

Is used to select and confirm/store the current selection.

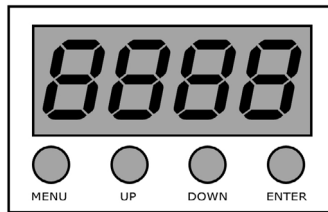

The Control Panel LED Display shows the menu items you select from the menu map below. When a menu function is selected, the display will show immediately the first available option for the selected menu function. To select a menu item, press **<ENTER>**.

Press the **<MENU>** button repeatedly until you reach the desired menu function. Use the **<UP>** and **<DOWN>** buttons to navigate the menu options. Press the **<ENTER>** button to select the menu function currently displayed, or to enable a menu option. To return to the previous option or menu without changing the value, press the **<MENU>** button.

Control Panel Menu Structure

| | | | |
|---------------|--------|--------------------|-------------------------------------|
| <i>d</i> ---- | —————> | <i>d001 - d512</i> | 4 channel mode / choose DMX address |
| <i>A</i> ---- | —————> | <i>A001 - A512</i> | 8 channel mode / choose DMX address |
| <i>FF</i> --- | —————> | <i>FF01 - FF99</i> | Fade mode |
| <i>r</i> ---- | —————> | <i>r001 - r255</i> | 1st LED group intensity |
| <i>G</i> ---- | —————> | <i>G001 - G255</i> | 2st LED group intensity |
| <i>b</i> ---- | —————> | <i>b001 - b255</i> | 3st LED group intensity |
| <i>U</i> ---- | —————> | <i>U001 - U255</i> | 4th LED group intensity |
| <i>dEoo</i> | —————> | --- | Auto run mode |
| <i>SoUd</i> | —————> | --- | Sound active mode |
| <i>SLAV</i> | —————> | --- | Sets fixture to run in slave mode |

DMX Mode

Allows the unit to be controlled by any universal DMX controller.

1. To set the fixture to run in 4-channel DMX mode, use the **<MENU>** button to navigate to *d00 1*, then press **<ENTER>**. To choose a different starting DMX address, use the **<UP/DOWN>** buttons to select from *d00 1- d5 12*. Then press the **<ENTER>** button to confirm.
2. To set the fixture to run in 8-channel DMX mode, use the **<MENU>** button to navigate to *ADD 1*, then press **<ENTER>**. To choose a different starting DMX address, use the **<UP/DOWN>** buttons to select from *ADD 1- AS 12*. Then press the **<ENTER>** button to confirm.

Master/Slave Mode (Auto & Sound Active Modes):

Allows you to link up to 32 units together without a controller.

- 1.) Use standard DMX cables to daisy chain your units together via the DMX connector on the rear of the units. It may be necessary to use a terminator at the last fixture.
- 2.) To set one or more fixtures to act as slave units, use the **<UP/DOWN>** buttons to reach *SLAVE* in the menu on the slave units, then push **<ENTER>**. These units will now react in the same as the master fixture.
- 3.) Then on the master fixture, use the **<UP/DOWN>** buttons to reach:

| | | | | |
|--------------|---------------|------|----------------------|------------------------|
| Sound Active | <i>SOUn</i> | then | <ENTER> | to confirm. |
| Auto Mode | <i>dE00</i> | then | <ENTER> | to confirm. |
| Fade Mode | <i>FF ---</i> | then | <i>FF0 1- FF99</i> | <ENTER> . |
| Jump Mode | <i>CC ---</i> | then | <i>CC0 1- CC99</i> | <ENTER> . |

Set custom intensity levels in M/S & Standalone Modes:

Using this function, you can adjust the intensity of LED segments 1, 2, 3 and 4 by adjusting their values from 0-255. You can also use this function to adjust the overall maximum intensity of the fixture in any mode.

Please note that modifying the values in this step will affect ALL modes, therefore we recommend resetting all levels to their highest value (255) after using this mode.

- 1.) Use the **<MENU>** button to navigate to *r255, G255, b255, or u255* then press **<ENTER>**. Then to set different intensity levels for any of these use the **<UP/DOWN>** buttons to select from *00 1-5 12* (0% <--> 100%). Then press the **<ENTER>** button to confirm.

5. APPENDIX

Keeping Your Puck CSI™ Xtreme As Good As New

The fixture you've received is a rugged, tough piece of pro lighting equipment, and as long as you take care of it, it will take care of you. That said, like anything, you'll need to take care of it if you want it to operate as designed. You should absolutely keep the fixture clean, especially if you are using it in an environment with a lot of dust, fog, haze, wild animals, wild teenagers or spilled drinks.

Cleaning the optics routinely with a suitable glass cleaner will greatly improve the quality of light output. Keeping the fans free of dust and debris will keep the fixture running cool and prevent damage from overheating.

In transit, keep the fixtures in cases. You wouldn't throw a prized guitar, drumset, or other piece of expensive gear into a gear trailer without a case, and similarly, you shouldn't even think about doing it with your shiny new light fixtures.

Common sense and taking care of your fixtures will be the single biggest thing you can do to keep them running at peak performance and let you worry about designing a great light show, putting on a great concert, or maximizing your client's satisfaction and "wow factor." That's what it's all about, after all!

Returns (Gasp!)

We've taken a lot of precautions to make sure you never even have to worry about sending a defective unit back, or sending a unit in for service. But, like any complex piece of equipment designed and built by humans, once in a while, something doesn't go as planned. If you find yourself with a fixture that isn't behaving like a good little fixture should, you'll need to obtain a Return Authorization (RA).

Don't worry, this is easy. Just send an email to support@blizzardlighting.com, and we'll issue you an RA. Then, you'll need to send the unit to us using a trackable, pre-paid freight method. We suggest using USPS Priority or UPS. Make sure you carefully pack the fixture for transit, and whenever possible, use the original box & packing for shipping.

When returning your fixture for service, be sure to include the following:

- 1.) Your contact information (Name, Address, Phone Number, Email address).
- 2.) The RA# issued to you
- 3.) A brief description of the problem/symptoms.

We will, at our discretion, repair or replace the fixture. Please remember that any shipping damage which occurs in transit to us is the customer's responsibility, so pack it well!

Shipping Issues

Damage incurred in shipping is the responsibility of the shipper, and must be reported to the carrier immediately upon receipt of the items. Claims must be made within seven (7) days of receipt.

Tech Specs

| | |
|--------------------------------|--|
| Weight & Dimensions | |
| Length | 8.25 inches (210 mm) |
| Width | 3.875 inches (98.43 mm) |
| Height | 8.5 inches (215.9 mm) |
| Weight | 4.2 lbs (1.3 kg) |
| Power | |
| Operating Voltage | 110-230VAC, 50-60 Hertz |
| Power Consumption | 108W |
| Light Source | |
| LED | 36x 3w 390-410nm UV LEDs |
| Optical | |
| Beam Angle | 25 degrees, 29 degree field |
| Thermal | |
| Max. Operating Temp. | 104 degrees F (40 degrees C) ambient |
| Control | |
| Protocol | USITT DMX-512 |
| DMX Channels | 4 or 8 (User Selectable) |
| Input | 3-pin XLR Male |
| Output | 3-pin XLR Female |
| Other Operating Modes | Standalone, Master/Slave, Sound Active |
| Pimp Name | |
| Sugartastic Puck CSI Dogg | |
| Warranty | 2-year limited warranty, does not cover malfunction caused by damage to LED's. |

Troubleshooting

| Symptom | Solution |
|---|--|
| Fixture Auto-Shut Off | Check the fan in the fixture. If it is stopped or moving slower than normal, the unit may have shut itself off due to high heat. This is to protect the fixture from overheating. Clear the fan of obstructions, or return the unit for service. |
| Beam is Dim | Check optical system and clean excess dust/grime. Also ensure that the 220V/110V switch is in the correct position, if applicable. |
| No Light Output | Check to ensure fixture is operating under correct mode, IE sound active/ auto/DMX/Etc., if applicable. Contact service for more information. |
| Blown Fuse | Check AC cord and circuit for damage, verify that moving parts are not restricted and that unit's ventilation is not obstructed |
| No Response to Audio | Verify that the fixture is in "Sound Active" mode. Adjust Audio Sensitivity, If Applicable. |
| Fixture Not Responding / Responding Erratically | Make sure all connectors are seated properly and securely. Use Only DMX Cables. Install a Terminator. Check all cables for defects. |

If your problem isn't listed please contact support@blizzardlighting.com.



**Enjoy your product!
Our sincerest thanks for your purchase!
--The team @ Blizzard Lighting**