

COMMUNITY AMPLIFIED LOUDSPEAKER CONTROLLERS Installation & Operation Guide



MODELS

| | |
|-----------|------------|
| ALC-404D | ALC-404AN |
| ALC-1604D | ALC-1604AN |
| ALC-3202D | ALC-3202AN |

Packing List

The box contains the following:

- 1x ALC-3202 (D or AN model)
(Phoenix connectors plugged in)
- 1x Phoenix MC 1,5/4-ST-3,81 - 1803594 plug
- 3x Phoenix MC 1,5/6-ST-3,81 - 5447900 plug
- 1x Phoenix PC 5/4-STF1-7,62 - 177859 plug
- 3x IEC power cord
- 1x Safety guide

OR

- 1x ALC-404 or ALC-1604 (D or AN model)
(Phoenix connectors plugged in)
- 1x Phoenix MC 1,5/4-ST-3,81 - 1803594 plug
- 3x Phoenix MC 1,5/12-ST-3,81 - 1803675 plug
- 1x Phoenix PC 5/8-STF1-7,62 - 177891 plug
- 3x IEC power cord
- 1x Safety guide

In an effort to reduce the quantity of printed material while enhancing the quality of content, we have decided to adopt a new approach for the production of this quick guide. The safety and regulatory information is included in the box along with a QR code directing the installer/user to this Installation and Operation Guide pdf available on Biamp's website.







Vital information descriptions have been condensed in two pages, and all illustrations and tables follow. Each section's color bar (ex. ■■■) refers to the outlined area on front or rear panel of the ALC image and the corresponding information tables. Call-out bubbles ① Ⓐ guide you to specific elements of those sections.

Please take time to read and understand all warnings and safety instructions on the next few pages of this manual.

























ArmoníaPlus is a trademarked control software product from Powersoft S.p.A.

Additional important information regarding ArmoníaPlus software and networking setup is explained in this Cornerstone [article](#).

Common symbols and meanings

-  THE TRIANGLE WITH THE LIGHTNING BOLT IS USED TO ALERT THE USER TO THE RISK OF ELECTRIC SHOCK.
-  THE TRIANGLE WITH THE EXCLAMATION POINT IS USED TO ALERT THE USER TO IMPORTANT OPERATING OR MAINTENANCE INSTRUCTIONS.
-  THE CE-MARK INDICATES THE COMPLIANCE OF THE PRODUCT TO ALL THE APPLICABLE EUROPEAN DIRECTIVES
-  SYMBOL FOR EARTH/GROUND CONNECTION.
-  SYMBOL INDICATING THAT THE EQUIPMENT IS FOR INDOOR USE ONLY.
-  SYMBOL FOR CONFORMITY WITH DIRECTIVE 2012/19/EC OF THE EUROPEAN PARLIAMENT ON WASTE ELECTRICAL AND ELECTRONIC EQUIPMENT (WEEE).


Safety Warnings

-  OPERATING TEMPERATURE RANGE: 0°C TO +35°C - DERATING ABOVE 35°C.
-  STORAGE RELATIVE HUMIDITY RANGE: 10% TO 85% HUMIDITY (NON CONDENSING).
-  DO NOT USE THE UNIT AT ALTITUDES ABOVE 2000 M.
-  DO NOT USE THE UNIT IN TROPICAL ENVIRONMENT.
-  TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT ATTEMPT TO OPEN ANY PART OF THE UNIT. NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.
-  CONNECTION TO THE MAINS SHALL BE DONE ONLY BY A ELECTROTECHNICAL SKILLED PERSON ACCORDING THE NATIONAL REQUIREMENTS OF THE COUNTRIES WHERE THE UNIT IS SOLD.
-  DO NOT USE THIS ALC IF THE ELECTRICAL POWER CORD IS FRAYED OR BROKEN.
-  TO AVOID ELECTRICAL SHOCK, DO NOT TOUCH ANY EXPOSED SPEAKER WIRING WHILE THE AMPLIFIER IS OPERATING.
-  DO NOT SPILL WATER OR OTHER LIQUIDS INTO OR ON THE ALC.
-  THIS DEVICE MUST BE POWERED EXCLUSIVELY BY EARTH CONNECTED MAINS SOCKETS IN ELECTRICAL NETWORKS COMPLIANT TO THE IEC 364 OR SIMILAR RULES
-  DISCONNECT THE AC MAINS SOURCE BEFORE ATTEMPTING TO CLEAN ANY PART OF THE AMPLIFIER
-  BIAMP SUGGESTS PLUGGING THE AMPLIFIER TO A 16 A RATING, C OR D CURVE, 10 KA SECTIONING BREAKER.
-  OUTPUT TERMINALS ARE HAZARDOUS: WIRING CONNECTION TO THESE TERMINALS REQUIRES INSTALLATION BY AN INSTRUCTED PERSON AND THE USE OF READY MADE LEADS.
-  **CLASS 3 WIRING** PROPERLY FIT THE AC MAINS PLUG TO THE AMPLIFIER INLET. BEFORE POWERING THIS ALC, VERIFY THAT THE CORRECT VOLTAGE RATING IS BEING USED.
-  TAKE CARE TO LOCK THE OUTPUT TERMINAL BEFORE SWITCHING THE DEVICE ON.
-  VERIFY THAT YOUR MAINS CONNECTION IS CAPABLE OF SATISFYING THE POWER RATINGS OF THE DEVICE.
-  IT IS HIGHLY RECOMMENDED TO UNPLUG THE OUTPUT CONNECTORS BEFORE PROCEEDING WITH THE SELF CHECK PROCEDURE
-  NO OPEN FLAME SOURCES SUCH AS LIGHTED CANDLES SHOULD BE PLACED ON THE AMPLIFIER.
-  TO PREVENT INJURY, THIS APPARATUS MUST BE SECURELY RACK MOUNTED IN ACCORDANCE WITH THE INSTALLATION INSTRUCTIONS.
-  THIS EQUIPMENT SHALL BE MOUNTED AT A MAXIMUM HEIGHT OF 2 M
-  THE MANUFACTURER CANNOT BE HELD RESPONSIBLE FOR DAMAGES CAUSED TO PERSONS, THINGS OR DATA DUE TO AN IMPROPER OR MISSING GROUND CONNECTION.
-  IT IS ABSOLUTELY NECESSARY TO VERIFY THESE FUNDAMENTAL REQUIREMENTS OF SAFETY AND, IN CASE OF DOUBT, REQUIRE AN ACCURATE CHECK BY QUALIFIED PERSONNEL.
-  IT IS HIGHLY RECOMMENDED TO UNPLUG THE OUTPUT CONNECTORS BEFORE PROCEEDING WITH THE SELF CHECK PROCEDURE
-  THE TESTING SIGNALS MIGHT CAUSE LOUDSPEAKER IMPAIRMENTS.



This unit has been engineered and manufactured to ensure your personal safety. But **IMPROPER USE CAN RESULT IN POTENTIAL ELECTRICAL SHOCK OR FIRE HAZARD.**







In order not to defeat the safeguards incorporated into this product, observe the following basic rules for its installation, use and service. Please read these "Important Safeguards" carefully before use.

- Read these instructions.
- Keep these instructions.
- Heed all warnings.
- Follow all instructions.
- Do not use this equipment near water.
- Clean only with a dry cloth.
- Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
- Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus that produce heat.
- Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding-type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
- Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
- Only use attachments/accessories specified by the manufacturer.
- Use only with the rack, cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over. 
- Unplug this apparatus during lightning storms or when unused for long periods of time.
- Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
- The apparatus shall be connected to a MAINS socket outlet with a protective earth grounding connection
- Where the MAINS plug or an appropriate coupler is used as the disconnect device, the disconnect device shall remain readily operable.






Contact the authorized service center for ordinary and extraordinary maintenance.

IMPORTANT: Review all safety requirements and have qualified personnel verify as necessary.

Symboles et significations courants

-  LE TRIANGLE AVEC LE SYMBOLE D'UN ÉCLAIR EST UTILISÉ POUR ALERTER L'UTILISATEUR DU RISQUE DE CHOC ÉLECTRIQUE.
-  LE TRIANGLE AVEC LE POINT D'EXCLAMATION EST UTILISÉ POUR ALERTER L'UTILISATEUR SUR DES INSTRUCTIONS DE FONCTIONNEMENT OU D'ENTRETIEN IMPORTANTES.
-  LA MARQUE CE INDIQUE LA CONFORMITÉ AVEC LA BASSE TENSION ET LA COMPATIBILITÉ ÉLECTROMAGNÉTIQUE.
-  SYMBOLE POUR LA CONNEXION TERRE / MASSE.
-  SYMBOLE INDIQUANT QUE L'ÉQUIPEMENT EST DESTINÉ À UN USAGE INTÉRIEUR UNIQUEMENT.
-  SYMBOLE DE CONFORMITÉ AVEC LA DIRECTIVE 2012/19/CE DU PARLEMENT EUROPÉEN RELATIVE AUX DÉCHETS D'ÉQUIPEMENTS ÉLECTRIQUES ET ÉLECTRONIQUES (DEEE).

Avertissements de sécurité

-  PLAGE DE TEMPERATURE DE FONCTIONNEMENT : 0°C A +35°C - DECLASSÉMENT AU-DESSUS DE 35°C.
-  PLAGE D'HUMIDITÉ RELATIVE DE STOCKAGE : 10 % À 85 % D'HUMIDITÉ (SANS CONDENSATION).
-  NE PAS UTILISER PAS L'APPAREIL À DES ALTITUDES AU-DESSUS DE 2000 M.
-  NE PAS UTILISER L'APPAREIL DANS UN ENVIRONNEMENT TROPICAL.
-  POUR RÉDUIRE LE RISQUE DE CHOC ÉLECTRIQUE, NE PAS ESSAYER D'OUVRIER TOUTE PARTIE DE L'APPAREIL. AUCUNE PIÈCE RÉPARABLE PAR L'UTILISATEUR À L'INTÉRIEUR. RENVOYER L'ENTRETIEN AU PERSONNEL DE SERVICE QUALIFIÉ.
-  LE BRANCHEMENT AU SECTEUR NE SERA EFFECTUÉ QUE PAR UNE PERSONNE QUALIFIÉE DANS LE DOMAINE ÉLECTRO-TECHNIQUE SELON LES EXIGENCES NATIONALES DES PAYS OU L'APPAREIL EST VENDU.
-  N'UTILISER PAS CET ALC SI LE CORDON D'ALIMENTATION ÉLECTRIQUE EST EFFILOCHÉ OU BRISÉ.
-  POUR ÉVITER LES CHOC ÉLECTRIQUES, NE TOUCHER AUCUN CÂBLAGE D'ENCEINTE EXPOSÉ LORSQUE L'AMPLIFICATEUR FONCTIONNE.
-  NE PAS RENSERSE D'EAU OU D'AUTRES LIQUIDES DANS OU SUR L'ALC.
-  CET APPAREIL DOIT ÊTRE ALIMENTÉ EXCLUSIVEMENT PAR RACCORDS DE SECTEUR CONNECTÉS À LA TERRE DANS DES RÉSEAUX ÉLECTRIQUES CONFORMES AUX NORMES CEI 364 OU AUX RÈGLES SIMILAIRES
-  DÉCONNECTER LA SOURCE SECTEUR AV AVANT DE TENTER TOUT NETTOYAGE DE L'ALC
-  BIAMP SUGGÈRE DE CONNECTER LE ALC-3202D À UN DISJONCTEUR DE SECTIONNEMENT DE 16 A, COURBE C OU D,, À UN DISJONCTEUR DE 10 KA.
-  LES TERMINAUX DE SORTIE SONT DANGEREUX : LA CONNEXION DU CÂBLAGE À CES BORNES REQUIERT L'INSTALLATION PAR UNE PERSONNE FORMÉE ET L'UTILISATION DE FILS PRÊTS À L'EMPLOI.
-  **CLASS 3 WIRING** BRANCHEZ CORRECTEMENT LA FICHE SECTEUR CA SUR L'ENTRÉE DE L'AMPLIFICATEUR AVANT D'ALIMENTER CET ALC. VÉRIFIEZ QUE LA TENSION NOMINALE CORRECTE EST UTILISÉE.
-  PRENDRE SOIN DE VERROUILLER LA BORNE DE SORTIE AVANT DE METTRE L'APPAREIL EN MARCHÉ.
-  VÉRIFIEZ QUE VOTRE CONNEXION AU SECTEUR CA EST CAPABLE DE SATISFAIRE LA PUISSANCE NOMINALE DE L'APPAREIL.
-  IL EST FORTEMENT RECOMMANDÉ DE DÉBRANCHER LES CONNECTEURS DE SORTIE AVANT DE PROCÉDER À LA PROCÉDURE D'AUTO-VÉRIFICATION
-  AUCUNE SOURCE DE FLAMME NUE COMME DES BOUGIES ALLUMÉES NE DOIT ÊTRE PLACÉE SUR L'ALC.
-  POUR ÉVITER LES BLESSURES, CET APPAREIL DOIT ÊTRE FIXÉ SÉCURITAIREMENT DANS UN RACK CONFORMÉMENT AUX INSTRUCTIONS D'INSTALLATION.
-  CET ÉQUIPEMENT DOIT ÊTRE MONTÉ À UNE HAUTEUR MAXIMALE DE 2 M
-  LE FABRICANT NE PEUT ÊTRE TENU POUR RESPONSABLE DES DOMMAGES CAUSÉS AUX PERSONNES, OBJETS OU DONNÉES DUS À UNE CONNEXION À LA TERRE INCORRECTE OU MANQUANTE.
-  IL EST ABSOLUMENT NÉCESSAIRE DE VÉRIFIER CES EXIGENCES FONDAMENTALES DE SÉCURITÉ ET, EN CAS DE DOUTE, EXIGER UN CONTRÔLE PRÉCIS PAR UN PERSONNEL QUALIFIÉ.
-  IL EST FORTEMENT RECOMMANDÉ DE DÉBRANCHER LES CONNECTEURS DE SORTIE AVANT DE PROCÉDER À LA PROCÉDURE D'AUTO-VÉRIFICATION
-  LES SIGNAUX D'ESSAI PEUVENT CAUSER DES DÉFAILLANCES AUX HAUT-PARLEURS.



Cet appareil a été conçu et fabriqué pour assurer votre sécurité personnelle. Mais UNE UTILISATION INCORRECTE PEUT ENTRAÎNER UN RISQUE D'ÉLECTROCUTION OU D'INCENDIE.

Respecter les règles de base suivantes pour son installation, utilisation et entretien, afin de ne pas compromettre les mesures de sécurité incorporées dans ce produit. Veuillez lire attentivement ces "Consignes de sécurité importantes" avant utilisation.

- Lire ces instructions.
- Conserver ces instructions.
- Tenir compte de tous les avertissements.
- Suivre toutes les instructions.
- Ne pas utiliser cet équipement près de l'eau.
- Nettoyer uniquement à l'aide d'un chiffon sec.
- Ne bloquer aucune bouche d'aération. Installer conformément aux instructions du fabricant.
- Ne pas installer à proximité de sources de chaleur telles que radiateurs, bouches de chaleur, poêles ou autres appareils produisant de la chaleur.
- Ne pas déjouer l'objectif de sécurité de la fiche polarisée ou mise à la terre. Une fiche polarisée possède deux lames dont l'une est plus large que l'autre. Une prise de terre a deux lames et une troisième broche de mise à la terre. La lame large ou la troisième broche sont fournies pour votre sécurité. Si la fiche fournie ne rentre pas dans votre prise, consulter un électricien pour le remplacement de la prise obsolète.
- Protéger le cordon d'alimentation contre tout piétinement ou pincement, en particulier au niveau des fiches, des prises de courant et du point de sortie de l'appareil.
- Utiliser uniquement les fixations/accessoires spécifiés par le fabricant.
- Utiliser uniquement avec le chariot, le support, le trépied, l'étrier ou la table spécifiée par le fabricant ou vendus avec l'appareil. Lorsqu'un chariot est utilisé, faire attention pendant le déplacement du bloc chariot/appareil pour éviter les blessures causées par un renversement.
- Débrancher cet appareil pendant les orages ou lorsqu'il n'est pas utilisé pendant de longues périodes.
- Confier toute réparation à un technicien qualifié. Un entretien est requis lorsque l'appareil a été endommagé de quelque façon que ce soit, par exemple un cordon d'alimentation ou une prise endommagée, du liquide qui a été renversé ou des objets qui sont tombés dans l'appareil, si l'appareil a été exposé à la pluie ou à l'humidité ou s'il est tombé.
- L'appareil doit être connecté à une prise SECTEUR dotée d'une mise à la terre de protection
- Lorsque la prise SECTEUR ou un coupleur approprié est utilisé comme dispositif de déconnexion, le dispositif de déconnexion doit rester facilement accessible.



Contactez le centre de service autorisé pour un entretien ordinaire et extraordinaire.

IMPORTANT : passez en revue toutes les exigences de sécurité et demandez à un personnel qualifié de vérifier si nécessaire.

EC Declaration of Conformity

Biamp Systems, LLC
9300 S.W. Gemini Drive
Beaverton, OR 97008
USA



We declare that under our sole responsibility the products:

Model Names:

| | |
|-----------|------------|
| ALC-404D | ALC-404AN |
| ALC-1604D | ALC-1604AN |
| ALC-3202D | ALC-3202AN |

Intended use: Professional Audio Amplifier

Are in conformity with the provisions of the following EC Directives, including all amendments, and with national legislation implementing these directives:

2014/35/EU Low Voltage Directive
2014/30/EU Electromagnetic Compatibility Directive
2011/65/EU RoHS Directive

The following harmonized standards are applied:

EN 55032:2012,
EN 55032:2012/AC:2013
EN 55035:2017
EN 61000-3-2:2014
EN 61000-3-3:2013
EN 61000-3-11:2000
EN 62368-1:2014
EN 62368-1:2014/AC:2015

Complies with:

CAN/CSA-C22.2 No. 62368-1:14
UL 62368-1 2nd Ed."

Regulatory Compliance Statements

Europe

If the time arises to dispose of your product, please recycle all possible components.

This symbol indicates that when the end-user wishes to discard this product, it must be sent to separate collection facilities for recovery and recycling. By separating this product from other household-type waste, the volume of waste sent to incinerators or land-fills will be reduced and natural resources will thus be conserved.



The Waste Electrical and Electronic Equipment Directive (WEEE Directive) aims to minimize the impact of electrical and electronic goods on the environment. Biamp comply with the Directive 2012/19/EU of the European Parliament on waste electrical and electronic equipment (WEEE) in order to reduce the amount of WEEE that is being disposed of in land-fill site. All of our products are marked with the WEEE symbol; this indicates that this product must NOT be disposed of with other waste. Instead it is the user's responsibility to dispose of their waste electrical and electronic equipment by handing it over to an approved reprocessor, or by returning it to Biamp for reprocessing. For more information about where you can send your waste equipment for recycling, please contact Biamp or one of your local distributors.

USA

FCC Supplier's Declaration of Conformity

Responsible Party:
Biamp Systems, LLC
9300 S.W. Gemini Drive
Beaverton, OR 97008 USA
biamp.com

FCC Compliance Statement

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions:

- 1) This device may not cause harmful interference, and
- 2) this device must accept any interference received, including interference that may cause undesired operation.

CAUTION: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to part 15 of the FCC Rules. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit
- Different from that to which the receiver is connected.

WARNING: This is a class A product. In a domestic environment this product may cause radio interference in which case the user may be required to take adequate measures

Canada

Canadian Caution

This device contains licence-exempt transmitter(s)/receiver(s) that comply with Innovation, Science and Economic Development Canada's licence-exempt RSS(s).

Operation is subject to the following two conditions:

- 1) This device may not cause interference.
- 2) This device must accept any interference, including interference that may cause undesired operation of the device.

WARNING: This is a class A product. In a domestic environment this product may cause radio interference in which case the user may be required to take adequate measures

L'émetteur/récepteur exempt de licence contenu dans le présent appareil est conforme aux CNR d'Innovation, Sciences et Développement économique Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes :

- 1) L'appareil ne doit pas produire de brouillage;
- 2) L'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

AVERTISSEMENT: Ce produit est un produit de classe A. Dans un environnement domestique, ce produit peut provoquer des interférences radio, auquel cas l'utilisateur peut être amené à prendre des mesures adéquates.

ICES-003 Class A Notice - Avis NMB-003, Classe A

This Class A digital apparatus complies with Canadian ICES-003. Cet appareil numérique de la classe A est conforme à la norme NMB-003 du Canada.

Radiation Exposure Statement

This equipment complies with RSS-102 radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator & your body.

Énoncé d'Exposition à la Radiation Ic

L'appareillage répond aux limites de la norme RSS-102 sur l'exposition aux radiations établies pour un environnement non-contrôlé. Il devrait être installé et fonctionner à une distance minimale de 20 cm entre l'antenne et votre corps.

Preliminary operations

Location

Install your Biamp Amplified Loudspeaker Controller (ALC) in well ventilated rack cabinets.

Secure both front and rear brackets to the rack.

Connect the AC Mains connector to a circuit breaker.

Install the ALC far from EMF emitting devices.

Avoid placing the ALC close to heat generating sources.

Cooling

The ventilation openings must not be impeded by any item, keep a distance of at least 19.7 in. (50 cm) from the front and rear ventilation openings of the ALC.

Biamp ALCs implement a forced-air cooling system to maintain constant operating temperatures. Air enters from the front panel, exiting at the back of the unit.

The cooling system features variable-speed DC fans controlled by the heat sink mounted sensors. This ensures that fan noise and internal dust accumulation are kept to a minimum.

In the rare event of overheating, sensing circuits shut down all channels until the ALC cools down to a safe operating temperature. Normal operation is resumed automatically without the need for user intervention.

ALCs can be stacked one on top of the other, leave one rack unit empty every four to guarantee adequate air flow.

Cleaning

Use a dry cloth for cleaning the chassis and the front panel. Air filter cleaning should be scheduled in accordance with the dust levels in the ALC's operating environment.

In order to clean the vent filters remove the front cover by firmly gripping the outermost black panels and pull them outwards

Use compressed air to remove the dust from filters, or wash them with clean water (let the filter dry thoroughly before reinstalling them).

AC Mains Supply

ALCs implement an universal switching mode power supply with power factor correction operating in the range from 100 VAC up to 240 VAC $\pm 10\%$.

AC mains connection is in the rear panel through the IEC C20 inlet, the approved power cord is provided.

Switching the ALC On and Off

Once properly powered (power cord inserted, sectioning breaker closed), the system can be either ON or in STANDBY mode depending on its state at latest power off.

In order to toggle the ALC between ON and STANDBY press and hold the power button for 3 seconds. Please consider that the operating condition can be modified by the REMOTE ON and REMOTE OFF configuration.

Energy Save

The Smart Rails Management technology implemented in the power supply unit allows to reduce the power consumption when the input signal falls under a defined threshold.

When On, Energy Save is active on each channel independently.

If the signal is missing for more than 30 minutes on all channels, the auto standby is applied and the main PSU is turned off to further save energy (*Time out time is selectable via ArmoniaPlus*). Normal operation is resumed in a matter of milliseconds when an incoming signal is detected.

In order to activate the Energy Save feature, operate the NRG SAVE dip switch on the rear panel.

Breaker Save

This feature may be activated when the power grid is unable to provide enough current to continuously drive the loads, or when the number of ALCs connected to the same outlet is such that one can reach the critical power absorption of the line.

When activated, the Breaker Save halves the maximum continuous current absorption from the mains. This slightly reflects on the overall performance of the system, reducing the available output power.

In order to activate the Breaker Save feature, locate the BRK SAVE switch on the rear panel.

Remote On/Off

Remote ON/OFF is available through the dedicated terminals on the rear panel.

Both terminals respond to the differential voltage between the contacts: a voltage difference in the range $5V_{DC} - 24V_{DC}$ triggers the control. Any voltage exceeding $28V_{DC}$ may damage the input circuitry.

The couple of terminals act depending on the actual state of the ALC, in accordance with the following table.

| REMOTE ON | REMOTE OFF | ALC STATE |
|--------------------|--------------------|--|
| $V_{diff} \geq 5V$ | Any | Force Turn ON |
| $V_{diff} < 3V$ | $V_{diff} \geq 5V$ | Force Turn OFF |
| $V_{diff} < 3V$ | $V_{diff} < 3V$ | No Change (Returns to last state set by front panel switch) |

Gain selection

ALCs can operate with different gain applied to the input signal. This feature is designed to match the voltage of the input signal.

A proper combination of the position of two GAIN switches on the rear panel sets the operating gain of the amplifier

Connections

Signal Grounding

There is no ground switch or terminal on the ALCs. The unit's signal grounding system is automatic. In order to limit hum and/or interference entering the signal path, use balanced input connections.

In the interests of safety, the unit MUST always operate with electrical safety earth connected to the chassis via the dedicated Protective Earth \oplus wire.

Analog Audio Input Connections

Analog input connections are made via the Phoenix MC 1,5/6-ST-3,81 5447900 connector on the ALC-3202 (or via the Phoenix MC 1,5/12-ST-3,81 1803675 connector on the ALC-404 or ALC-1604).

Remote Level Adjustment

The level of each channel can be remotely adjusted by means of a linear 10 k Ω potentiometer connected to the input LEVEL connector. When the CH1 MSTR switch is in the OFF position the remote level potentiometers work independently on each separate channel.

When the CH1 MSTR switch is in the ON position the remote level potentiometer of channel 1 acts as a master level, controlling the volume of all channels.

The remote level controls are in series with the level adjustment knobs in the front panel.

Ethernet Connection

The port labeled Ethernet is designed to remotely control the ALC via an Ethernet connection through a personal computer and Powersoft ArmoníaPlus System Manager software.

Powersoft recommends the use of Ethernet Cat5 straight through patch cables with pin/pair assignments TIA/EIA-568-B, i.e. T568B.

Digital Audio Input Connection

ONLY AVAILABLE ON "D" MODELS. ALC "D" models accept two/four input streams from the Dante® connection through the Dante® port. Cabling must comply to TIA/EIA-568-B and adopt the T568B scheme pinout.

In order to implement a Dante® network, a computer running Dante® Controller have to be used. Dante® Controller is a software application that manages devices on the network. ALC-Ds are automatically discovered and displayed in Dante® Controller with the default identifier: **MODELNAME-SERIAL** (e.g.ALC-3202D-71520).

Output Connections

Output connections are made via the Phoenix PC 5/4-STF1-7,62 177859 port (or PC 5/8-STF1-7,62 177891 port ALC-404/1604).

Any mixed configuration of low and high impedance output loads can be made: in order to set the load configuration, each channel is provided with four DIP switches.

Hi-Z 70V/100V Operations

Any channel can drive 70V/100V (Hi-Z) distributed line loudspeakers. To connect any channel's output to a 70V/100V line, set the rear panel DIP switch corresponding to the channel.

When using Biamp ALC's with factory-authored loudspeaker presets, it is not necessary to use the built-in HPF (High Pass Filter) DIP switches on the rear of the amplifier. While these switches can select a HPF of 35Hz or 70Hz, each Biamp 70V / 100V loudspeaker preset already includes a HPF appropriate for the selected loudspeaker model.

Low-Z 2Ω Load Operation

The 2Ω switch allows activation of all output channels set to match the low impedance operating condition (i.e. in Low-Z configuration) optimizing the performance with very low loads, by limiting the maximum output voltage to 85 V_{peak} per channel.

When using ALC's with Biamp-authored loudspeaker presets this switch becomes redundant and can be ignored. Each loudspeaker preset already includes limiters preset to values that will limit voltages to safe operating levels.

If using an ALC without a Biamp-authored loudspeaker preset, use this switch as intended for 2Ω loads. *Never connect loads lower than 2Ω to any output channel on any ALC under any circumstances.*

Diagnostics - GPO - Alarms

ALCs provide a pair of paralleled general purpose output connections per channel: one Normally Open \ominus NO and one Normally Closed \oplus NC.

The connections are available on the back panel via the 6-pin (ALC-3202) or 12-pin (ALC-404/1604) Phoenix connectors.

When the amplifier is in normal operating condition the NO contacts are closed, while the NC contacts are open, and vice-versa.

These contacts are used to report potentially dangerous faults or generally unsafe operation conditions by toggling alarm switches relative to the following events, and any fault preventing the normal operation of an output channel:

No AC mains (i.e. system shutdown)

Thermal stress (the system temperature is too high and the thermal protection is engaged)

Short circuit in output wiring (either the loudspeaker or the line is in short)

ALC is in Standby

All ALCs feature further monitoring on pilot tone and output load through ArmoníaPlus System Manager.

Self Check

The self check procedure tests the ALC status and reports the user in case of failures.

After few minutes, at the end of the self check procedure, a combination of lit LED in the LED panel provides information about the amplifier status.

In order to exit the self check test and resume normal operations, press the self check push button once **6**.

If self check cannot be started because of a fault, the check LED will blink fast, while a reassuring slow blink is an indication of a completed self check procedure.

Pilot Tone Monitoring

The detection of a mismatch in the input pilot tone parameters (frequency and voltage level) can be used to trigger the backup policy and activate an alert through the general purpose output switch.

The output pilot tone detection relies on an external signal passing through the ALC or the internal post DSP pilot tone generator; in both cases any mismatch between the detected signal and the set thresholds triggers the general purpose output switches.

Networking

ALCs support star network topology via the Ethernet port and Dante® networking via the Dante® port.

IP Addressing

Factory default network settings are DHCP/AutoIP, in order for the ALC to self-configure when connected to an existing LAN or PC. Fixed IP policy can also be adopted and configured through ArmoníaPlus System Manager.

If a DHCP server is not active within the network, the ALC platform initiates a stateless address auto-configuration (i.e. Zero-configuration networking methodology). It self-assigns a local numeric network address (of the type 169.254.x.y – 172.31.** for the secondary network if present – with a subnet mask 255.255.0.0) and automatically distributes and resolves the host names of the networking devices.

Both ArmoníaPlus and the ALC must belong to the same subnet. If a DHCP server is present on the network and an ALC is in AUTO IP, networking may become unstable.

IMPORTANT: *As a rule of thumb, turn the DHCP server ON before connecting the ALCs.*

IP addressing of an ALC is established during the bootstrap: when the amplifier discovers a DHCP server on the network during the startup, it negotiates the networking parameters. If the ALC does not reveal a DHCP server on the network during the startup, it sets itself in AUTO IP mode.

ArmoníaPlus System Manager

ArmoníaPlus System Manager is the configuring interface that allows system setting and customization of the ALCs. ArmoníaPlus can be installed on a PC running Windows (7 and higher). Download ArmoníaPlus System Manager for free from the website: [here](#).

Input Selection and Backup Policy


The "D" models allow two input signal sources per channel: analog and Dante® streams, whereas the "AN" models have a single input to allow only analog signals. ArmoníaPlus System Manager software provides an interface to select the input source.

Dual input models only: ALCs implement a backup policy aimed to improve reliability against signal fault. By assigning a bus priority to the different input sources per channel, the system is able to automatically switch to a reliable input connection in case of signal drop or pilot tone mismatch.


Output Load Monitoring

Through the ArmoníaPlus System Manager software it is possible to set the thresholds on the load impedance, at given frequency, that trigger the general purpose output of any channel in ALCs.


Location

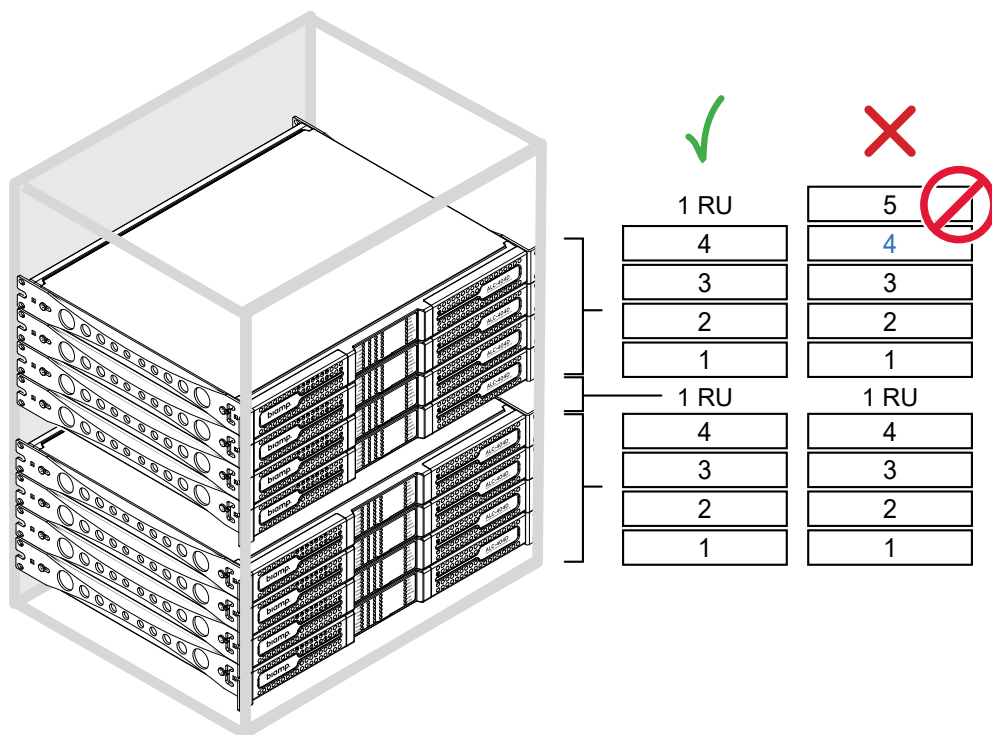


Cooling

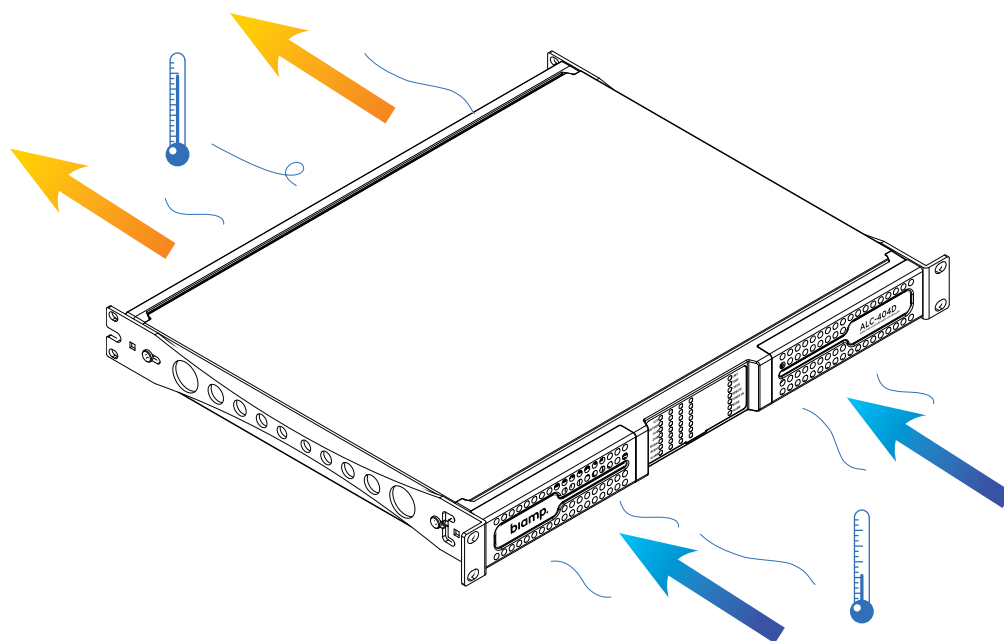

Exposing the Control Panel

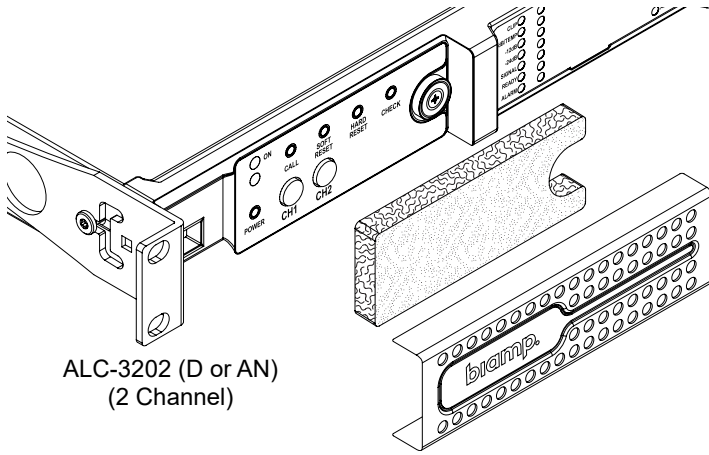


ALC-3202 (D or AN)
(2 Channel)



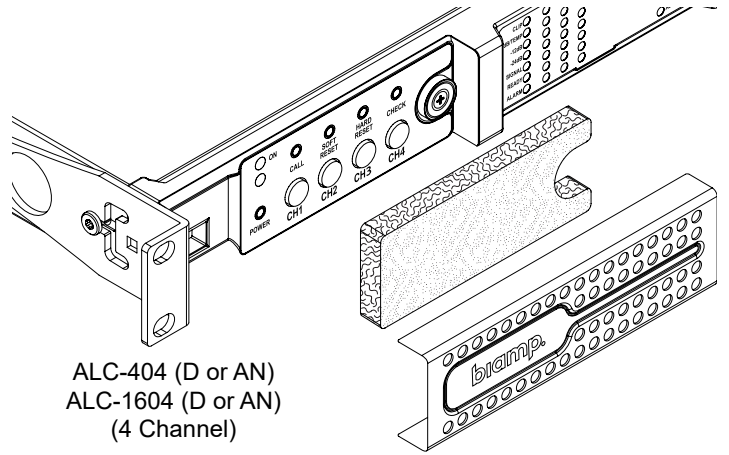


ALC-404 (D or AN)
ALC-1604 (D or AN)
(4 Channel)

Dimensions

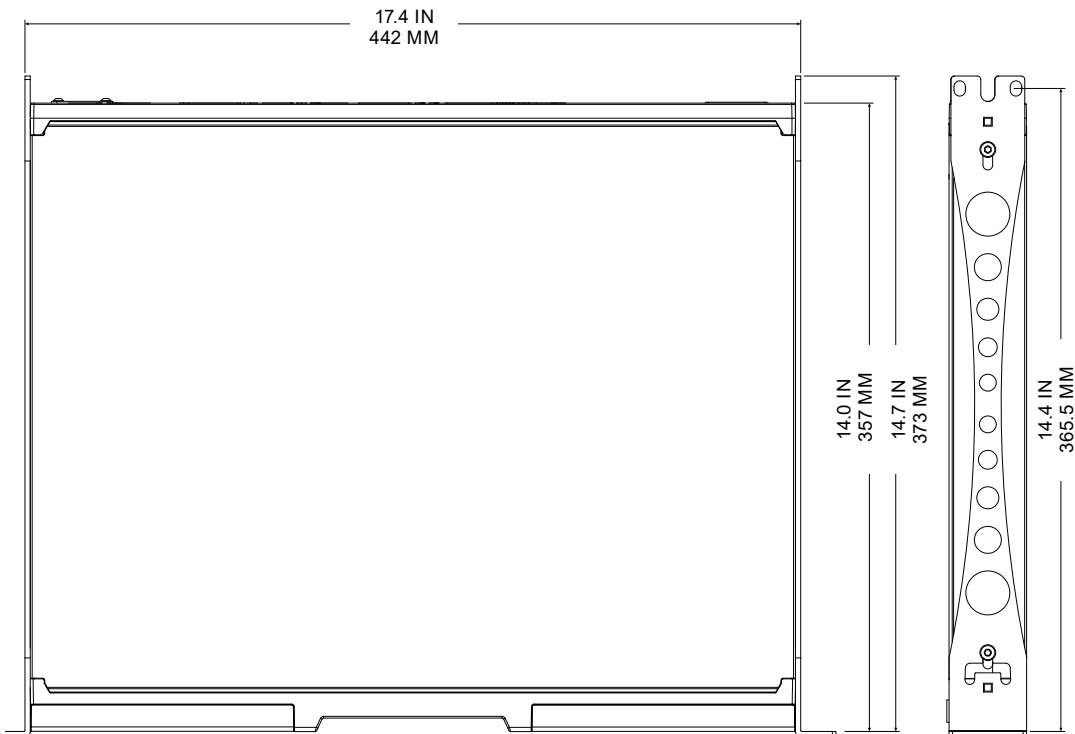

Front Panel

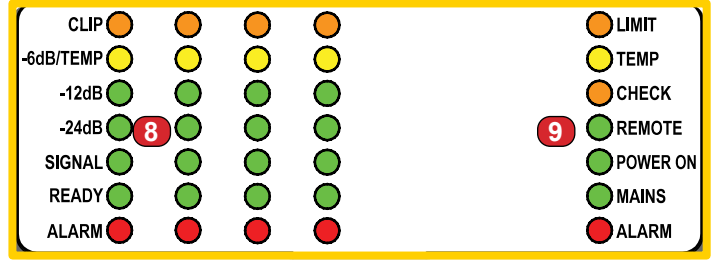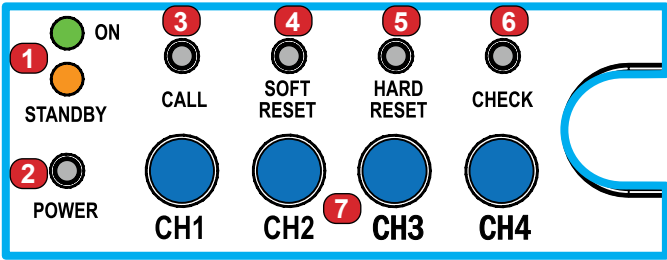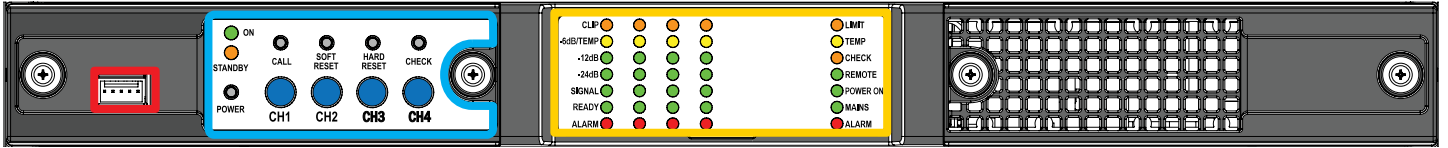

Control Panel

- 1** OPERATING MODE LEDS (ON/STANDBY)
- 2** POWER PUSHBUTTON
- 3** ARMONÍAPLUS CALLBACK PUSHBUTTON
- 4** SOFT RESET PUSHBUTTON
- 5** HARD RESET PUSHBUTTON
- 6** SELF CHECK PUSHBUTTON
- 7** CH1, CH2 ATTENUATORS (+ CH3, CH4 - ALC-404D, ALC-1604D)


LED Panel

- 8** CHANNEL STATUS LED METERS
- 9** SYSTEM STATUS LEDS

Serial Port

RESERVED FOR SERVICE OPERATIONS.

Rear Panel


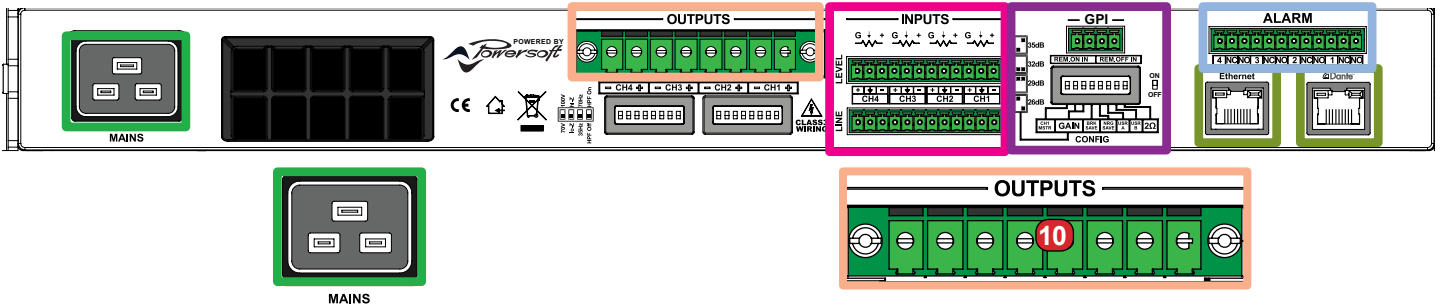


AC Mains Connector


IEC C19

Output section


10 OUTPUT CONNECTOR

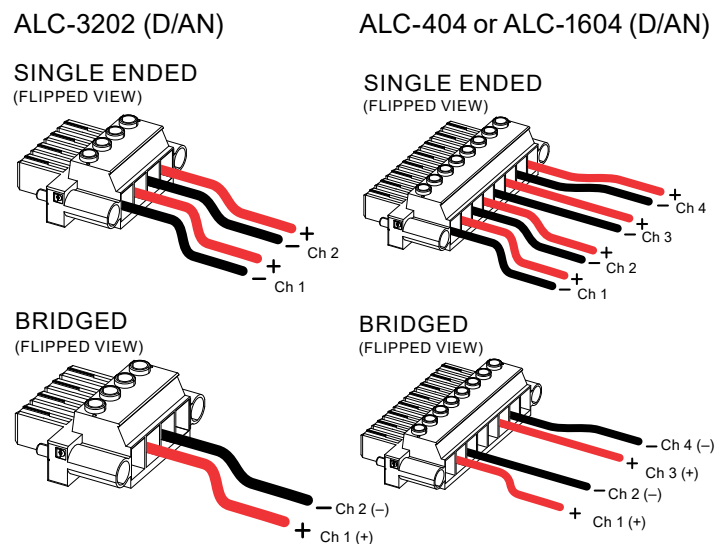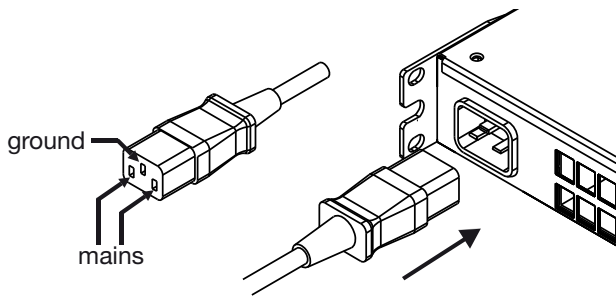

Rear Panel (continued)

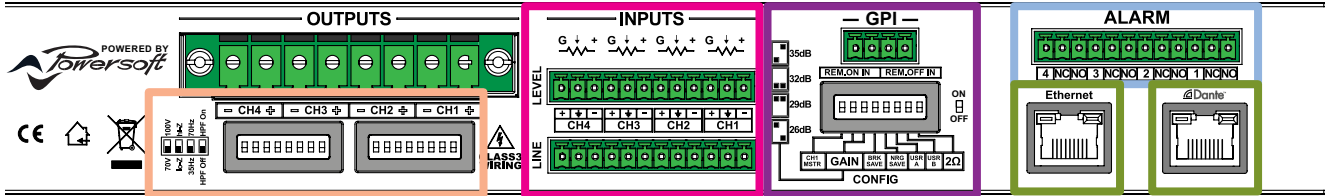



ALC "AN" models do not have a Dante Port

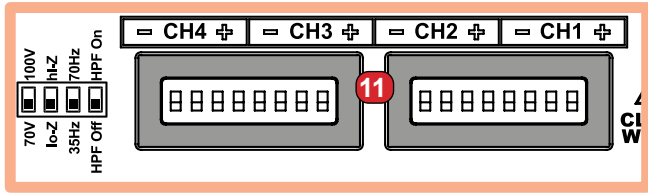

Output section

11 OUTPUT CONFIGURATION DIP SWITCHES

| | Low-Z | High-Z | 100V | 70V | HPF@35 Hz | HPF@70 Hz |
|----------|-------|--------|------|-----|-----------|-----------|
| A | ● | | | | | |
| B | | ● | ● | | | |
| C | | ● | ● | | ● | |
| D | | ● | ● | | | ● |
| E | | ● | | ● | | |
| F | | ● | | ● | ● | |
| G | | ● | | ● | | ● |

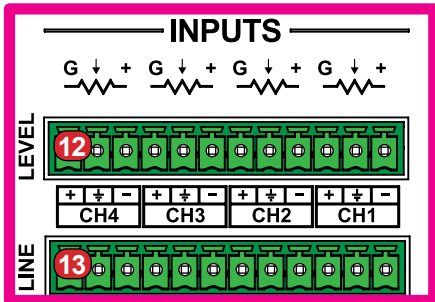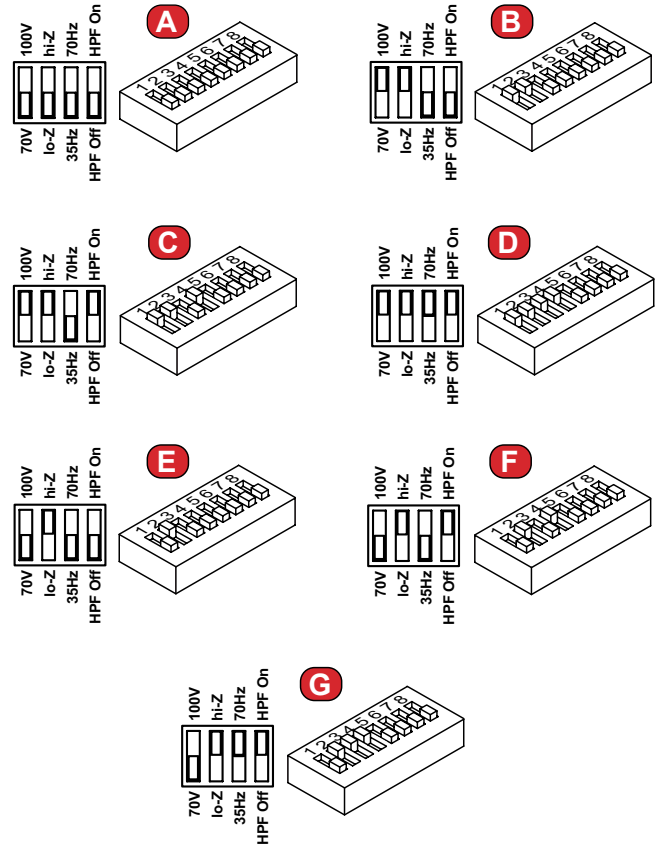


Input section

12 REMOTE LEVEL CONNECTOR


13 LINE INPUT CONNECTOR

ALC-404 or ALC-1604 (D/AN)

Input

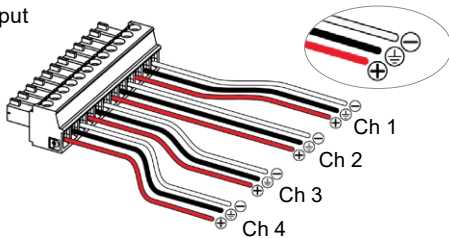


Remote Level

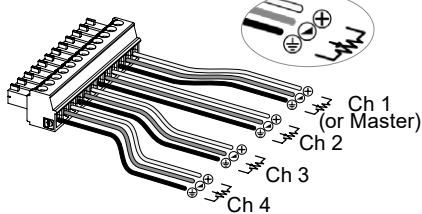


ALC-3202 (D/AN)


Input

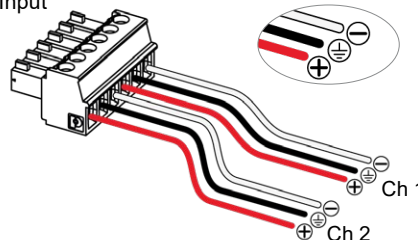


Remote Level

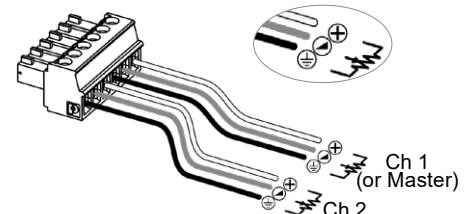

Rear Panel (continued)

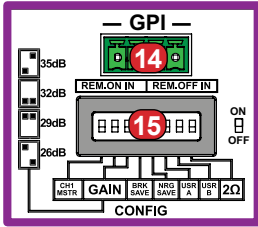

Remote On/Off

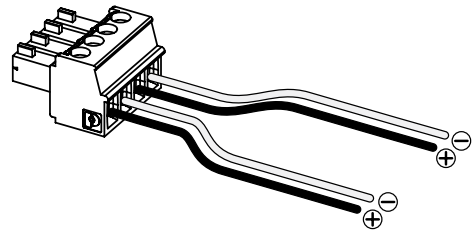


Remote On/Off-Configuration dip switches

- 14** REMOTE ON/OFF CONNECTOR (PHOENIX MC 1,5/4-ST-3,81 1803594)
- 15** SYSTEM CONFIGURATION DIP SWITCHES


| Input Gain Selection | | | | |
|----------------------|-----------|-----------|-----------|------------|
| 26 dB | 29 dB | 32 dB | 35 dB | CH1 Master |
| 2 ↑ - 3 ↓ | 2 ↑ - 3 ↑ | 2 ↓ - 3 ↓ | 2 ↓ - 3 ↑ | 1 ↑ |
| | | | | |
| Input Gain Selection | | | | |
| BRK Save | NRG Save | USR A | USR B | 2 Ω* |
| 4 ↑ | 5 ↑ | 6 ↑ | 7 ↑ | 8 ↑ |
| | | | | |

* NOTE: ALC-404 and ALC-1604 models only. (ALC3202 does not need a dip switch setting for 2 Ω operation).

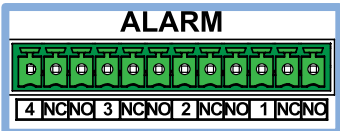


Alarm
GPO/ALARM CONNECTOR



ALC-3202 (D/AN)

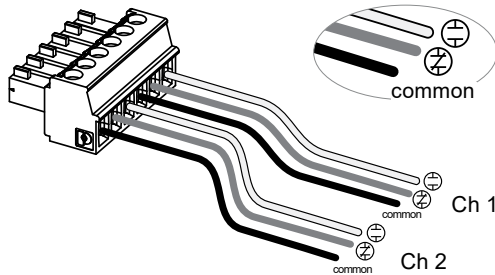

ALC-404 or ALC-1604 (D/AN)

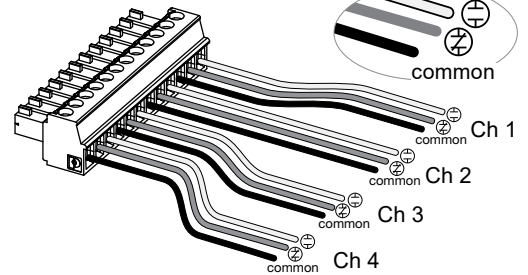

ALC "D" models

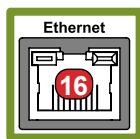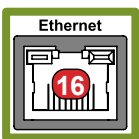

ALC "AN" models

Ethernet and Dante® ports

- 16** ETHERNET PORT (RJ45)
- 17** DANTE® PORT (RJ45) - ALC "D" MODELS ONLY
NO PORT - ALC "AN" MODELS

| RJ45 | | Color code (TIA/EIA-568-B) | Pin |
|------|--|----------------------------|-----|
| | | ORANGE / WHITE | 1 |
| | | ORANGE | 2 |
| | | GREEN / WHITE | 3 |
| | | BLUE | 4 |
| | | BLUE / WHITE | 5 |
| | | GREEN | 6 |
| | | BROWN / WHITE | 7 |
| | | BROWN | 8 |

LED Charts

LED Bars, signal metering 8

| Color | Signal Metering | Warnings | |
|--------|------------------------------|----------|---|
| | | Lighting | Description |
| ORANGE | Clipping ALC User Limiter | — | — |
| YELLOW | -6dB | SOLID ON | Thermal warning Thermal protection engaged |
| | | FLASHING | Auto Standby |
| GREEN | -12dB | — | — |
| GREEN | -24dB | — | — |
| GREEN | -60dB | SOLID ON | Signal presence |
| | | BLINKING | Channel muted |
| GREEN | — | SOLID ON | Channel ready |
| RED | — | SOLID ON | Channel fault ¹ |

¹ Red LED lights on in case of any kind of channel fault that prevents the normal channel operating.

| Lighting | Timings | Description |
|----------|-------------------------|-------------|
| FLASHING | 100 ms ON 900 ms OFF | |
| BLINKING | 500 ms ON 500 ms OFF | |

LED Bar, system status 9

| Color | Name | Warnings | |
|--------|----------|---------------|--|
| | | Lighting | Description |
| ORANGE | LIMIT | FLASHING | Breaker Save Enabled |
| | | SOLID ON | Breaker Save limiting power draw |
| YELLOW | TEMP | SOLID ON | Thermal warning Thermal protection engaged |
| ORANGE | CHECK | SOLID ON | System self checking |
| | | BLINKING | Self check completed |
| | | FAST BLINKING | Self Check Unavailable |
| GREEN | REMOTE | SOLID ON | Connected to ArmoniaPlus |
| | | OFF | Not connected to ArmoniaPlus |
| GREEN | POWER ON | SOLID ON | System ready |
| | | OFF | System off |
| GREEN | MAINS | SOLID ON | AC mains voltage within the operating range |
| | | OFF | Undervoltage |
| | | FLASHING | Over/Undervoltage Warning |
| | | FAST BLINKING | Overvoltage Mains FUSES blown |
| RED | ALARM | SOLID ON | PSU fault ¹ OR Critical Faults |

¹ Red LED lights on in case of any kind of PSU fault that prevents normal operating.

| Lighting | Timings | Description |
|---------------|-------------------------|-------------|
| FLASHING | 100 ms ON 400 ms OFF | |
| FAST BLINKING | 100 ms ON 100 ms OFF | |
| BLINKING | 500 ms ON 500 ms OFF | |

Operating mode LEDs 1

| Color | Name | Operating mode | |
|--------|--------------|----------------|----------|
| | | Standby | Power On |
| GREEN | POWER ON | — | SOLID ON |
| ORANGE | STANDBY | SOLID ON | — |
| ORANGE | AUTO STANDBY | BLINKING | — |
| ORANGE | ERROR CODE | BLINK COUNTER | — |

Control Panel

| Label | Label | Type | Action | Description |
|-------|-------------------------|---------------|----------------------------|---|
| 2 | POWER | Pushbutton | keep pressed for 3 seconds | Toggle system ready / standby mode |
| 3 | CALL | Pushbutton | press | Highlight the ALC in the ArmoniaPlus workspace |
| 4 | SOFT RESET ¹ | Pushbutton | keep pressed for 3 seconds | Reset network parameters to factory default |
| 5 | HARD RESET ¹ | Pushbutton | keep pressed for 3 seconds | Reboot the system |
| 6 | CHECK | Pushbutton | keep pressed for 3 seconds | Start the self-checking procedure ³ |
| 7 | CH1 ² | Potentiometer | turn counter-clockwise | Attenuate the output level of the signal on channel 1 |
| | CH2 ² | Potentiometer | turn counter-clockwise | Attenuate the output level of the signal on channel 2 |

The push-buttons are disabled when connected to Armonia.

- Keep pressed both the SOFT RESET button and the HARD RESET button for at least 3 seconds to completely reset the ALC to its factory default configuration (any preset stored in the internal memory will be lost and replaced with a flat preset).
- The potentiometer is in series with the remote level control so it can be used to limit the output volume regardless of any remote adjustment.
- Press again to resume normal operations.

Self Check 6

| | |
|--|---|
| | SYSTEM OK. |
| | POWER SUPPLY FAULT |
| | AC MAINS VOLTAGE OUT OF RANGE (OVER/UNDER VOLTAGE) |
| | PSU TEMPERATURE OUT OF RANGE |
| | FAN ERROR |
| | CHANNEL# OUTPUT WAVEFORM NON-CONFORMITY |
| | CHANNEL# TEMPERATURE OUT OF RANGE |
| | CHANNEL# OUTPUT CURRENT MEASUREMENT NON-CONFORMITY ¹ |

¹ An 8Ω dummy load is needed to measure the output current. If the dummy load is not applied the system reports a fault.

Warranty and Assistance

Biamp guarantees its manufactured products to be free from defective components and factory workmanship for a period of time starting from the date of purchase printed on Biamp's (or any of its Authorized Dealer's) invoice to the end customer.

The standard warranty period is: 48 months for rack ALC units.

All warranty repairs and retrofits must be performed at Biamp facilities or at an Authorized Service Center at no cost for the purchaser. Warranty exclusion: Biamp's warranty does not cover product malfunctioning or failure caused by: misuse, abuse, repair work or alterations performed by non-authorized personnel, incorrect connections, exposure to harsh weather conditions, corrosive environments, mechanical damages (including shipping accidents), and normal wear and tear. Biamp will perform warranty services provided that the product is not damaged during transportation.

Return of Goods

Goods can be returned to Biamp only after they have been granted a Return Merchandise Authorization (RMA) number to be attached to the external packaging. Biamp (or its Authorized Service Center) has the right to refuse any returned good without a RMA number.

Repair or Replacement

Biamp reserves the right to repair or replace any defective goods covered under the product warranty at its sole discretion and as it deems best.

Cost and Responsibility of Transport

The purchaser (or end user/customer) is solely responsible for all transportation costs and risks associated with sending warranty covered goods to Biamp or its Authorized Service Center. Biamp will assume full responsibility and cover all costs incurred to send the goods back to the purchaser (or end user/customer).

Warranty

Assistance

All servicing and repairs for Biamp ALCs is handled by Powersoft Worldwide, but processing of warranty claims must be submitted to Biamp first. Please follow the instructions below in case of any difficulties.

There are no user-serviceable parts in the ALC unit. Refer to qualified technical personnel for servicing. If your ALC needs repair, contact Biamp's Technical Service Department.

- Take a note of each serial number of the units to be returned.
- Completely fill out the defect report form for each unit to be returned. Send the completed defect report form to support@biamp.com.

After having applied the aforementioned procedure, the Biamp service manager will work with Powersoft to determine the appropriate Service Center to which the ALCs must be shipped and the product's warranty status. Biamp will also provide RMA numbers for each unit.

Do not contact Powersoft directly for Biamp ALC servicing or repairs. All claims must be processed by Biamp.

Note: The ALCs and Community branded loudspeakers are part of the Biamp family of products. Please contact [Biamp support](mailto:support@biamp.com) with any questions or concerns.

In-Warranty Repairs

The service repair will be free of charge for the customer.

Out of Warranty Issues

- The service costs are calculated on the local rate applied from the service center and supervised by Biamp.
- The repair time has been set by Biamp and it's equally applied in all the authorized service center
- The unit will be evaluated by a technician, and the service center will provide the customer with the estimated costs.
- The repair will only take place once the customer has approved the estimated costs.
- The customer will pay the shipping charges once the repair has been completed, depending on the countries' standard procedures.

For any inquiries please email Biamp's Technical Service Department at support@biamp.com and include "ALC Inquiry" in the subject line.

Shipping the product for factory service

- Record each serial number of the units to be returned.
- Fill out completely the defect report form for each unit to be returned.
- Send the completed defect report form to the following email address: support@biamp.com.

After having applied the aforementioned procedure, you will receive an email from Biamp containing the Return Merchandise Authorization (RMA form) for each unit returned and a Service Center shipping address. All ALCs must be shipped to the specific Service Center address provided by Biamp, units shipped to any other location will be rejected.

Phone Support Hours

Monday - Friday 8.30 AM to 5.00 PM Eastern Time Zone
ph: +1 610 876-3400

Important Note: Mark or write the RMA# on the outside of the box in a prominent place. If the RMA# is not displayed on the outside of the box, the shipment will be rejected and sent back to the customer.

Dead on Arrival (D.O.A.) Procedure

In case of a "dead on arrival" D.O.A. product, we ask the customer to contact the Biamp Service Department, mentioning the serial number of the faulty unit.

The D.O.A. unit will be replaced completely without any additional charges!

Important Note: To avoid any warranty issue, do NOT tamper with, or operate the D.O.A. unit in any way. Biamp declines any D.O.A. product warranty service if the returned unit has been tampered with or misused by the customer.

CONTACT US

Email: support@biamp.com

Web: support.biamp.com

Warranty: biamp.com/legal/warranty-information

Compliance: compliance@biamp.com